

# Android Settop Interface



MODEL. N700

Made in Korea

## MAIN SPEC

### CLASSIFICATION

OS  
 CPU  
 MEMORY  
 USB  
 TELECOMMUNICATION  
 GPS  
 TOUCH  
 RGB  
 LVDS OUT  
 SPEAKER  
 FM TRANSMITTER  
 I/O  
 VOLTAGE  
 TEMPERATURE  
 SIZE  
 WEIGH

### SPECIFICATION


Android 5.0.2(Lollipop)  
 NXP4330Q - Cortex-A9 Quad Core @1.4Ghz Mali-400 MP4 GPU  
 1GB DDR3 @800Mhz  
 USB2.0 High Speed Port x 2  
 802.11 b/g/n Wifi  
 Ublox8  
 Resistor and Capacitive touch support both  
 800x480  
 Digital 800x480 LVDS OUT  
 2W  
 88.0Mhz~108.0Mhz  
 Sd card, USB IN / Stereo Audio  
 DC 12V ~ 24V  
 -25°C ~ 85°C  
 152x98x20 mm  
 250g

## ■ Spec of GPS


PARAMETER	UBLOX6	UBLOX7	UBLOX8
Receiver	GPS, QZSS , SBAS	GPS, QZSS , SBAS + GLONASS(select)	GPS, GLONASS, QZSS, SBAS+ BeiDou(select)
Reception path	sequential:1 RF path	sequential:1 RF path	concurrent:2RF path
Channels	50 CH	56 CH	72CH
Tracking Sensitivity	-160 dBm	-162 dBm	-167 dBm
Tracking Sensitivity Single GNSS		-158 dBm	-166 dBm
Hot Start TTFF	1s	1s	1s
Cold Start	29s	29s	26s
Maximum Navigation Update Rate	Up to 5 Hz	Up to 5 Hz	Up to 10 Hz
Horizontal Positio Accuracy	Autonomous<2.5m GPS + SBAS<2.0 m	Autonomous<2.5m GPS + SBAS<2.0 m	Autonomous<2.5m GPS + SBAS<2.0 m
Sustained Supply Current	39mA	28mA	25mA
Asisnow Autonomous validity	2days (GPS)	3days (GPS)	3days (GPS/QZSS,GLONASS)
Cerification	-	-	AEC-Q100 qualified

## ■ Dimension



152mm(W) x 98mm(H) x 20(D)

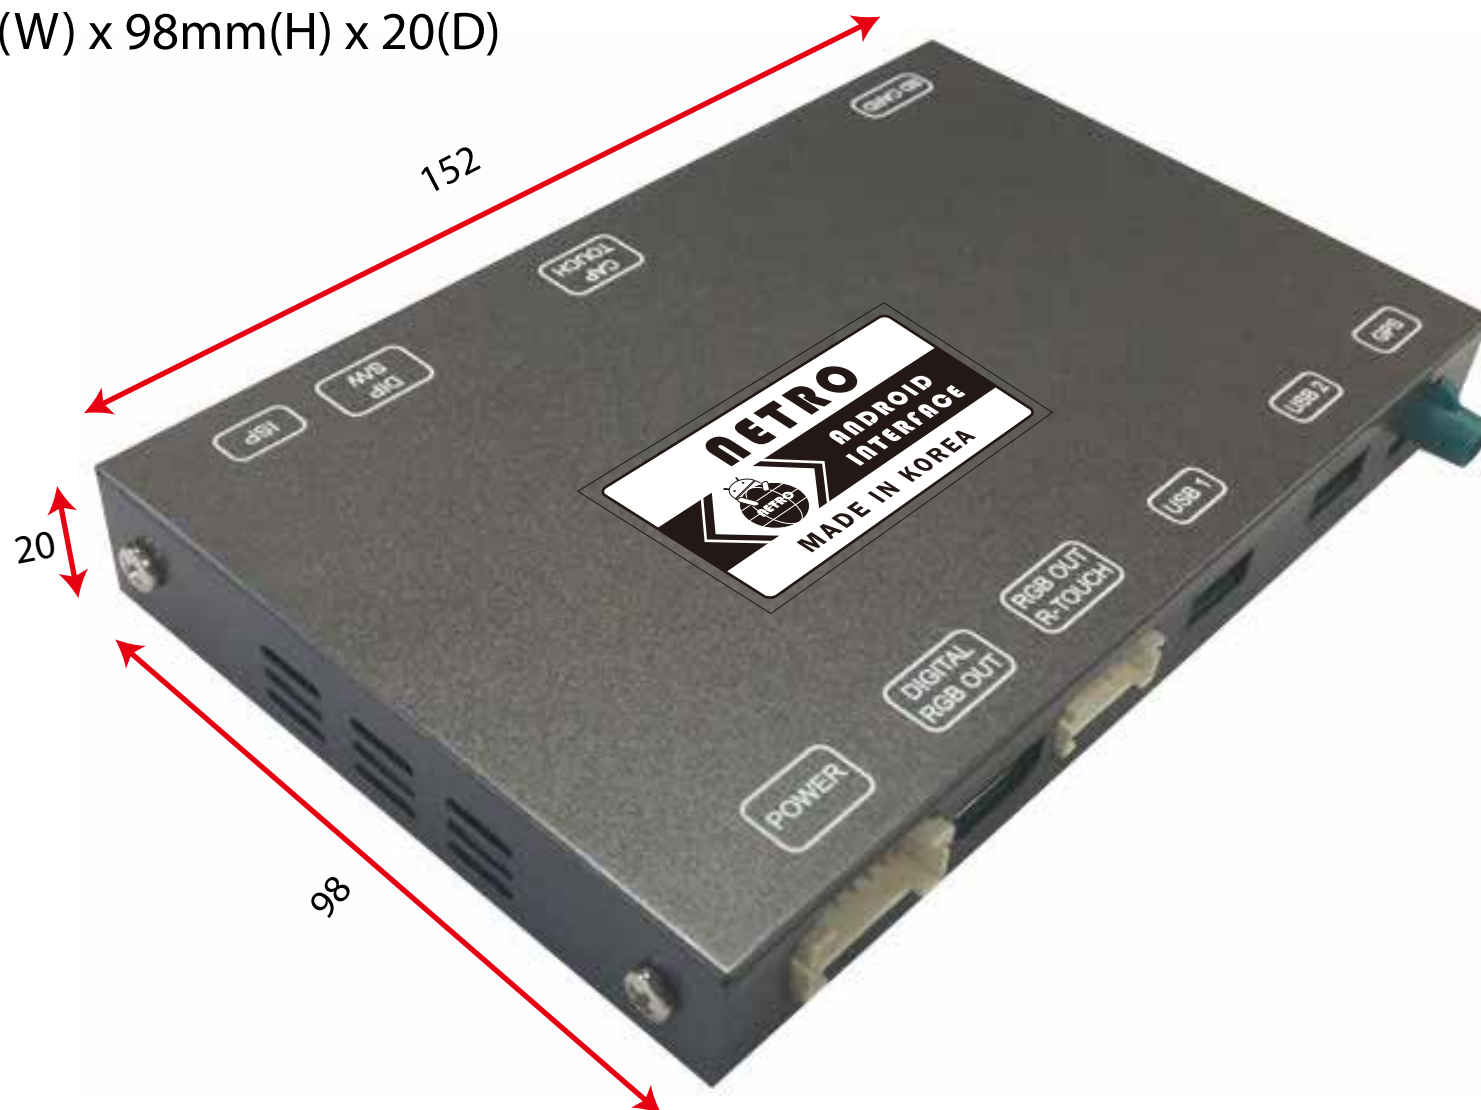


## External Appearances - 1

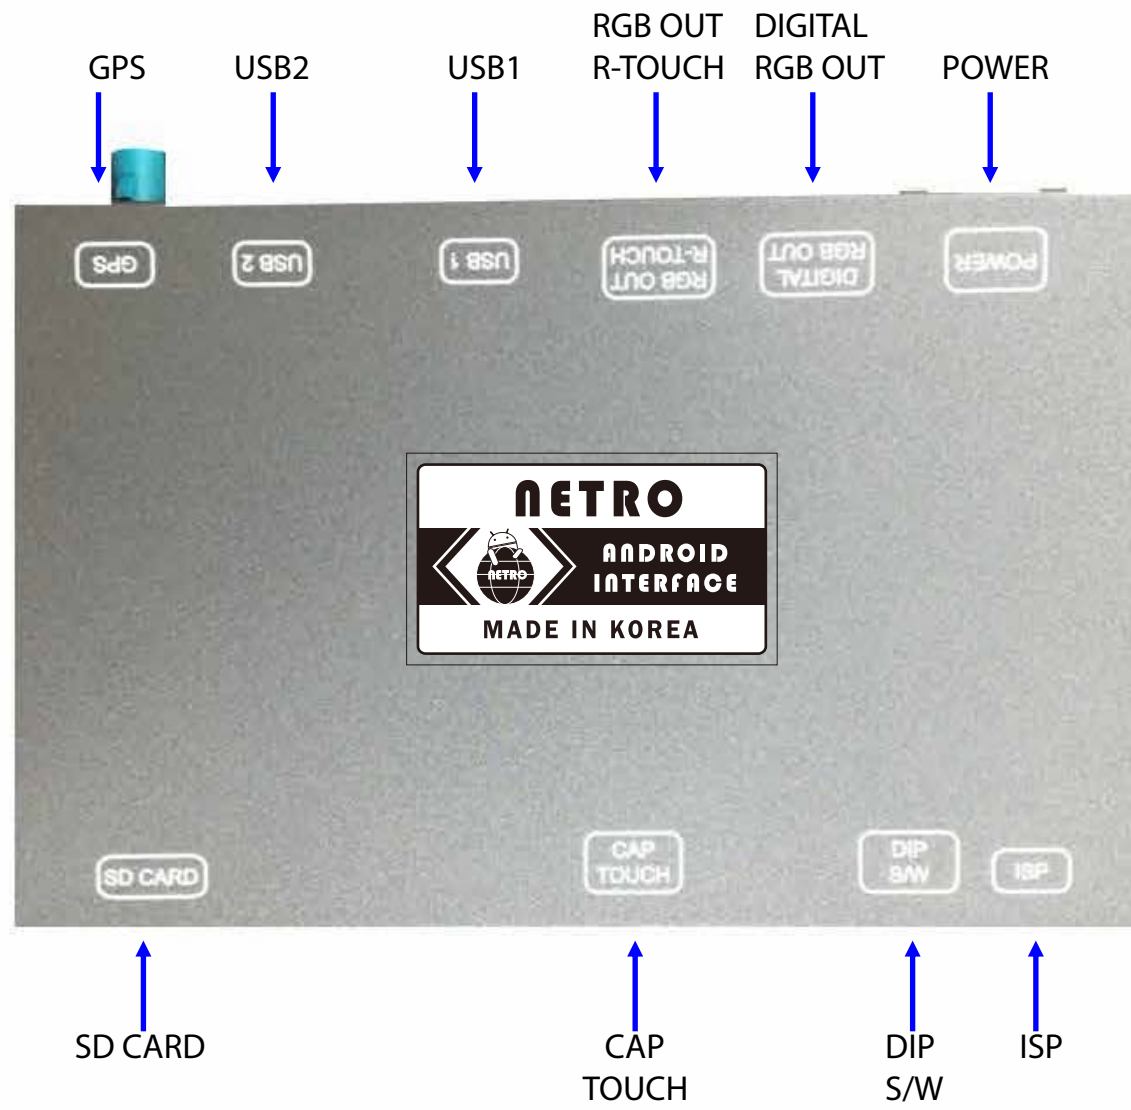


## ■ External Appearances - 2

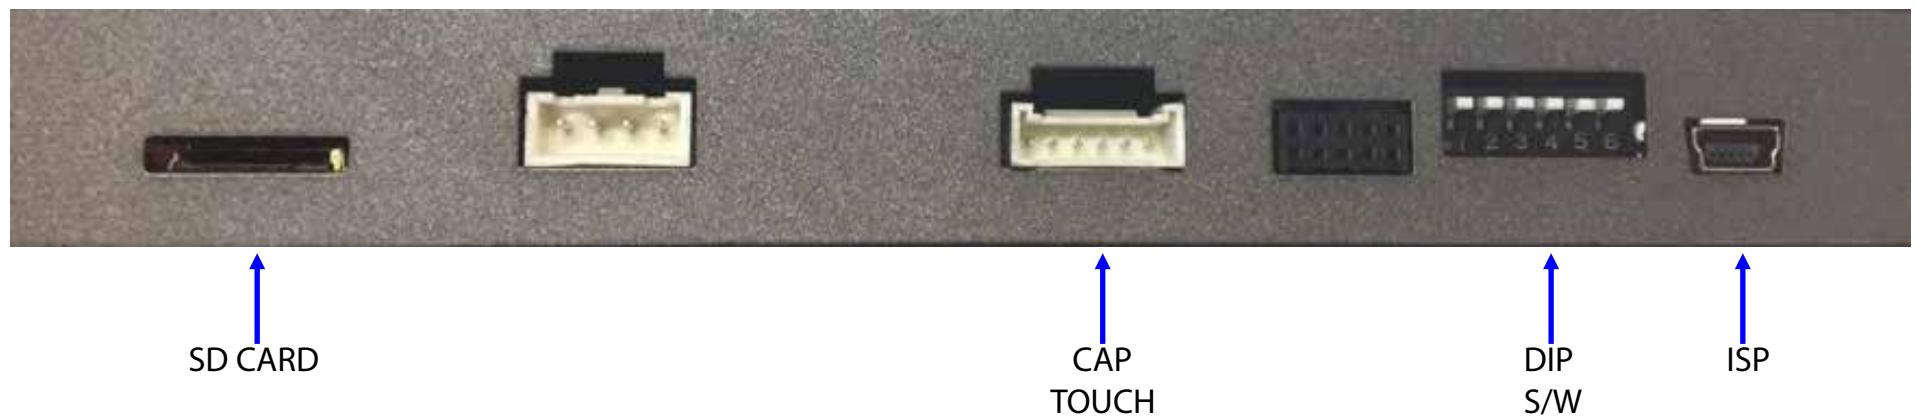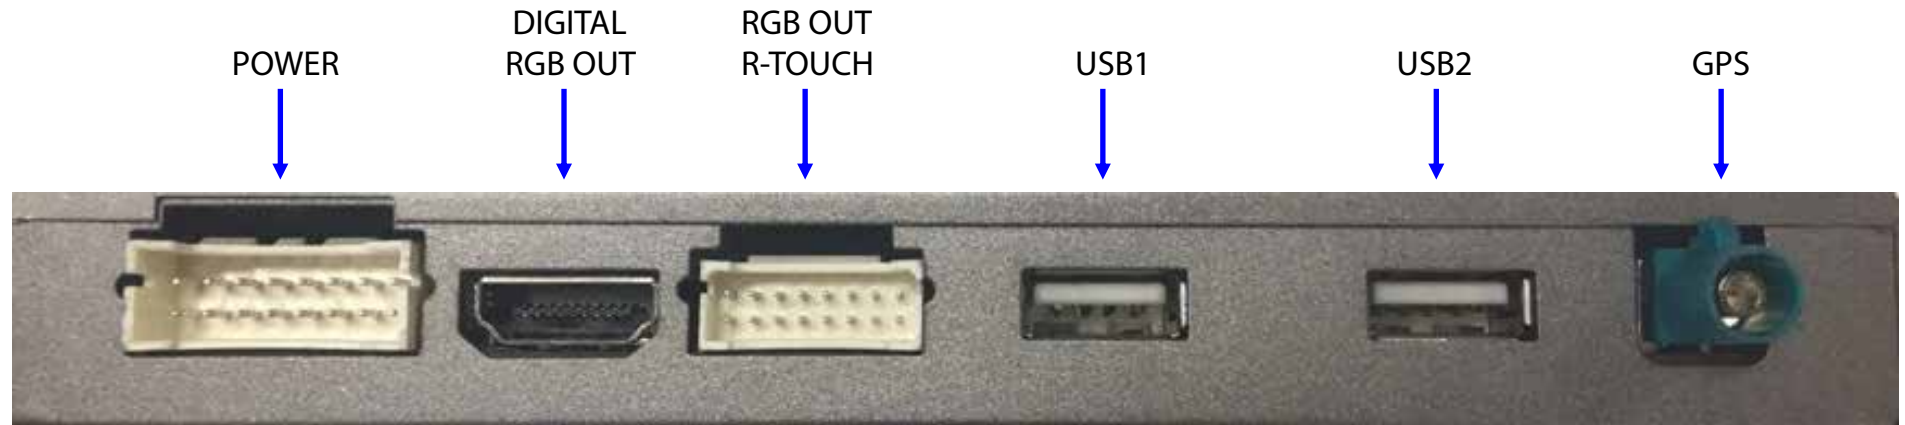

## Pin Assignment of Connector

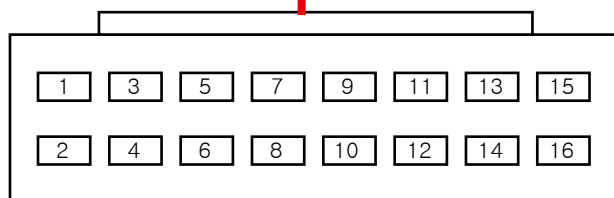

POWER CABLE

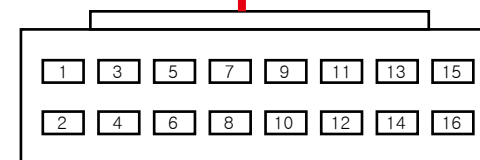

RGB & TOUCH CABLE

250-16

1 B+	3 GND	5	7	9 MIC +	11 AUDIO OUT R	13 SPEAKER OUT -	15 SPEAKER OUT +
2	4	6 ACC	8	10 MIC -	12 AUDIO OUT L	14 AUDIO GND	16 FMT ANTENNA

200-16

1 R	3 G	5 B	7 SYNL	9 TX +	11 TY -	13 TX -	15 TY -
2 GROUND	4 GROUND	6	8	10	12	14	16

## Components



MAIN UNIT



HDMI CABLE



RGB CABLE & RESISTIVE TOUCH CABLE



WIFI DONGLE




GPS ANTENNA



MICRO PHONE



SPEAKER

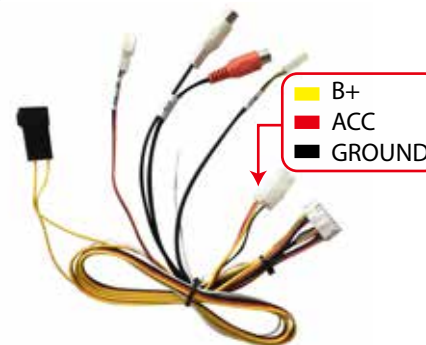

POWER CABLE

\* OPTION




CAPACITIVE TOUCH CABLE



## Dip Switch Setting

OFF : Upward / ON : Downward

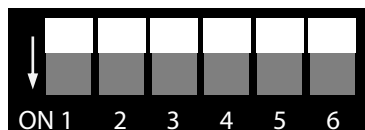

**SW2** 4PIN TOUCH

DIP SWITCH

OFF

ON

1

RGB SETTING

RGB SETTING

2

CAP TOUCH SELECTION

4PIN TOUCH(RESISTIVE TOUCH)

3

CAP TOUCH SELECTION

CAP TOUCH SELECTION

4

CAP TOUCH SELECTION

CAP TOUCH SELECTION

5

N C

TOUCH CALIBRATION

6

RGB SETTING

RGB SETTING

※ PLEASE REPOWER NETRO AFTER CHANGE DIP SWITCH ※

**SW5**

TOUCH CALIBRATION

DIP SWITCH 5 ON TO ENTER TOUCH CALIBRATION  
AND DIP SWITCH 5 OFF

<RGB SETTING>


DIP_SW1	SW6	
OFF	OFF	800X480
OFF	ON	400X240
ON	OFF	800X480
ON	ON	NC

<CAP TOUCH SELECT>

DIP_SW2	SW3	SW4	
OFF	OFF	OFF	UART TOUCH
ON	OFF	OFF	4P TOUCH(RESISTIVE TOUCH)
ON	ON	OFF	SN340
OFF	ON	OFF	GOODIX
OFF	OFF	ON	FOCAL TECH
ON	OFF	ON	ILTEK


## ■ Installation - 1

Uart touch with digital RGB output (LVDS) by HDMI cableT (LVDS) BY HDMI CABLE

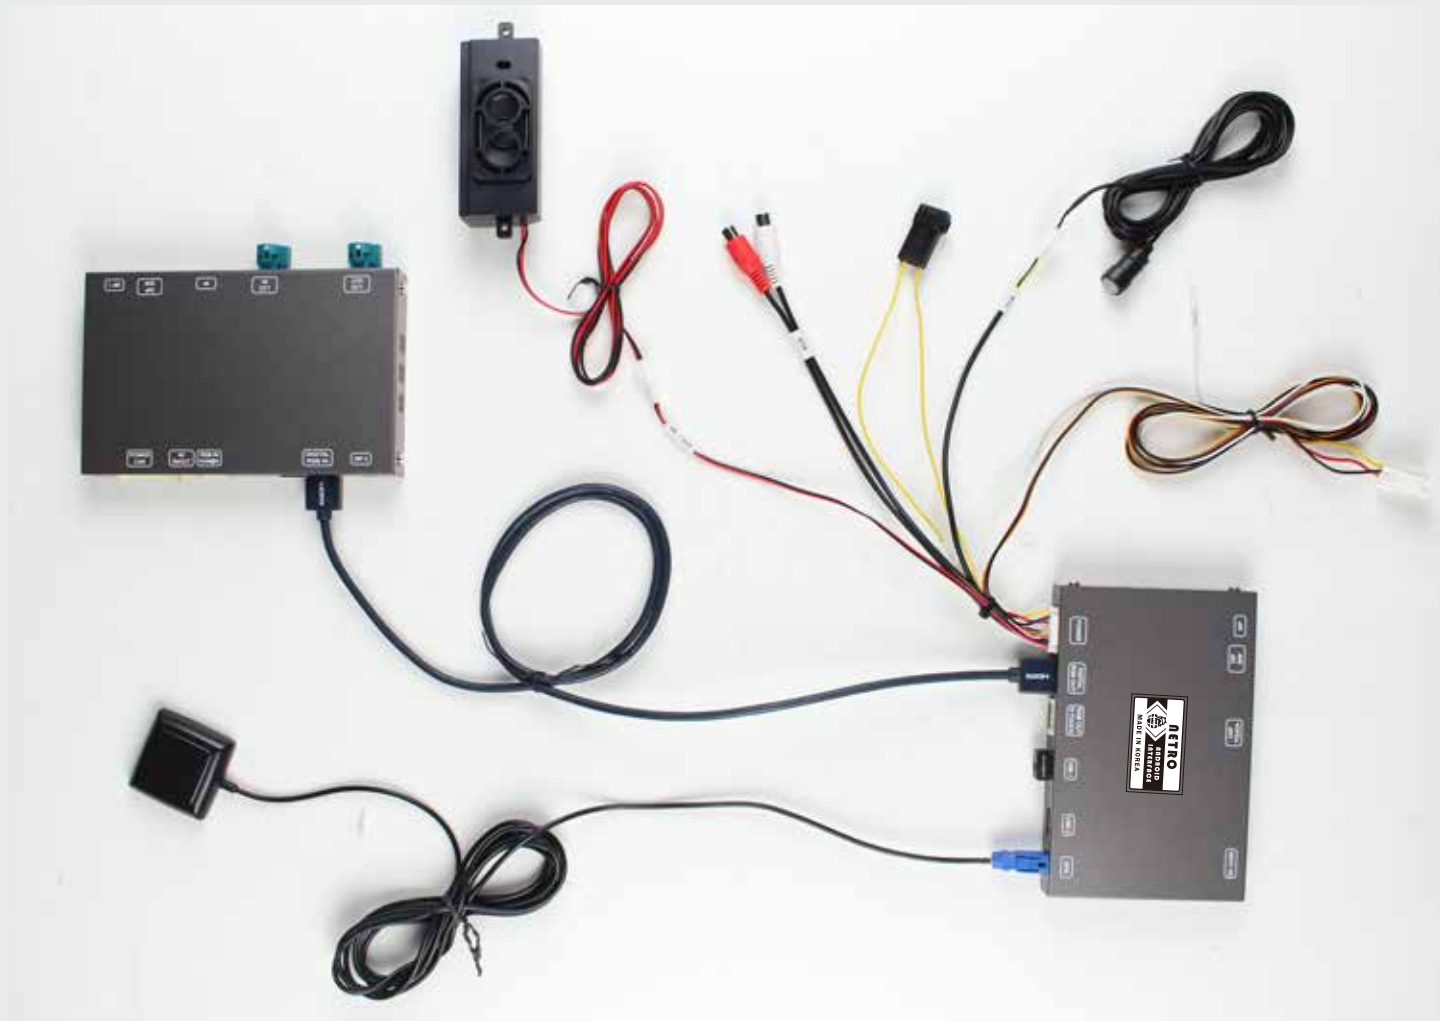


## ■ Installation - 2

Capacitive touch with digital RGB output (LVDS) by HDMI cable

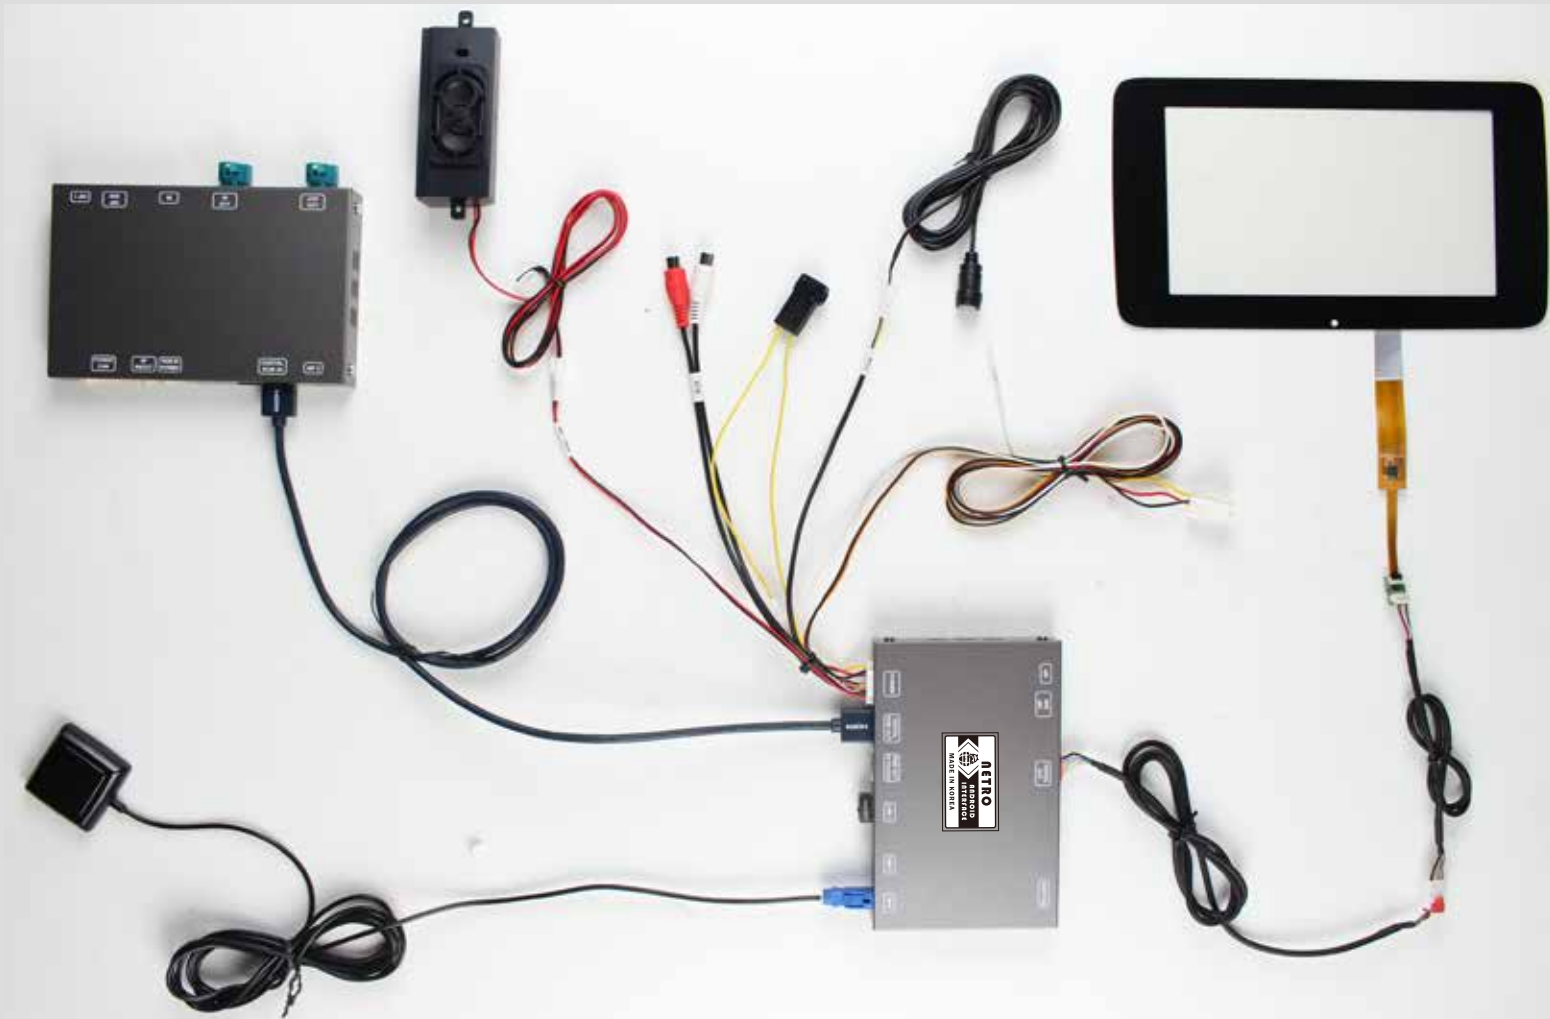


## ■ Installation

Resistive touch with digital RGB output (LVDS) by HDMI cable

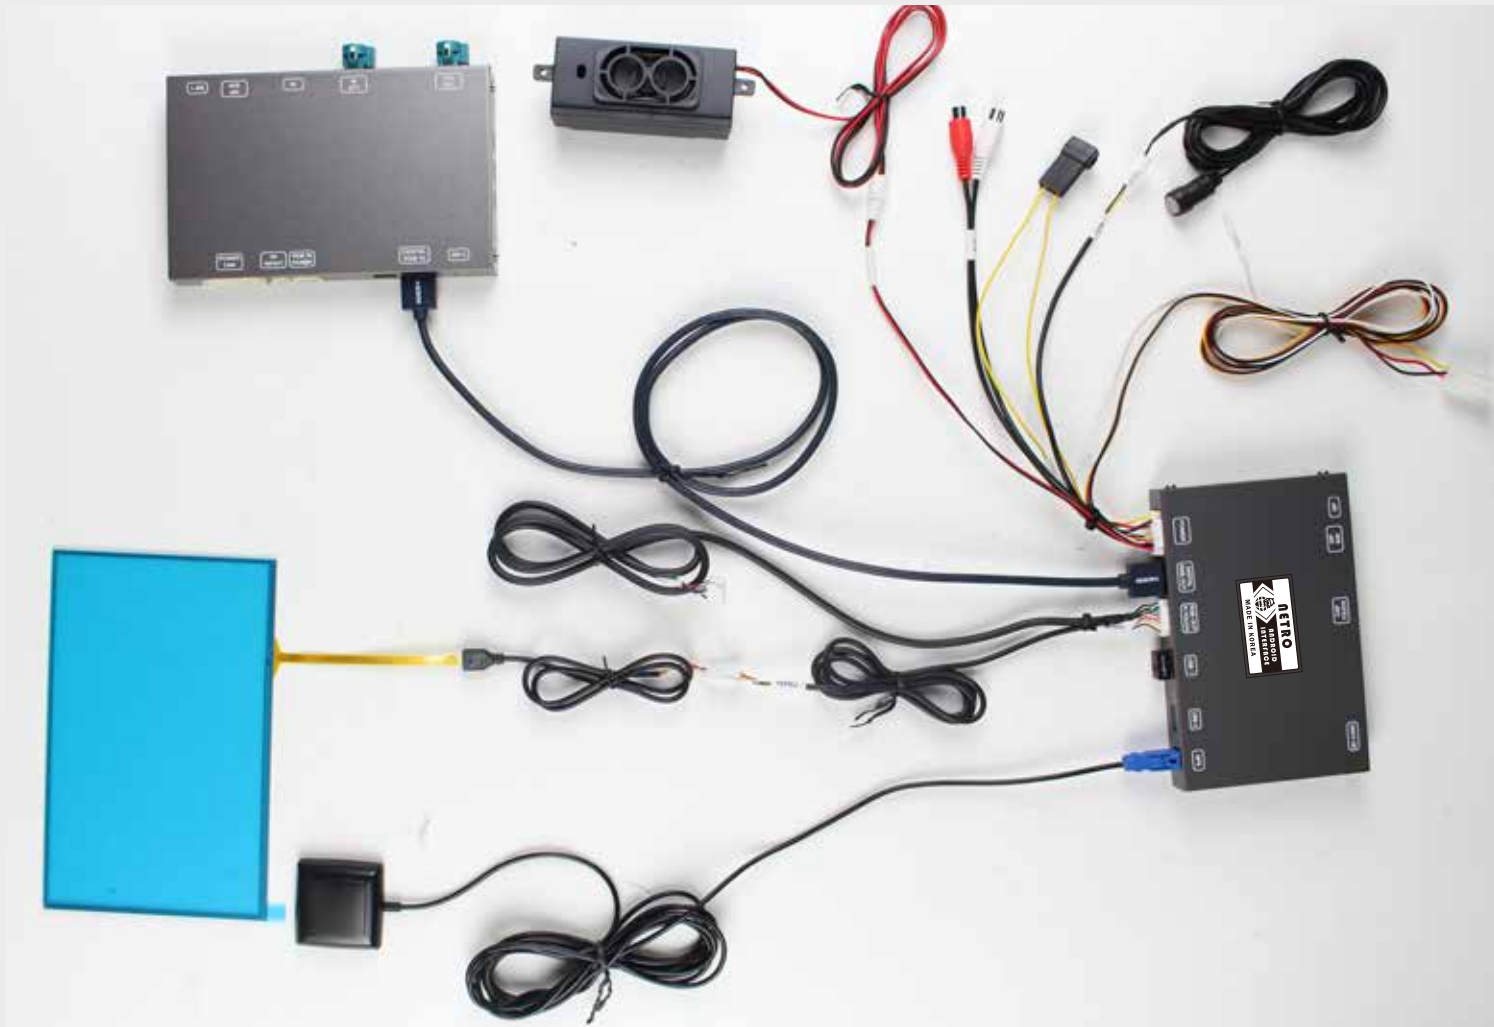


## ■ Installation

Capacitive touch with analog RGB output by RGB cable

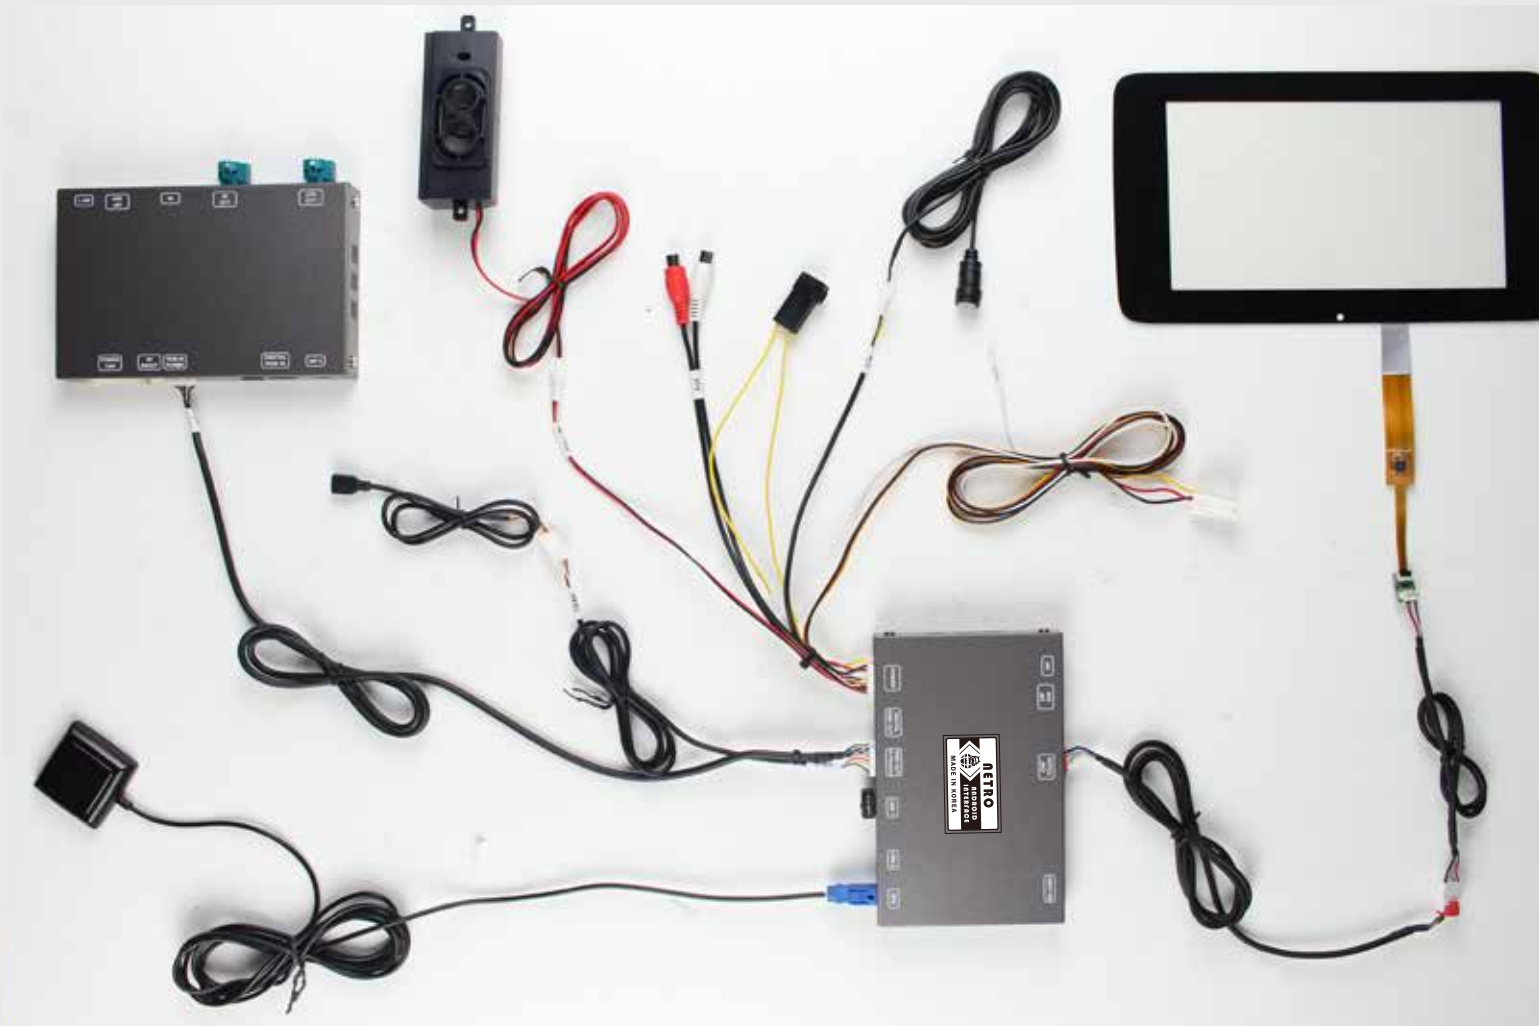

## ■ Installation

Resistive touch with analog RGB output by RGB cable

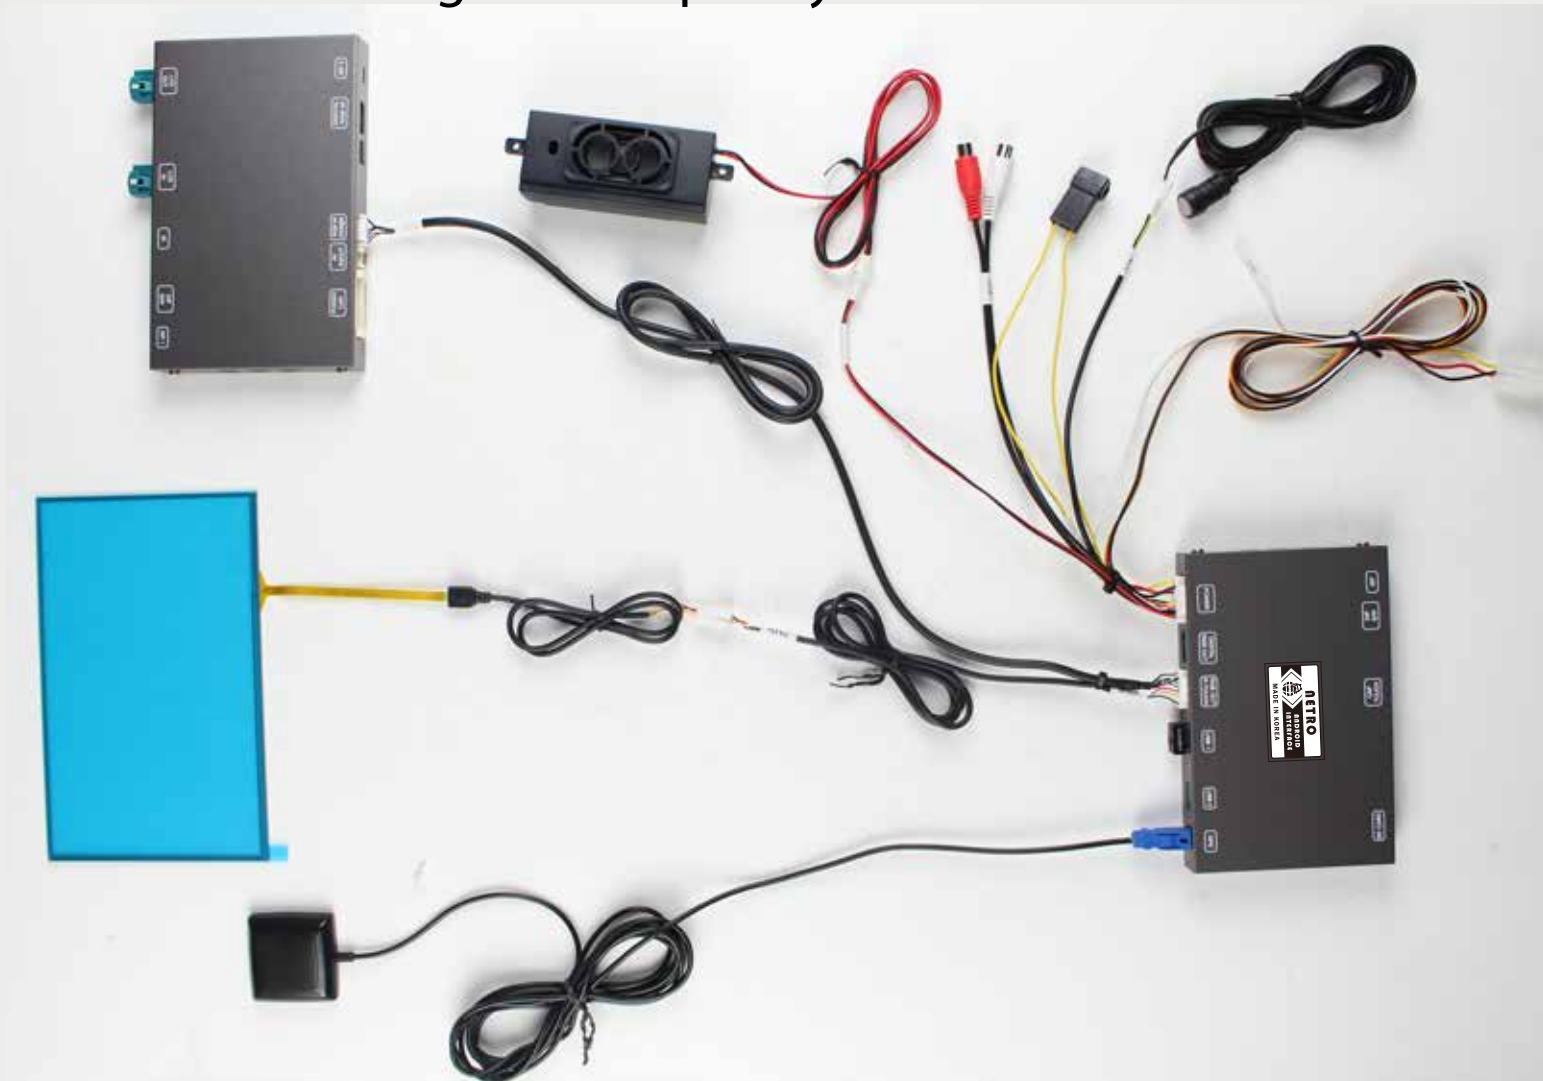



## ■ Navi Setting - DIGITAL RGB (LVDS IN)

NAVI SP60A

SELECT HD-G2

DISPLAY SETTING

COLOR SETTING

AUDIO OUT SELECT USER

1 2 3 4 5 6 7 8

Mar 28 2016

NAVI SP60A

SELECT N700

DISPLAY SETTING

COLOR SETTING

AUDIO OUT SELECT USER

1 2 3 4 5 6 7 8

Mar 28 2016

NAVI AV SET INFO

NAVI-SEL HD-G2

NAVI-DSP

HDMI-SEL

HDMI-DSP

NAVI AV SET INFO

NAVI-SEL N700





NAVI-DSP

HDMI-SEL

HDMI-DSP

Please press "OK" button 4 times and press "POWER" button once to enter into our OSD menu by remote controller and select HD-G2/N700 after installing our interface and our Android box by HDMI cable.


## ■ Navi Setting - ANALOG RGB

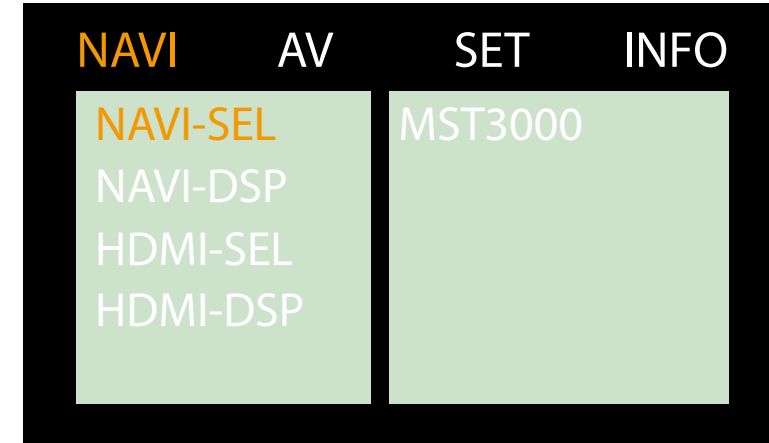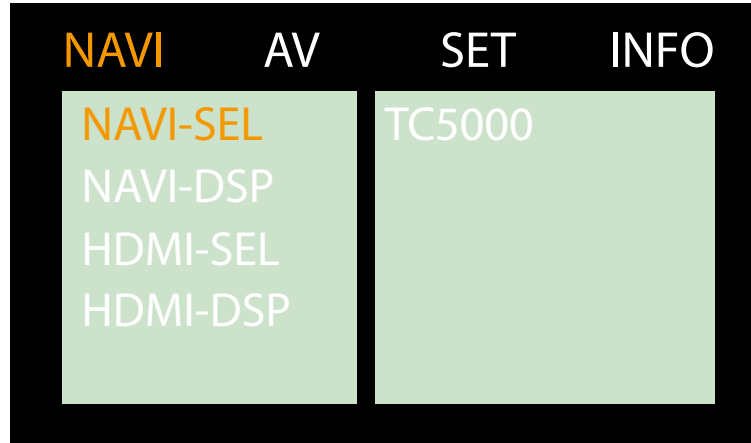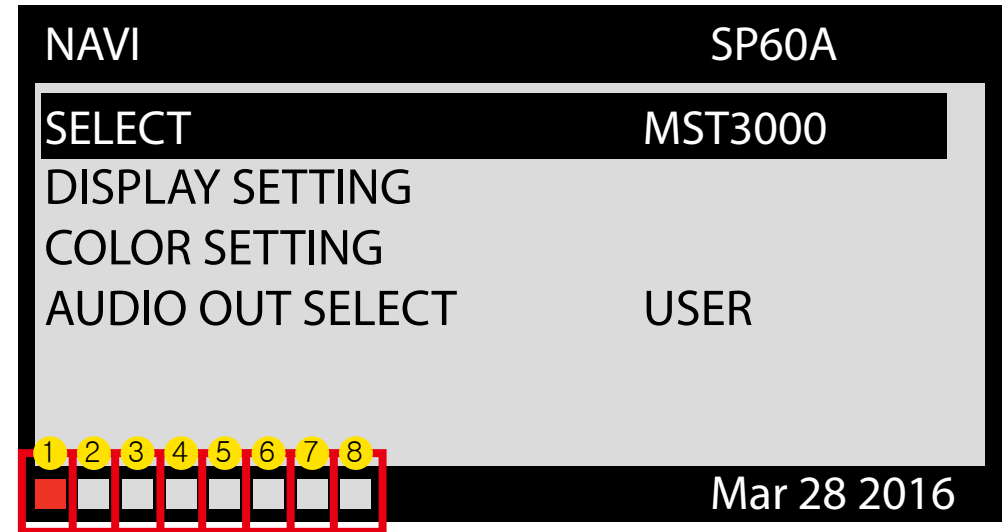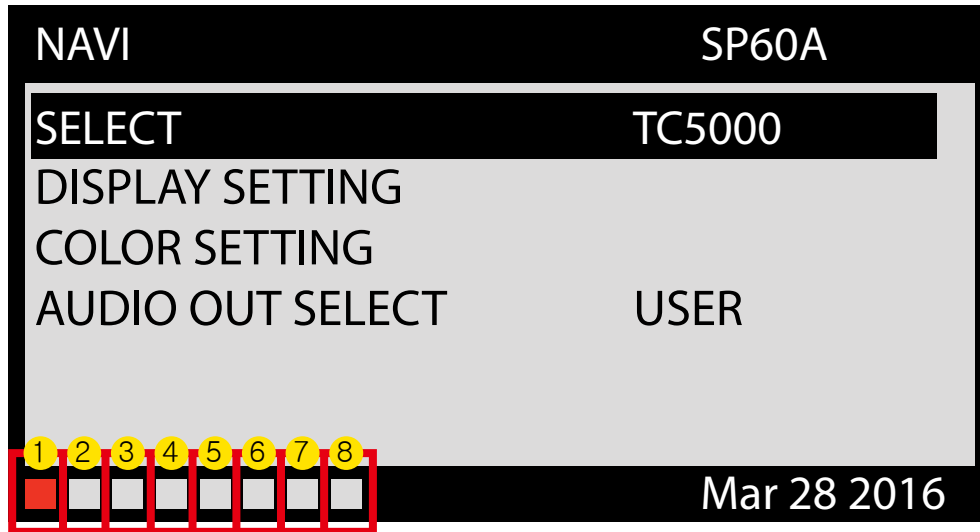


Please press "OK" button 4 times and press "POWER" button once to enter into our OSD menu by remote controller and select TC5000/MST3000 after installing our interface and our Android box by RGB cable.




## ■ Calibration Setting

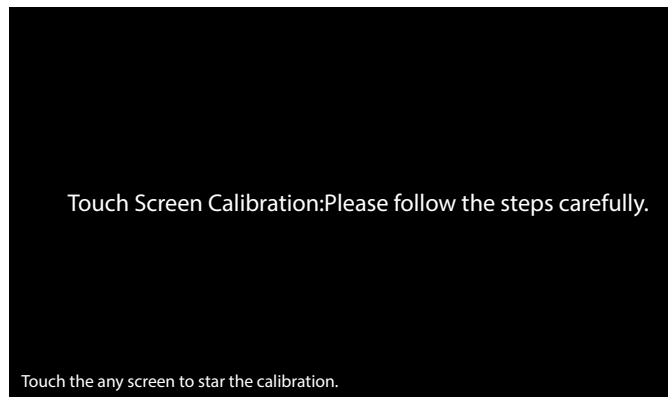

(1)

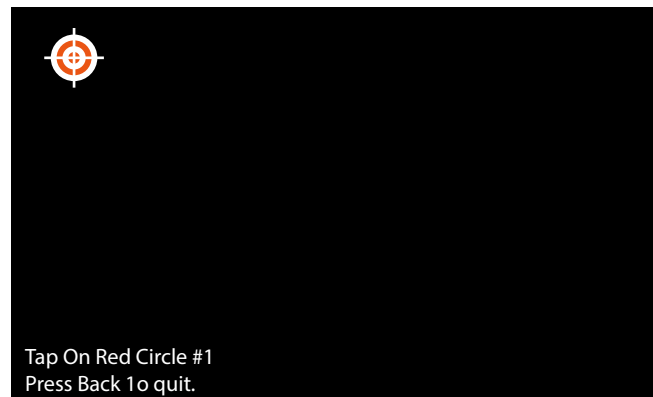


(2)

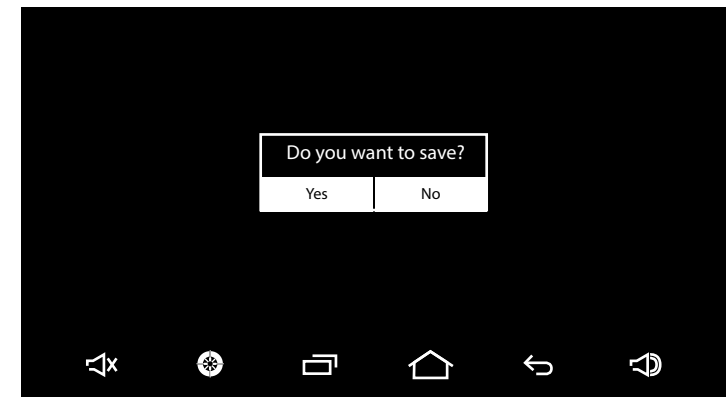




(3)

1. Please set dip switch 5 on(down), screen will enter into (1), and then please set dip switch 5 off.
2. Please press the cabibration points follow the steps carefully and correctly as above picture (2).
3. Please select "yes" after calibration.


## ■ Analog RGB Display Position Adjustment

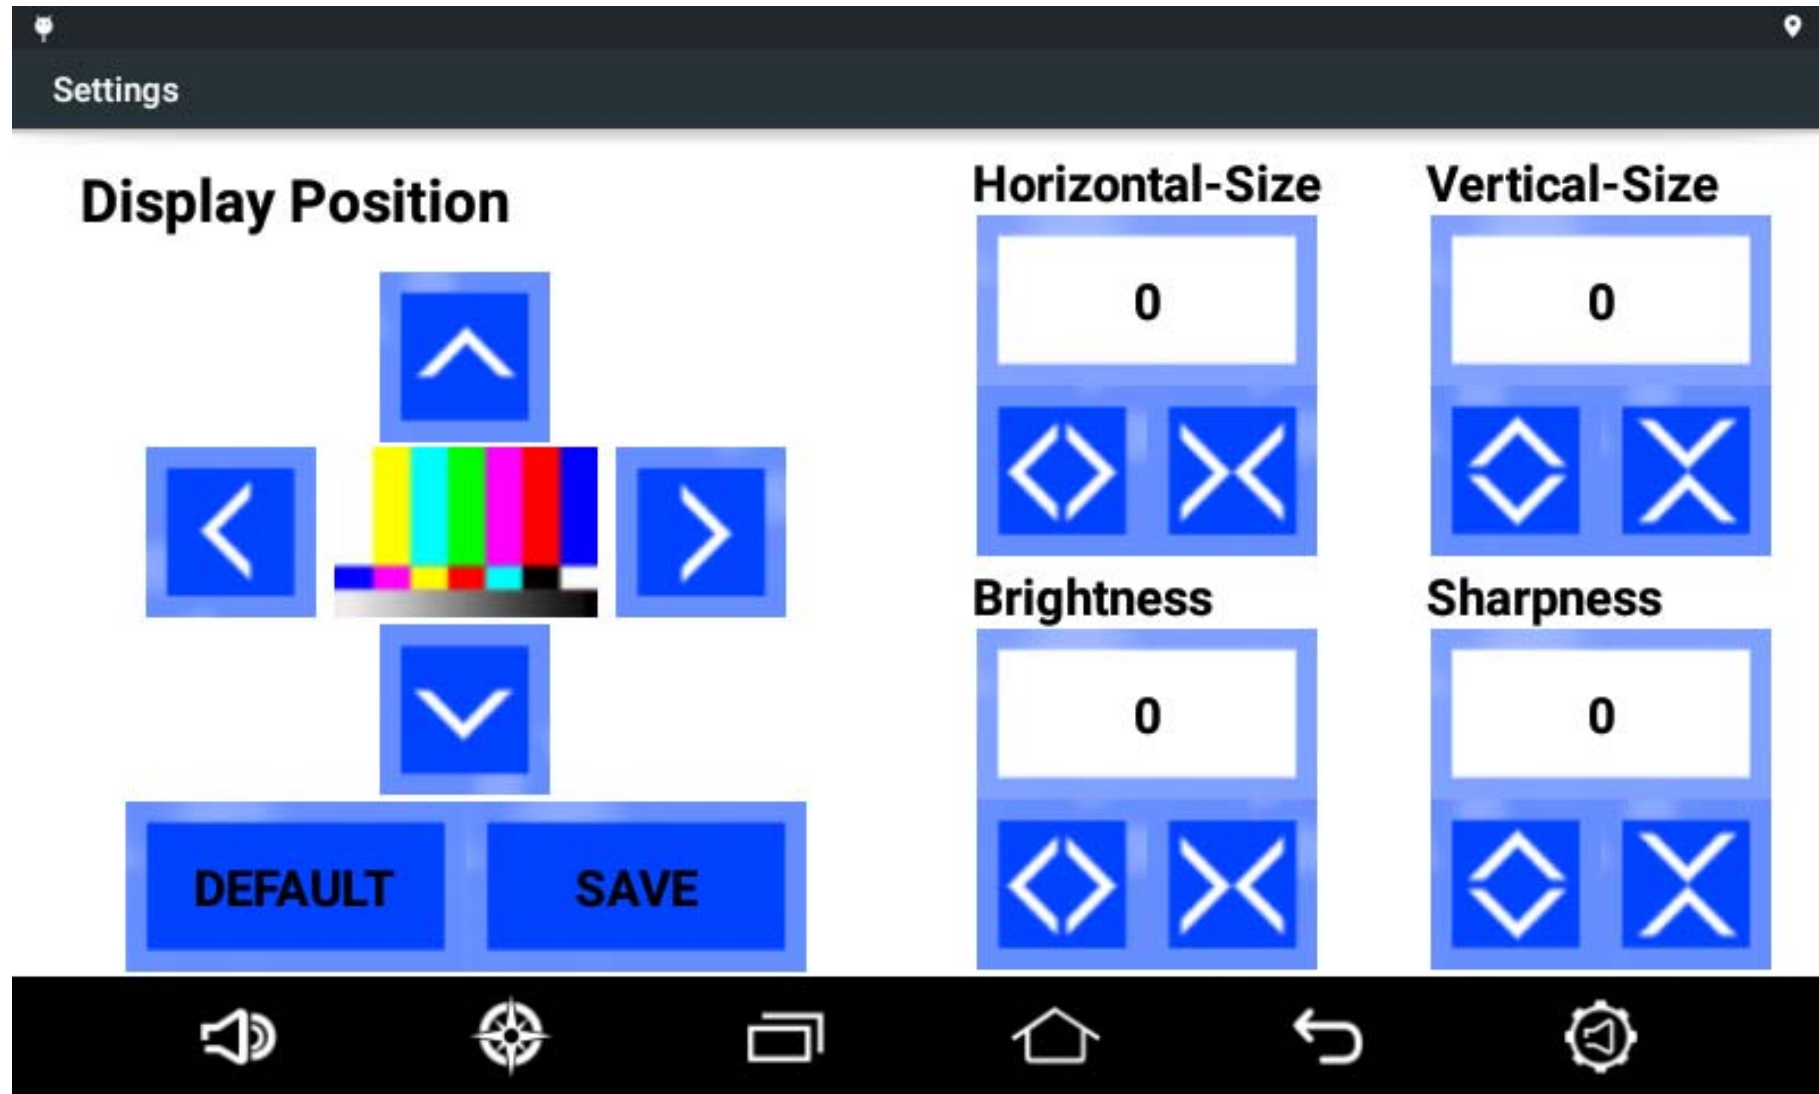

## ■ Booting Image Selections

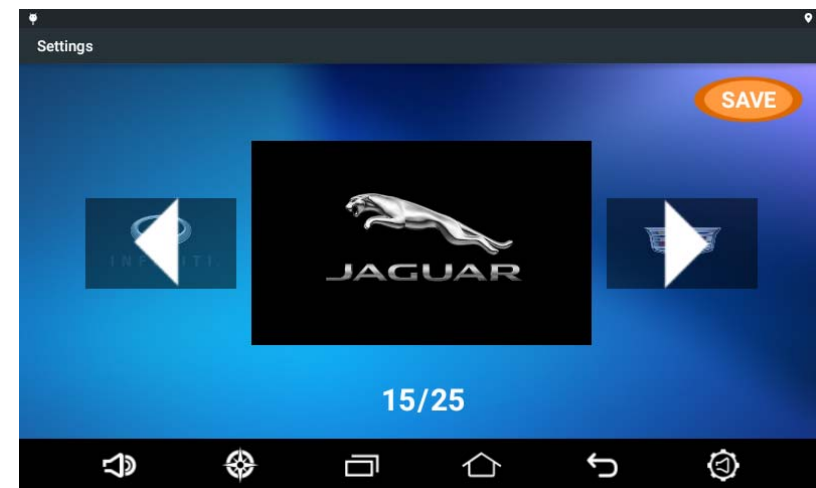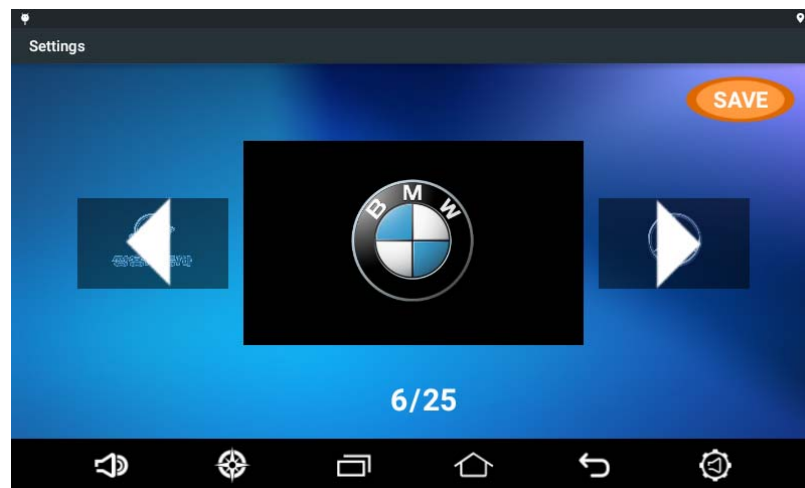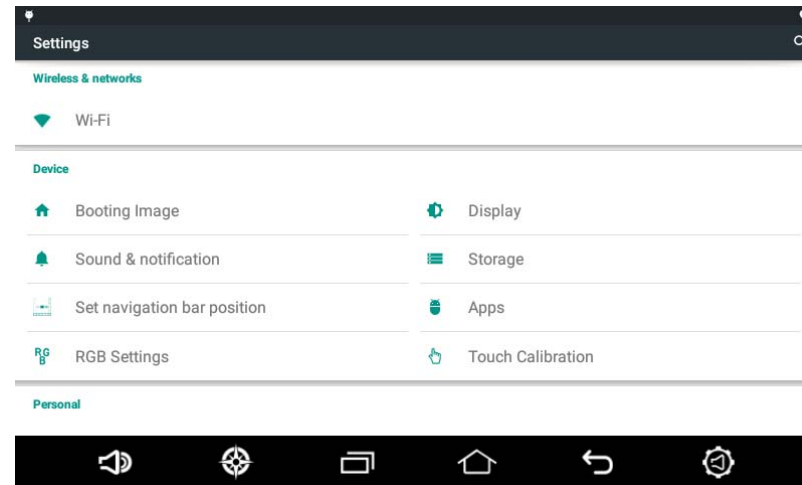


## ■ Navigation Bar Position Adjustment

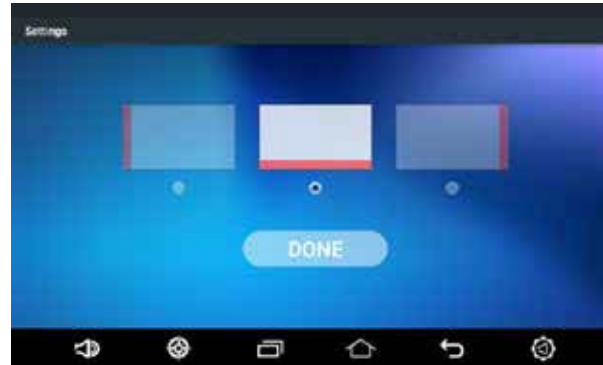


Please enter to SETTING of Android box to set navigation bar position as above images showed

## ■ Navigation Bar Position Adjustment

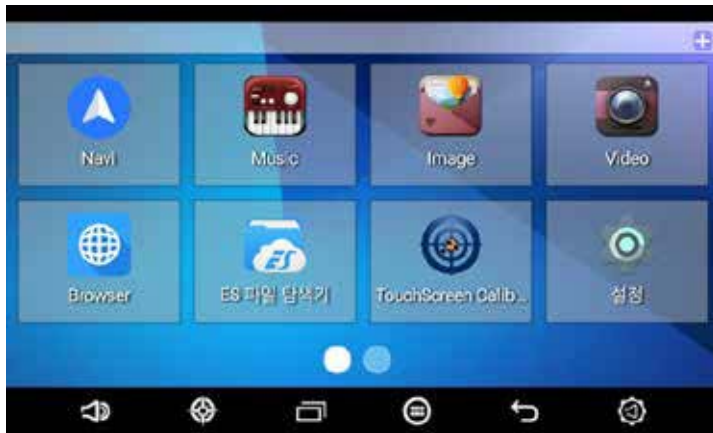


1. Switch to next/previous page by sliding touch to the left/right.

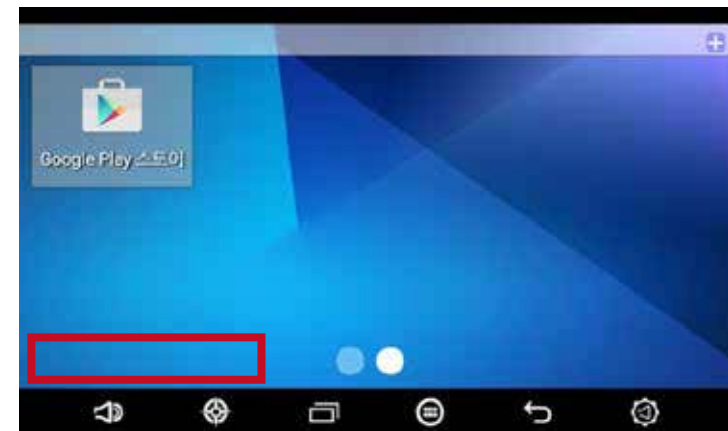

2. Switch to next/previous page by touching above touch area


## ■ Sounds & Mute setting



Please press  to set volume +/- source of sound, and close the UI by pressing "close".





Voiced

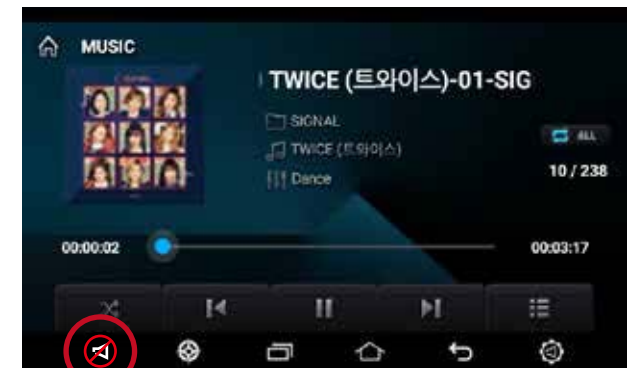


Mute

## ■ Music player

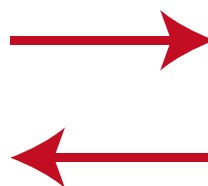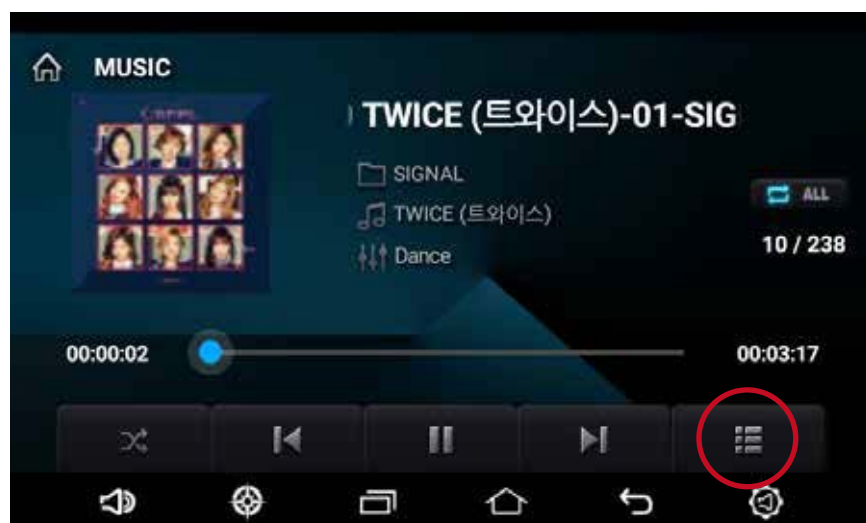




## ■ Video Player


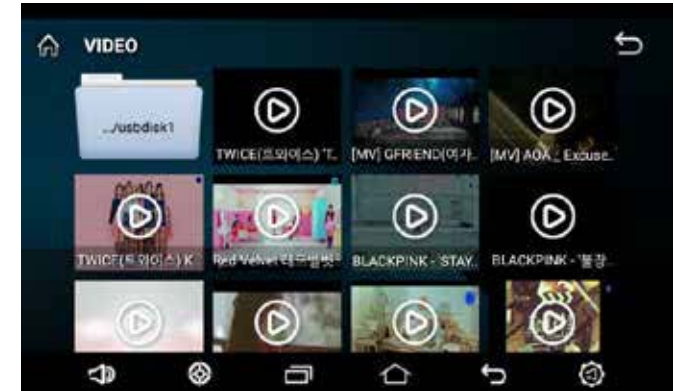




## Image

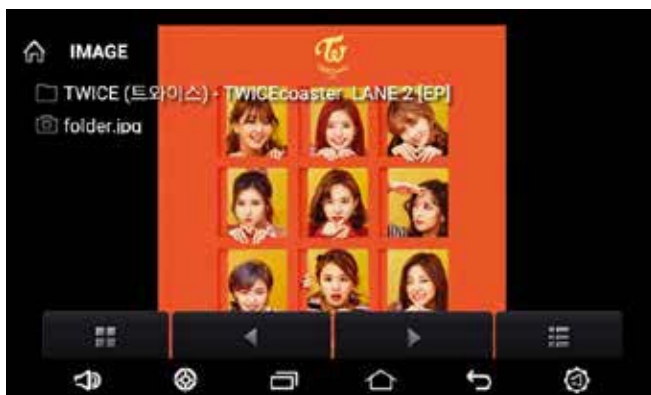

## ■ App Adjuction/Delete on Main Screen

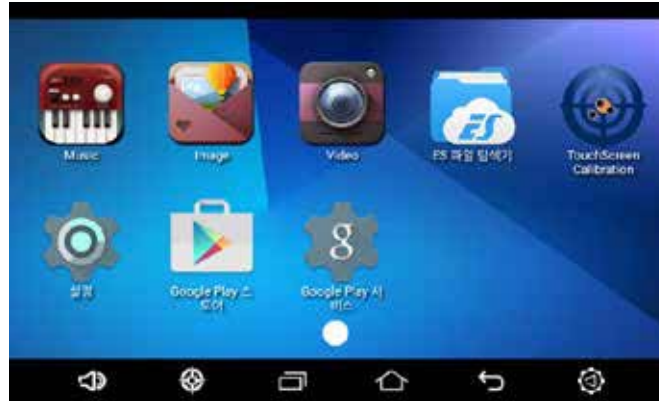
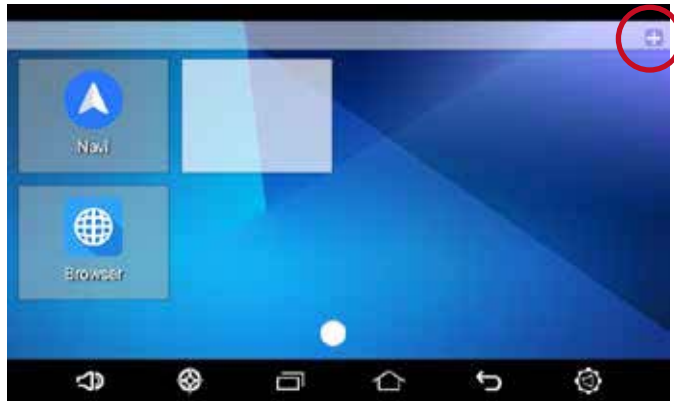


1. Please click icon "+" and select apps which you want to add onto main screen then it will appear on main screen .
2. Please press the app for 3s which you want to delete on main screen, then icon "-" will appear on up right of the main screen.


## ■ Function of Icons



Main Screen Back

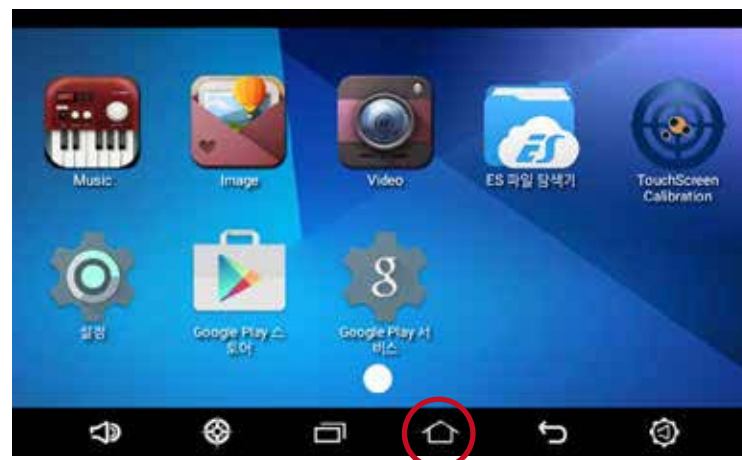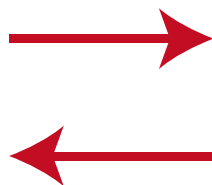

App Screen

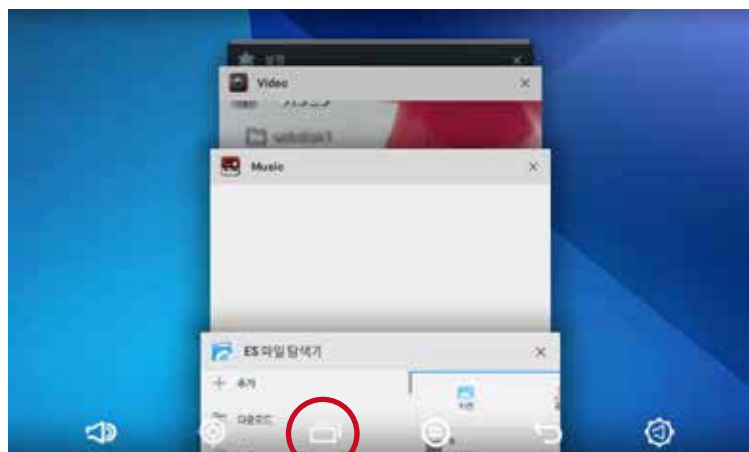

Multitasking




Mute

Sound

## Function of Icons




(1)

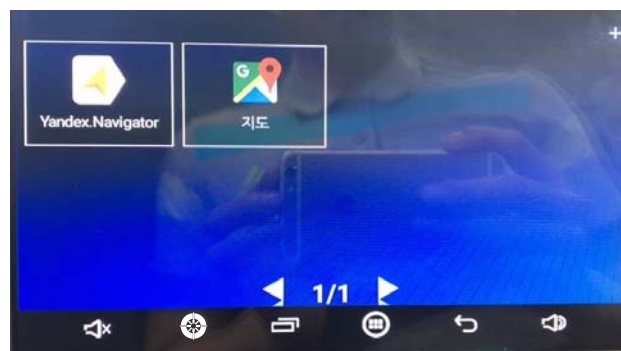



(2)



(3)

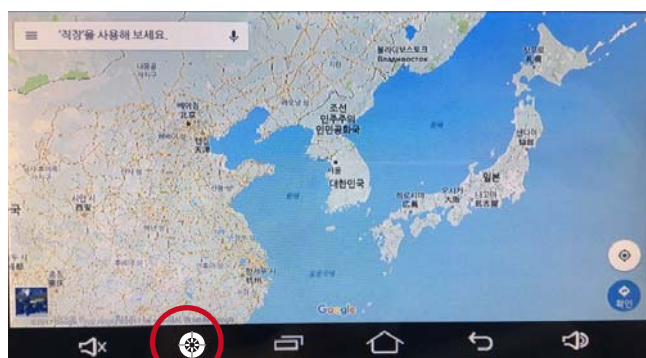

(4)

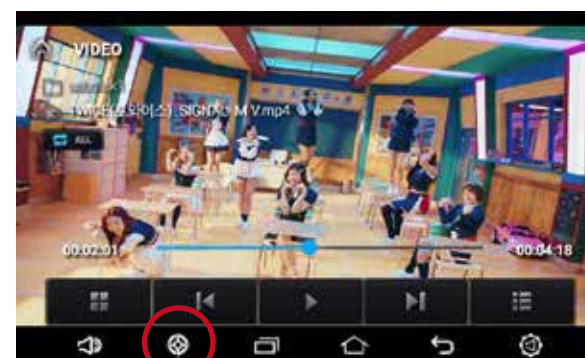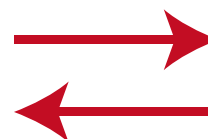

(5)

1. Normally most Navi apps will be created in NAVI folder automatical as (1) & (2) showed after you download them. (Press 2s long to enter into NAVI folder)
2. If you download several navi apps, and you enter to Google Map first, and you watched video or entered to other apps before you enter to Google Map. Then screen will switch between Video Player (or previous app screen) and and Google Map (or other Navi app which you entered before pressing LIST icon) every time you press LIST icon as (4) & (5) showed. (Navi app screen->previous app screen->Navi app screen->previous app screen.....)
3. It will display navi screen every time you press NAVI folder for short as (1).
4. It will display navi screen automatically every time you restart NETRO.
5. NETRO will display Navi screen which you used previously every time you restart it.