 


1) HOW TO SET S/W MODE [(ON,DOWN) 0 : ↓ off on / (OFF,UP) 1 : ↑ off on]




DIP_SW1	NAVI On/Off	DIP_SW5,6,7 VEHICLE SETTING			DIP_SW8	X
OFF	DO NOT USE GPS	OFF	OFF	OFF	C-Class 5.8"	DIP_SW9 RESOLUTION SETTING
ON	USE GPS	ON	OFF	OFF	B, A-Class 5.8"	
DIP_SW2,3	X	OFF	OFF	OFF	E, C, SLK 7"	OFF 800
DIP_SW4	REAR CAMERA	ON	OFF	OFF	B, ML-Class 7"	ON 400
OFF	OEM REAR					DIP_SW10 ON
ON	AFTER REAR					

※AV1/AV2/AV3 in ON/OFF※


- DIP SW1 ON → switch to GPS mode
→ Enter the OSD setting menu
(Press OK button 4times then you will see the number 1 on the left top of the screen from 1~4 when it's number 4, press the POWER button to enter the setting)
- AV → AV1 → SEL → ON



*BACK OF AUDIO DECK [FPG CAN]

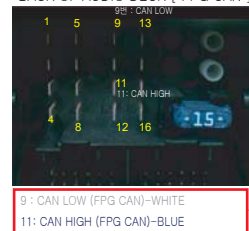

2. HOW TO SWITCH SCREEN

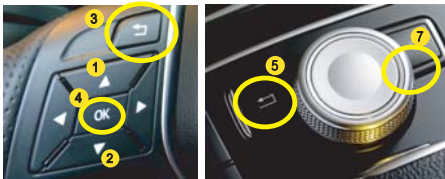

- PRESS IN SHORT DTV CHAN UP
- PRESS IN SHORT DTV CHAN DOWN
- PRESS IN LONG DTV SCAN
- PRESS FOR 2 SEC SWITCH SCREEN
- PRESS IN SHORT GO TO ORIGINAL SCREEN

- 3 BUTTON - SWITCH NAVI SCREEN / 5 SWITCH SCREEN

3. FUNCTION

APEAR PHONE NUMBER FOR 3SEC WHEN PICK-UP PHONE BY USING BLUETOOTH
(HOW TO SET : SET "B/T ON" - INTERFACE MENU

※NOT SUPPORT TO USE BOTH AV VIDEO INPUT / FRONT CAMERA INPUT

4. HOW TO SET NAV, AV, MIRROIRNG SCREEN


[WHEN YOU DONE WITH SETTING, MUST PRESS "EXIT" ON MENU FOR COMPLETE]




- 6 PRESS LONG - SWITCH SCREEN
- 7 OK 11 OK (2014)
- 7 PRESS IN SHORT - SWITCH ORIGINAL SCREEN

5. BACK OF COMMAND [CAN]


- 9 : CAN LOW BROWN (CAN)
- 11: CAN HIGH BROWN / RED (CAN)

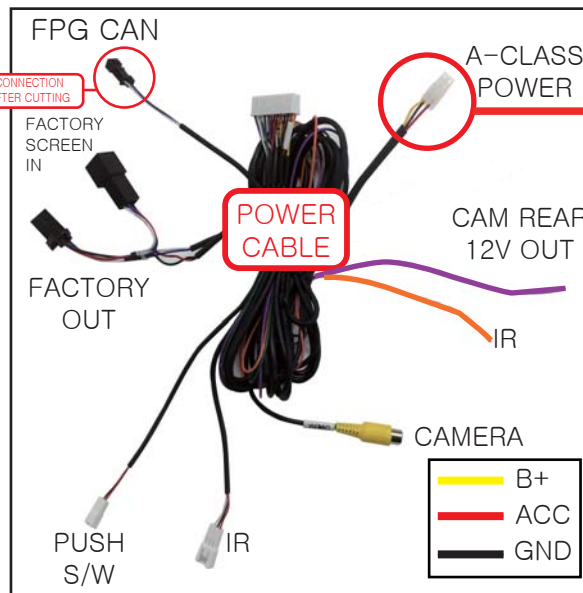

6. HOW TO ENTER REMOTE CONTROL SETTING MENU

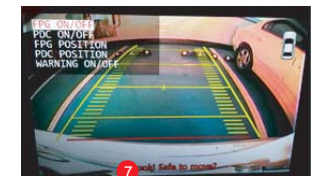

PRESS BUTTON 4TIMES THAN YOU WILL SEE THE NUMBERS 1 THE LEFT TOP OF THE SCREEN FROM 1~4. WHEN IT'S NUMBER 4, PRESS THE BUTTON TO ENTER THE SETTING MODE

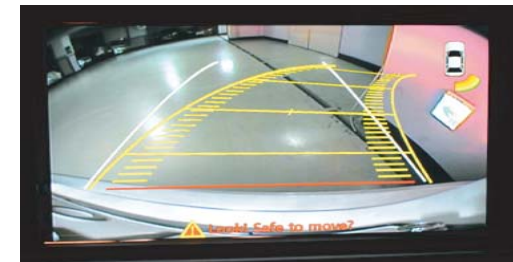

7. HOW TO SWITCH REAR VIEW CAMERA :

NO NEED ADDONA CONNECTION OF THE REAR LAMP SIGNAL ONCE TO PAS CAN IS CONNECTED.
(AUTOMATIC CAMERA SWITCHING BY CAN SIGNAL)
REAR VIEW CAMERA 12V ACC OUT CONNECT DIRECTLY TO THE INTERFACE

* CONNECT PAS CAN TO SWITCH REAR CAM AUTOMATICALLY

[COMPONENTS]

