

1. HOW TO SET S/W MODE [ON (DOWN) 0 : ↓ off on / OFF(UP) 1 : ↑ off on]



- DIP_SW1 : Navigation On/Off
- DIP_SW2 : AV1 On/Off
- DIP_SW3 : AV2 On/Off
AV3 SET ON THE MENU BY R/C
- DIP_SW4 : REAR VIEW CAMERA On/Off
- DIP_SW7 : WITHOUT CONNECTION FO CAN-ON
- DIP_SW8 : E66 8.8" RESOLUTION 800 On
- DIP_SW9 : E65 8.8" RESOLUTION 800 Off



1,1,1,1 : E65 8.8"



1,0,1,1 : E66 8.8"

2. HOW TO SWITCH SCREEN :




1 PRESS THIS BUTTON IN SHORT

*PRESS FOR 5 SEC TO TURN On/Off FUNCTION

2 USE TOGGLE SW

3 PRESS THE MENU BUTTON

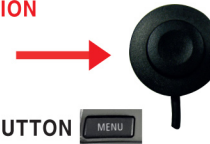

3. HOW TO SWITCH THE REAR VIEW CAMERA :

NO NEED ADDITIONAL CONNECTION OF THE REAR RAMP SIGNAL ONCE PAS CAN IS CONNECTED

* CONNECT PAS CAN TO SWITCH REAR CAM AUTOMATICALLY

* HOW TO ENTER GPS SETTING MODE



PRESS OK BUTTON 4TIMES

THEN YOU WILL SEE THE NUMBER

1 ON THE LEFT TOP OF THE SCREEN

FROM 1~4 WHEN IT' S NUMBER 4,


PRESS THE 1 BUTTON TO ENTER

THE SETTING MODE


*Main screen of GPS



*Rear view camera sith P.A,S & F.P.G

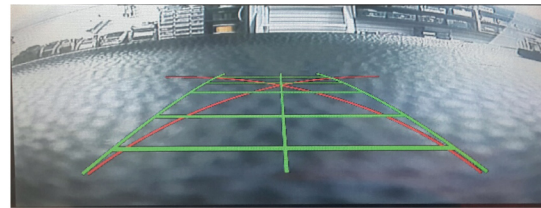

[ACCESSORIES]

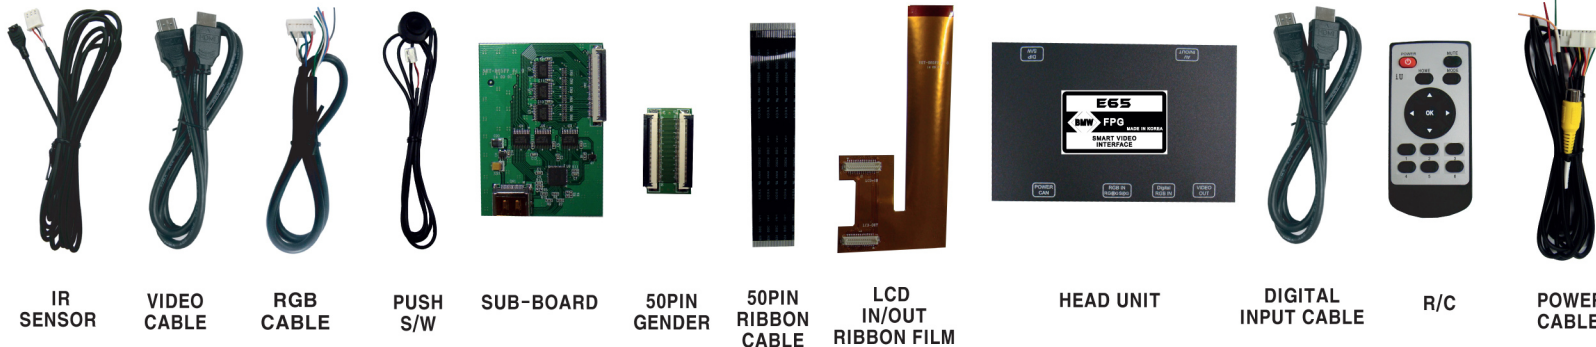

POWER CABLE SPEC

- ACC, B+
- GND
- CAM REAR 12V OUT
- IR
- CAN HIGH
- CAN LOW
- REVERSE