




# 2019 BMW EVO ALL SERIES WITH OEM TOUCH & WITHOUT OEM TOUCH (SP27FT) MANUAL

## MAIN UNIT OF INTERFACE



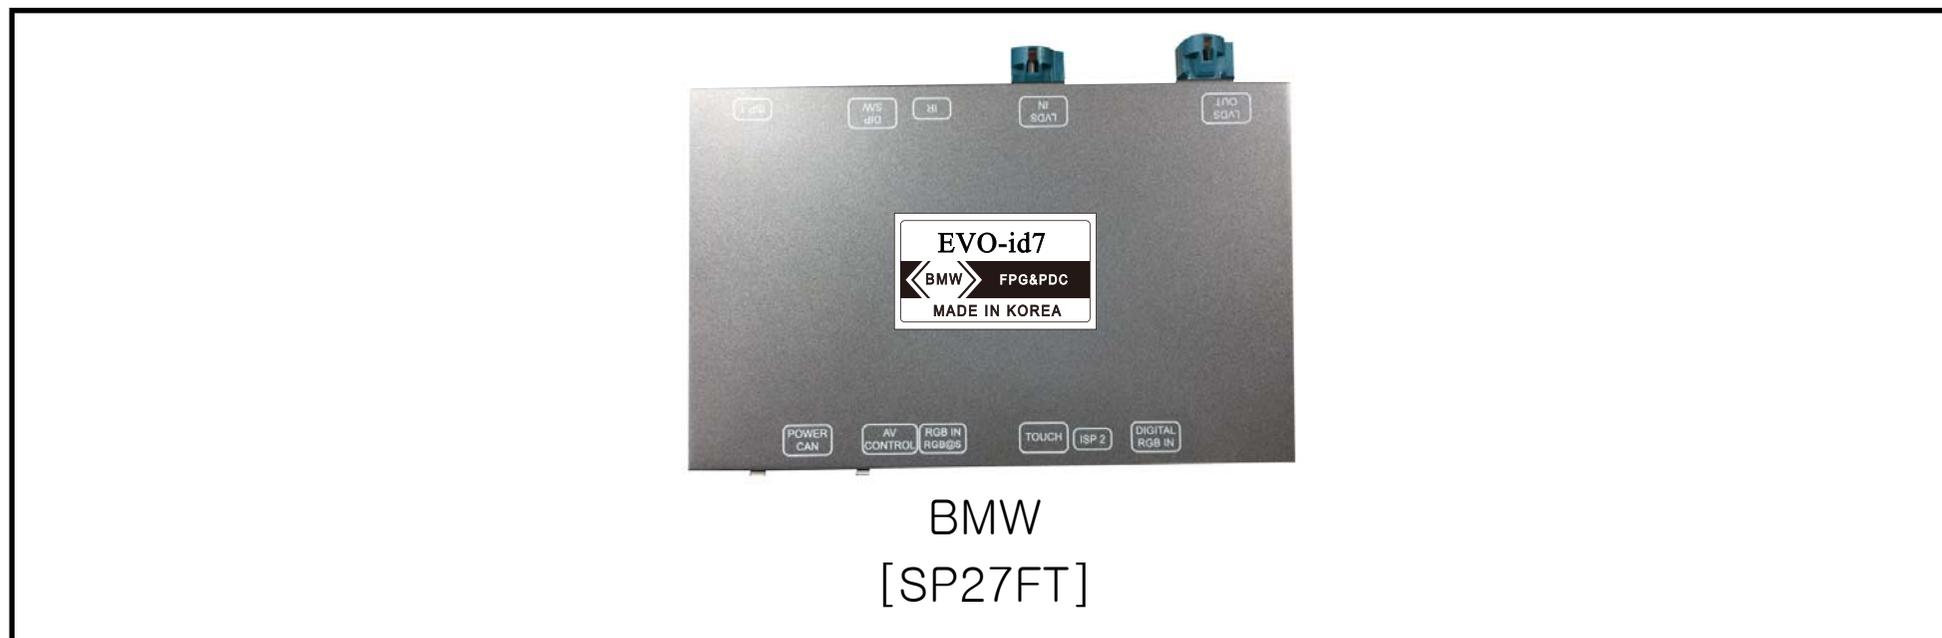


Car Brand	Model	Year Range	System
2019 BMW EVO	EVO-id7(SP27FT)	2019	EVO ID7

# COMPONENTS

<p><b>1</b> MAIN UNIT</p> 	<p><b>2</b> MAIN CABLE</p> 	<p><b>3</b> RGB CABLE</p> 	<p><b>4</b> IR CABLE</p> 
<p><b>5</b> LVDS CABLE</p> 	<p><b>6</b> TOUCH CABLE</p> 	<p><b>7</b> 4PIN FILM</p> 	<p><b>8</b> REMOTE CONTROL</p> 
<p><b>9</b> 5 SERIES EXTENSION CABLE</p>  <p>※ OPTION ※</p>	<p><b>10</b> 7 SERIES EXTENSION CABLE</p>  <p>※ OPTION ※</p>	<p><b>11</b> HARNESS</p>  <p>※ OPTION-ID6 ※</p>	<p><b>12</b> AV IN/OUT CABLE</p>  <p>※ OPTION ※</p>
<p><b>13</b> AV GENDER CABLE</p>  <p>※ OPTION ※</p>	<p><b>14</b> AV GENDER BOARD</p>  <p>※ OPTION ※</p>		

# COMPONENTS

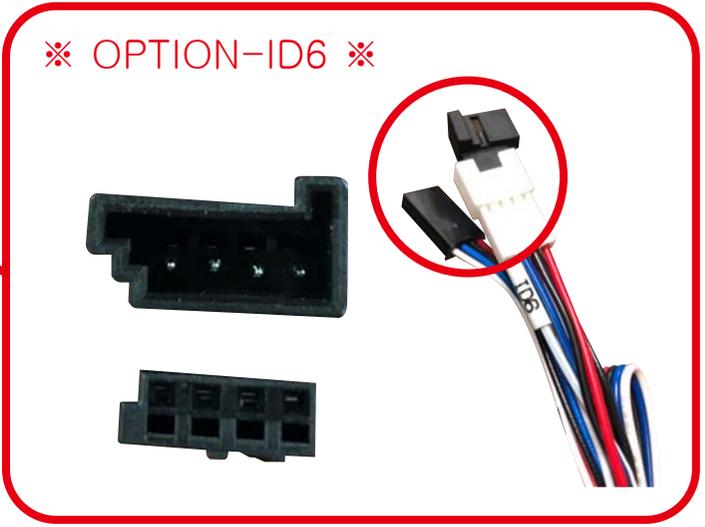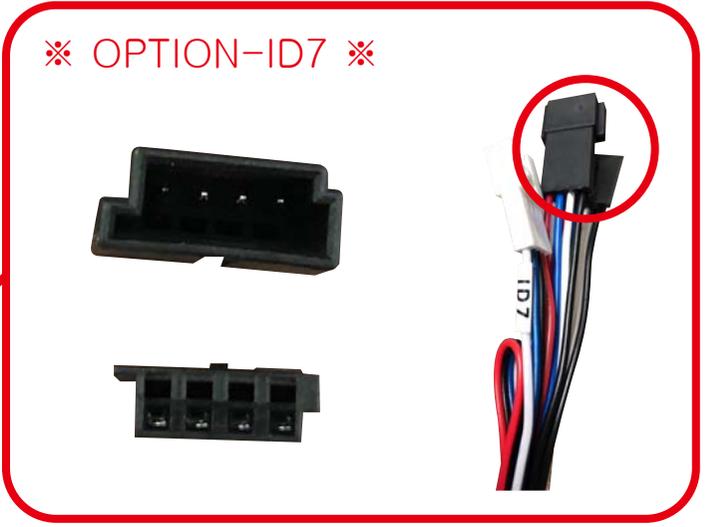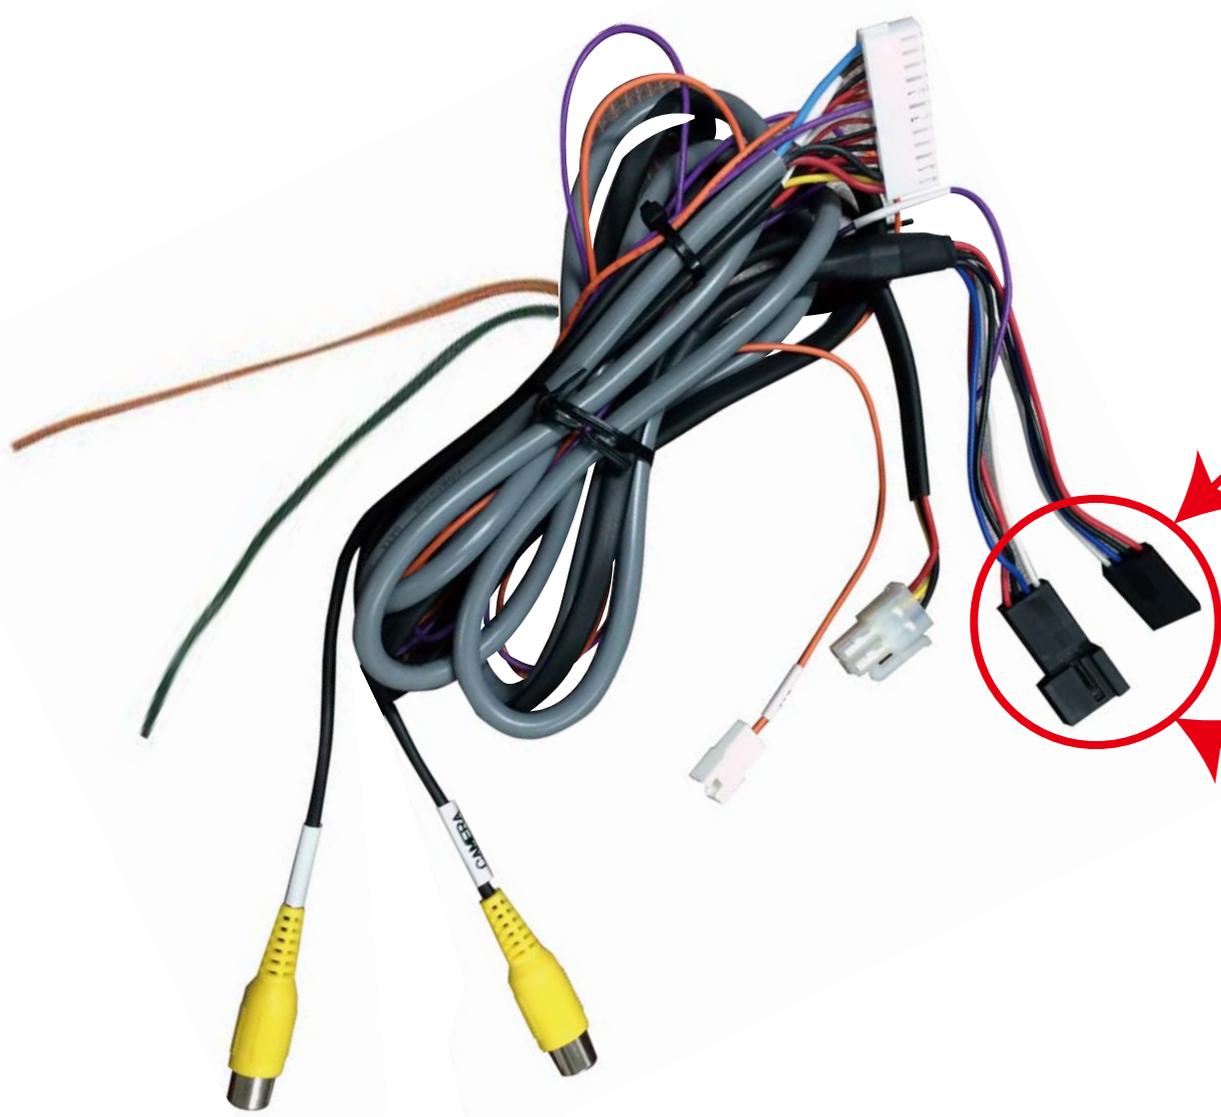

## DIP S/W

<p>OFF ON</p> <p>10.2"(1440X540) 5, 6, 7, X3, X5, X6</p>	<p>OFF ON</p> <p>8.8"(1280X480) without OEM touch screen</p>	<p>OFF ON</p> <p>8.8"(1280X480) with OEM touch screen(MINI)</p>	<p>OFF ON</p> <p>6.5"(800X480) without OEM touch screen</p>
<p>OFF ON</p> <p>10.2"/12.3"(1920X720) ID7 with OEM touch screen</p>	<p>OFF ON</p> <p>6.5"(800X480) with OEM touch screen</p>	<p>OFF ON</p> <p>8.8"(1280X480) with OEM touch screen</p>	
<p>OFF ON</p> <p>ID7-1920x720 TOUCH + ID6 JOG NEW 7 SERIES 12.3"</p>	<p>OFF ON</p> <p>ID6-1280x480 TOUCH + ID7 JOG NEW 3(2019) 8.8"</p>	<p>OFF ON</p> <p>8.8" X3, X4 (ID6 UI ID6 IDRIVE) INNOLUX LCD MADE IN CHINA</p>	
<p>OFF ON</p> <p>ID7-1920x720 TOUCH + ID6 JOG INNOLUX LCD MADE IN CHINA SETTING ON MENU (CID-&gt;INNOLUX)</p>			



PIN	FUNCTION	DIP S/W SETTING
1	External Navigation	OFF
		ON
2	Vehicle Setting	
3	TV free	OFF
		ON
4	Rear Camera	OFF : OEM Camera
		ON : Aftermarket Camera
5	ON	
6	Vehicle Setting	
7	Vehicle Setting	
8	ON	

## BMW EVO-id7(SP27FT) SPEC.

### 1. INPUT

- 1 x Digital RGB Input(LVDS IN)
- 1 x Analog RGB Input(GPS system output)
- 1 x LVDS Input
- 1 x LVDS output
- 1 x CVBS(rear camera)
- 1 x CVBS(front camera or A/V)
- 1 x HDMI(THE MODEL WHICH COMPATIBLE WITH HDMI)
- 3 x A/V Input(Option)

### 2. Output

- 1 x CVBS
- 1 x Audio L/R


### 3. Power

- Input power : 8VDC ~ 18VDC
- Consumption : 6.5 Watt
- Ampere : 0.53A


### 4. Size

- 163\*103\*20mm(Width\*Length\*Height)

### 5. Power 24pin

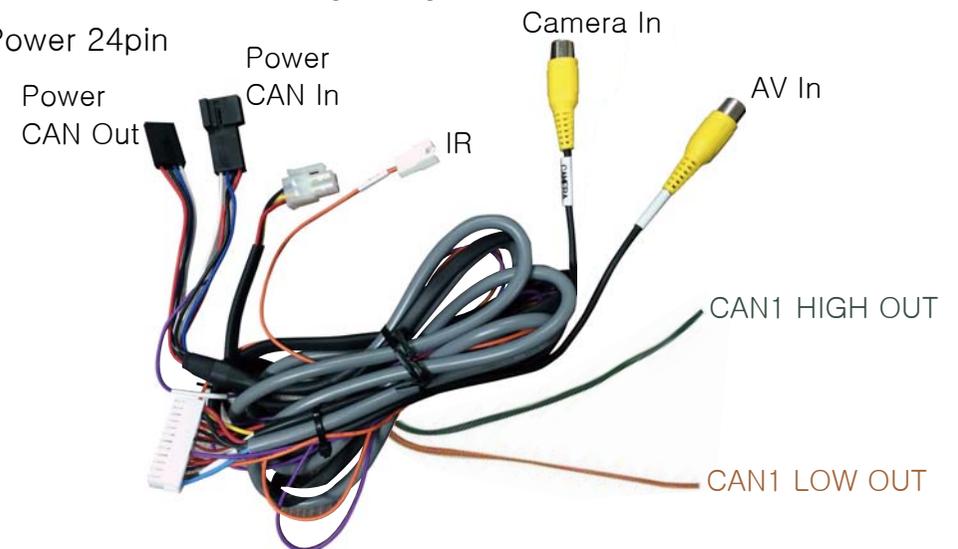


# CONNECTION – 12.3 INCH

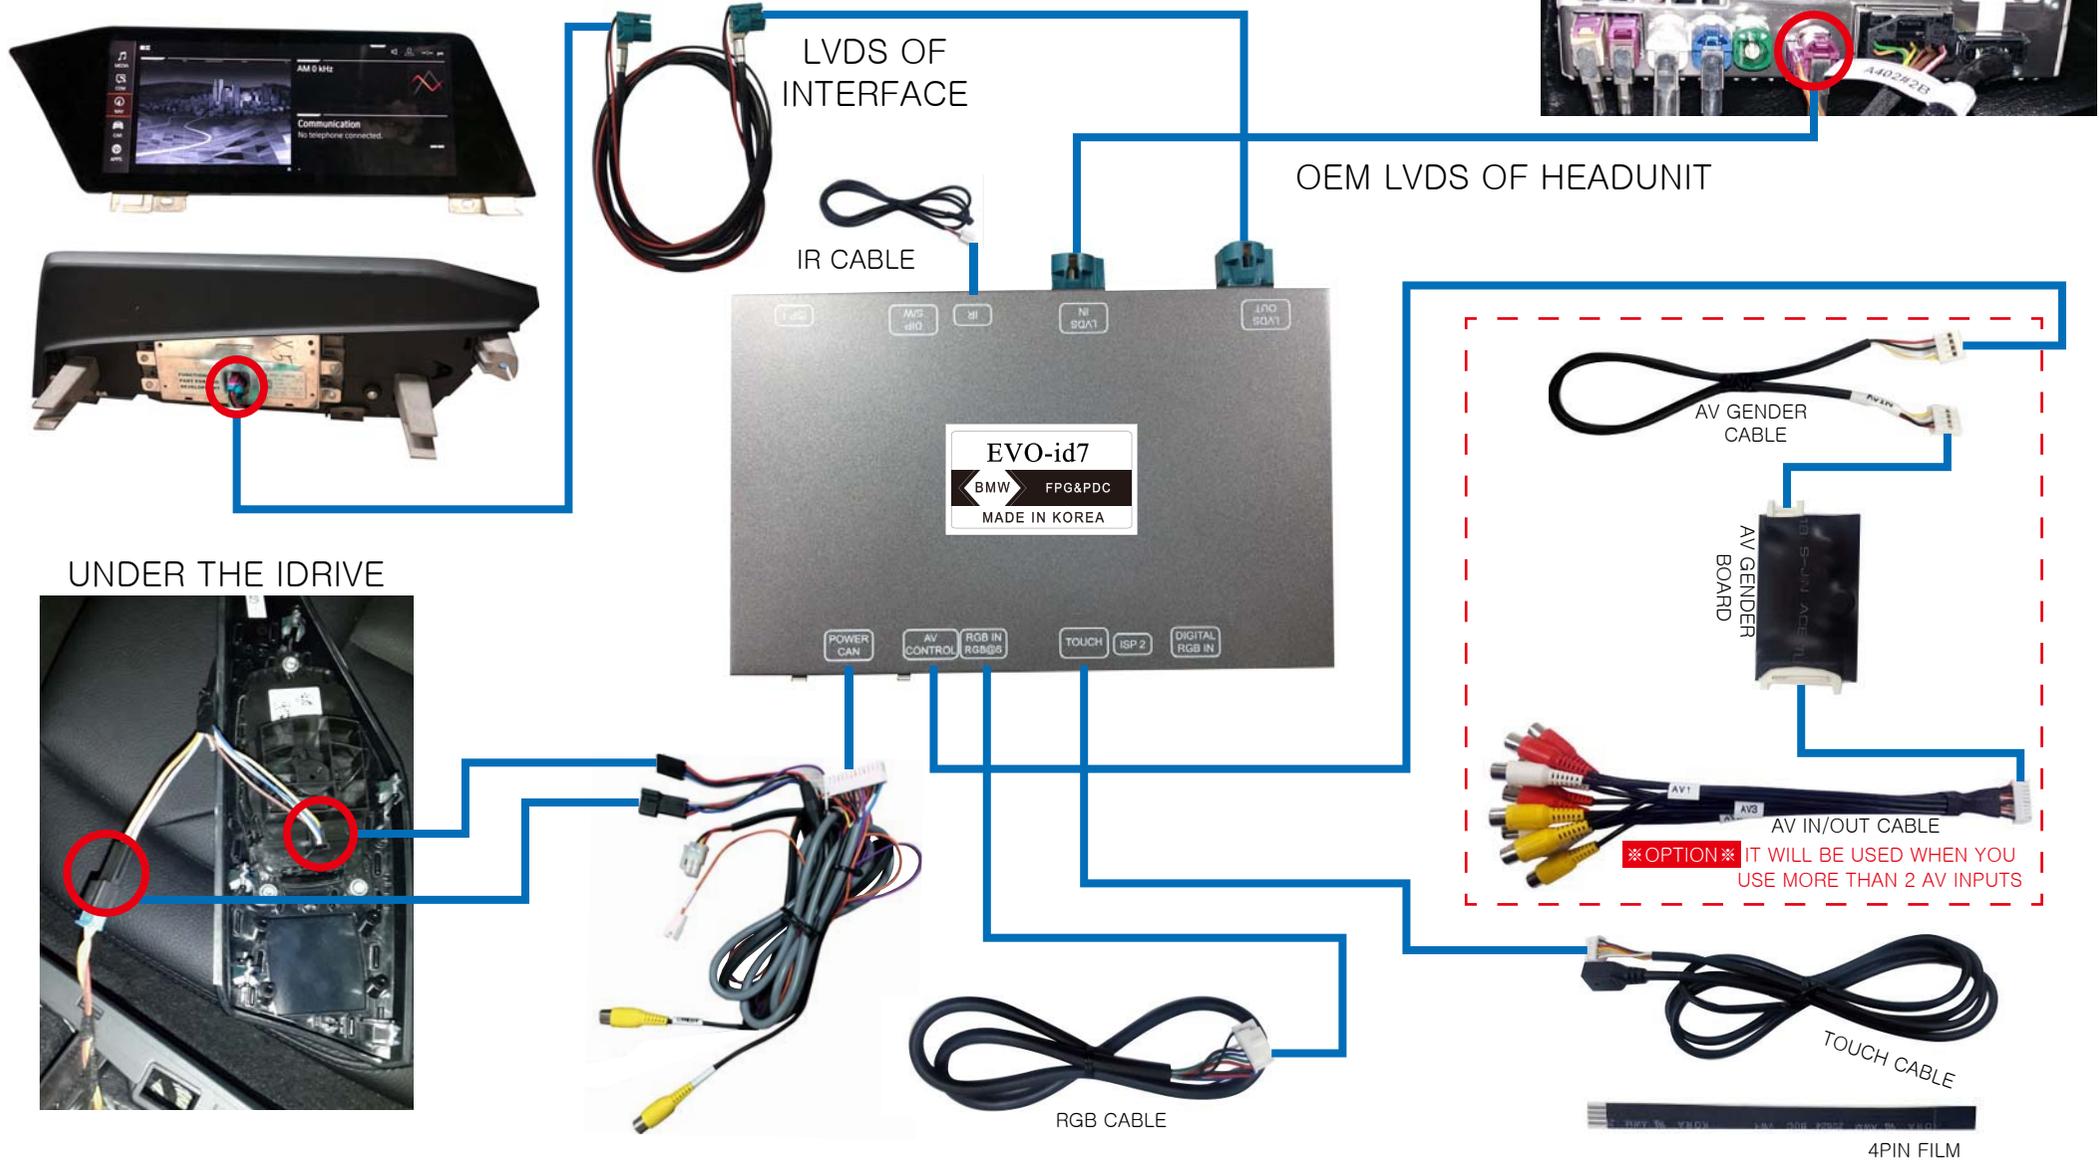




# CONNECTION – 8.8 INCH

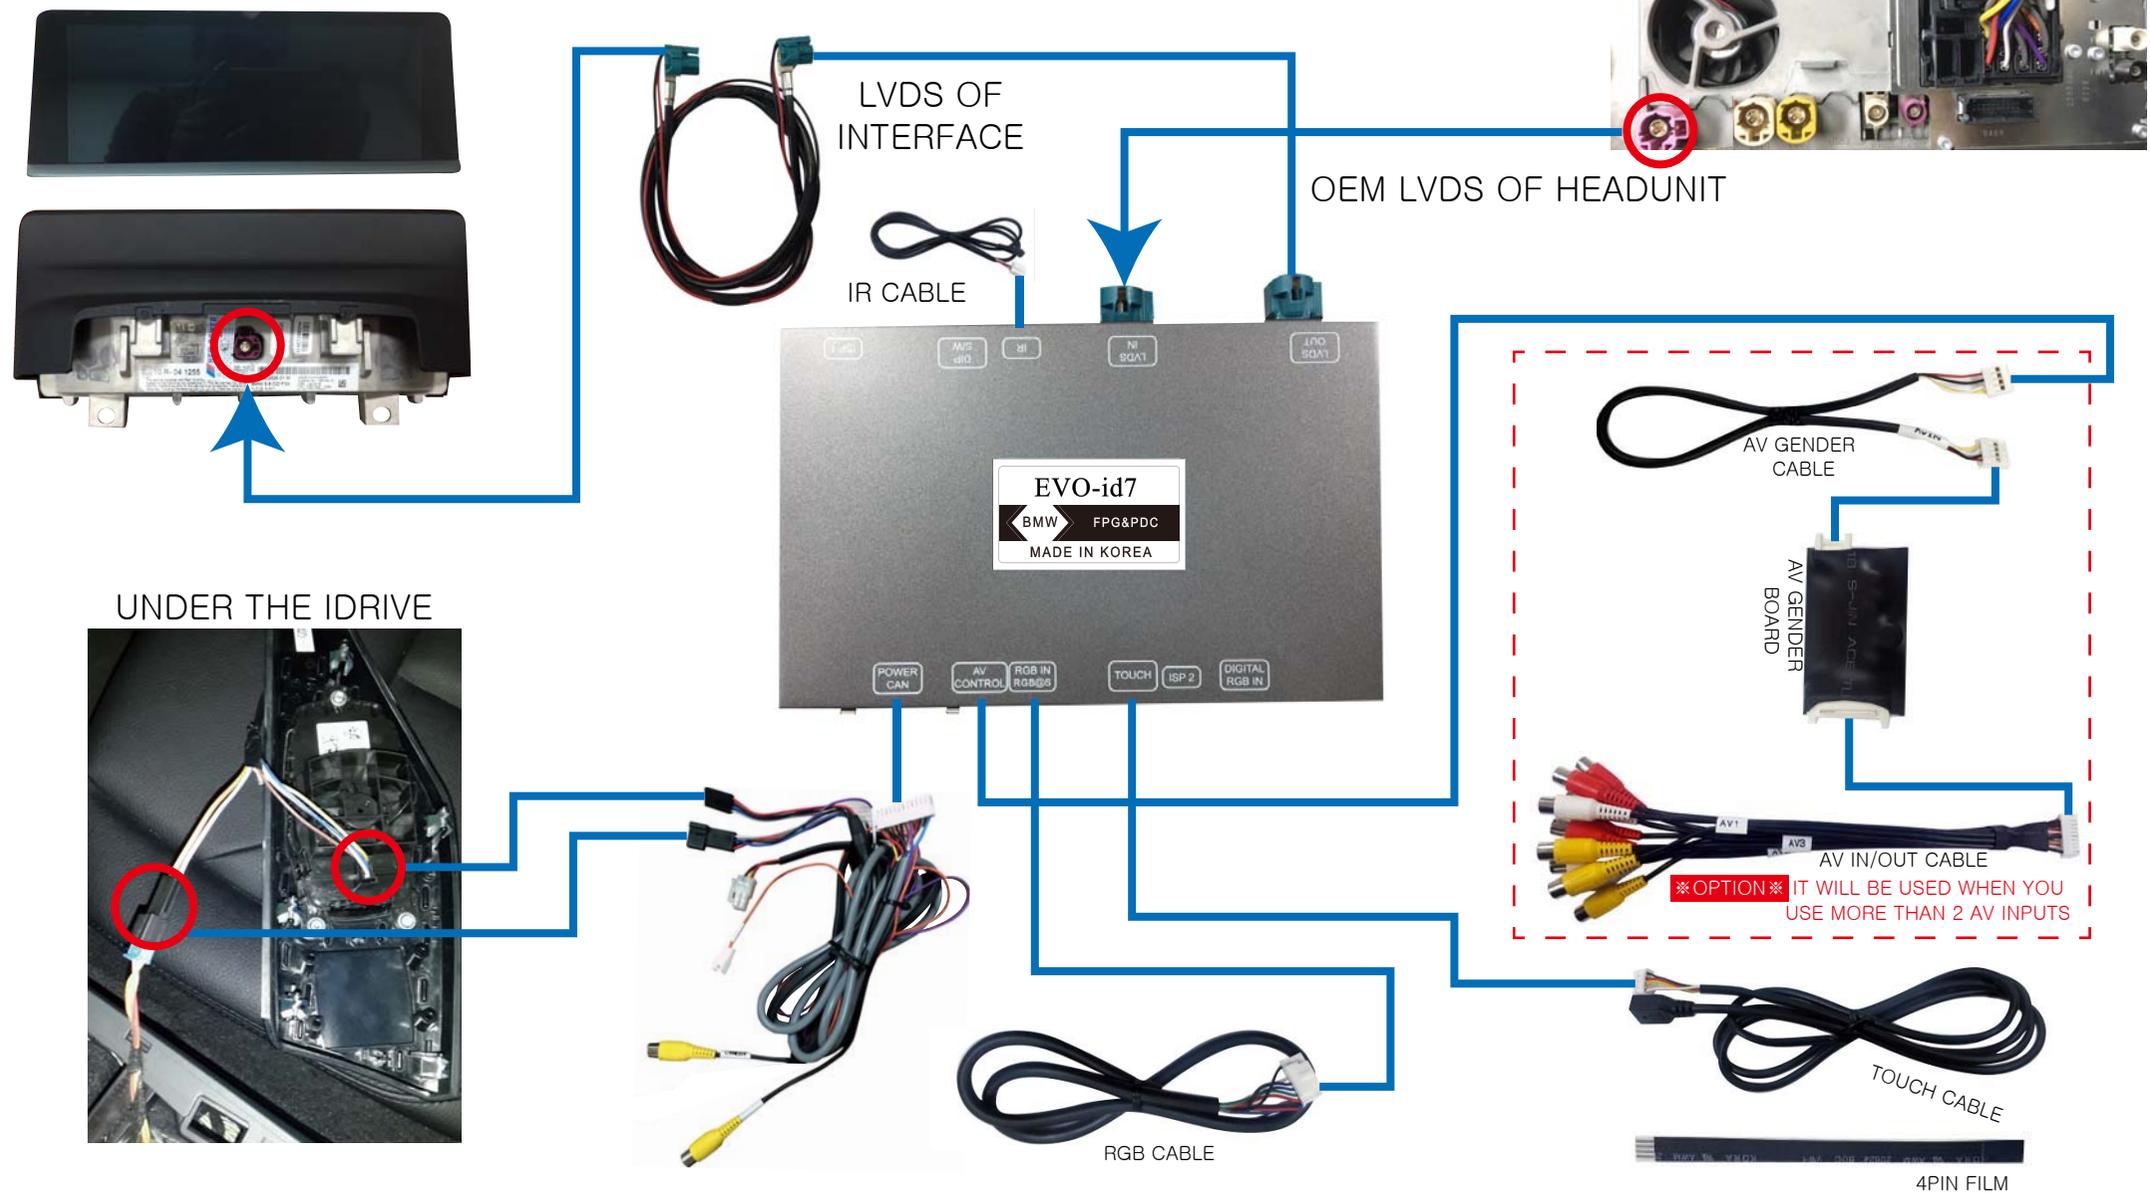



**\*OPTION\*** IT WILL BE USED WHEN YOU USE MORE THAN 2 AV INPUTS

# CONNECTION – 8.8 INCH HARNESS

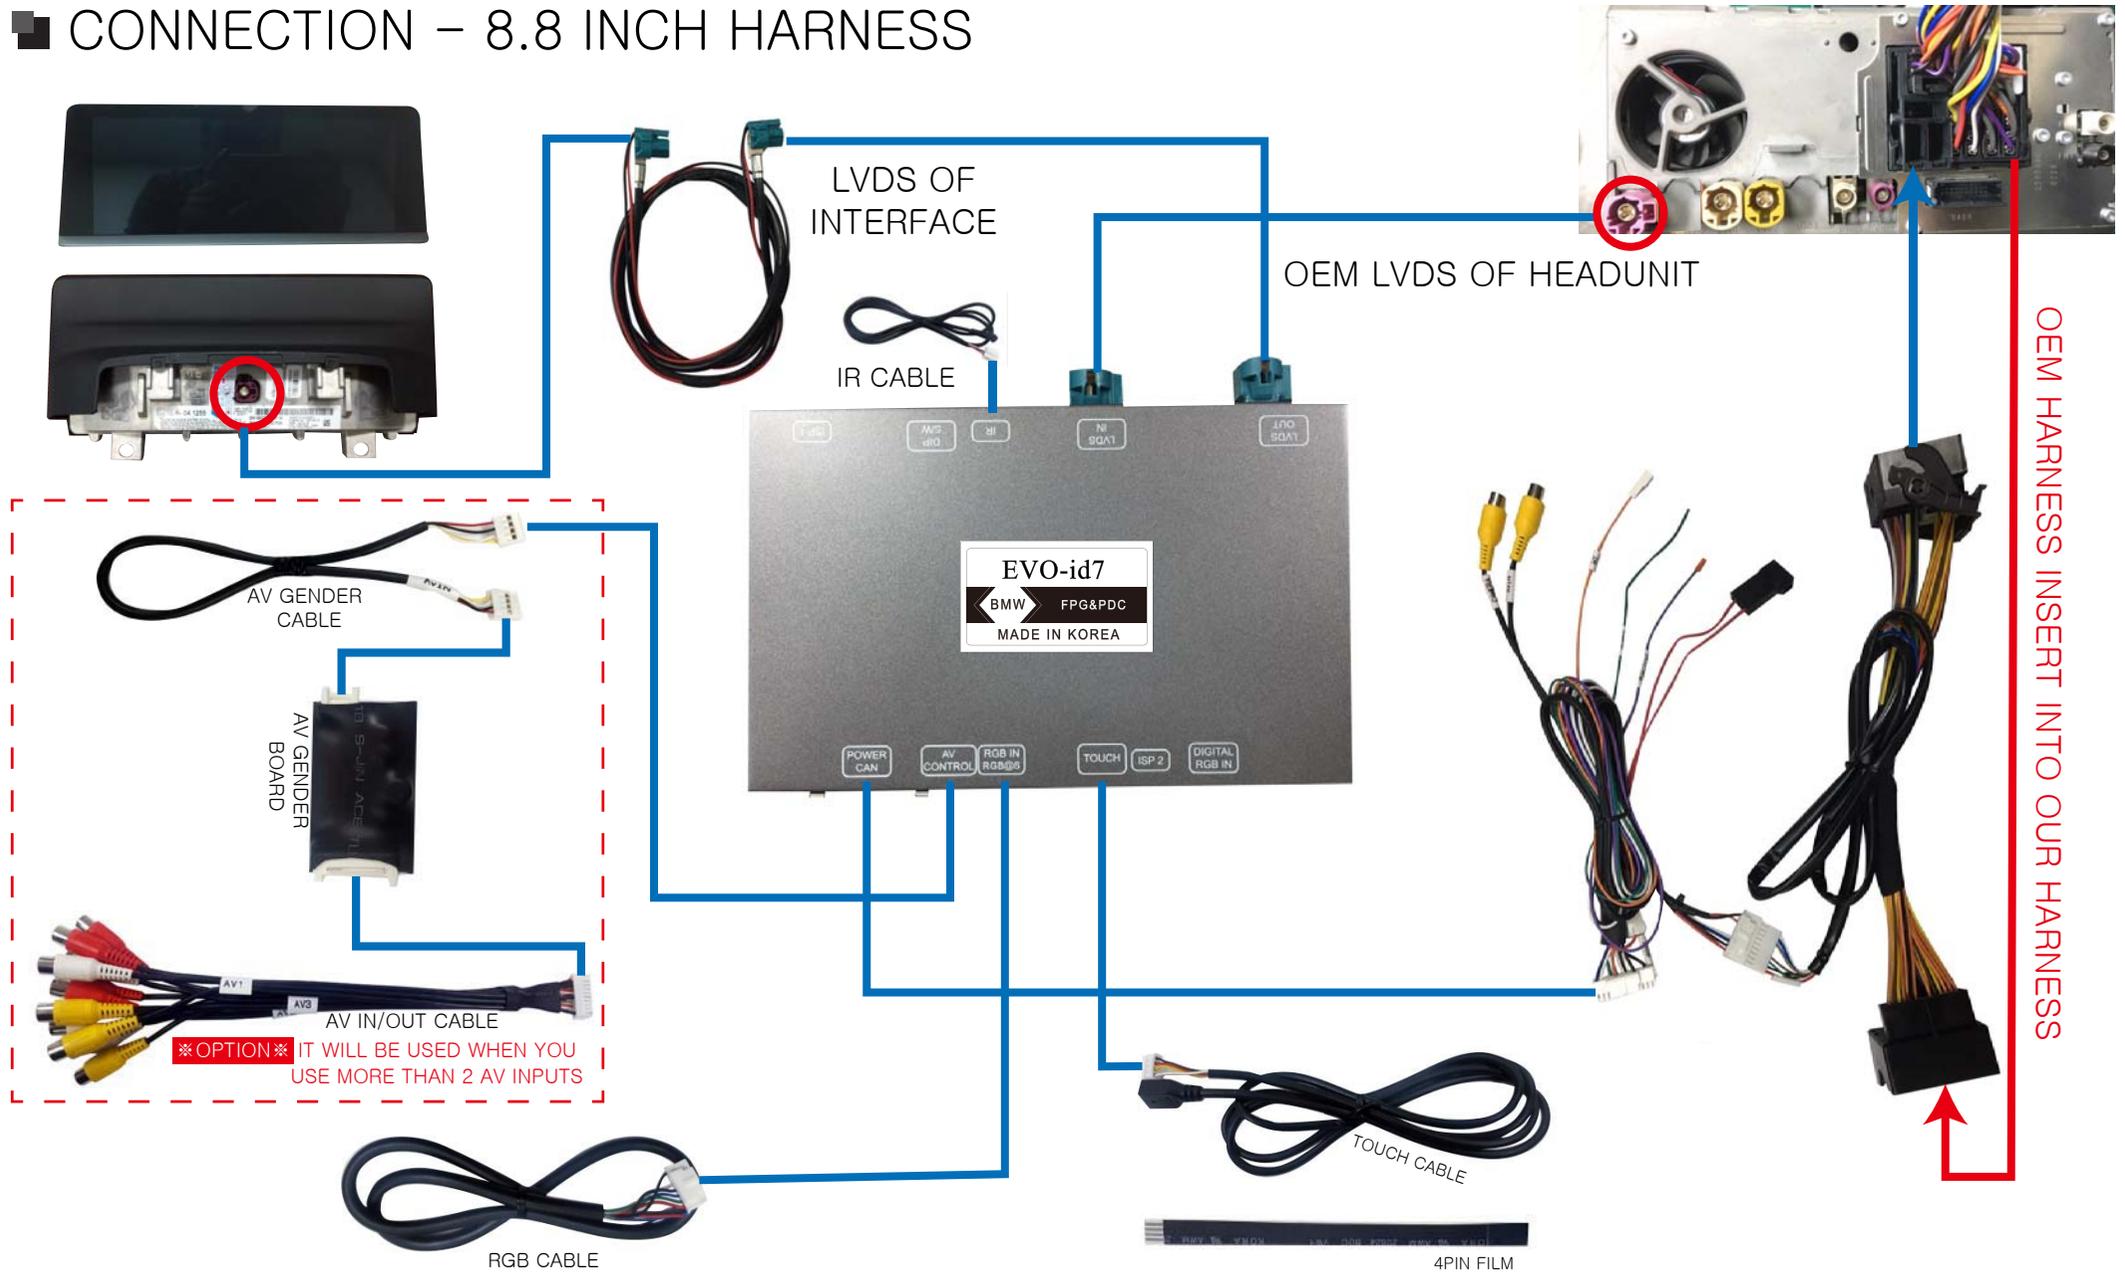

## ■ INSTALLATION – TV/DVD FREE




※ Please press Volume “-” button for 7s long of steering wheel to set TV FREE On/Off

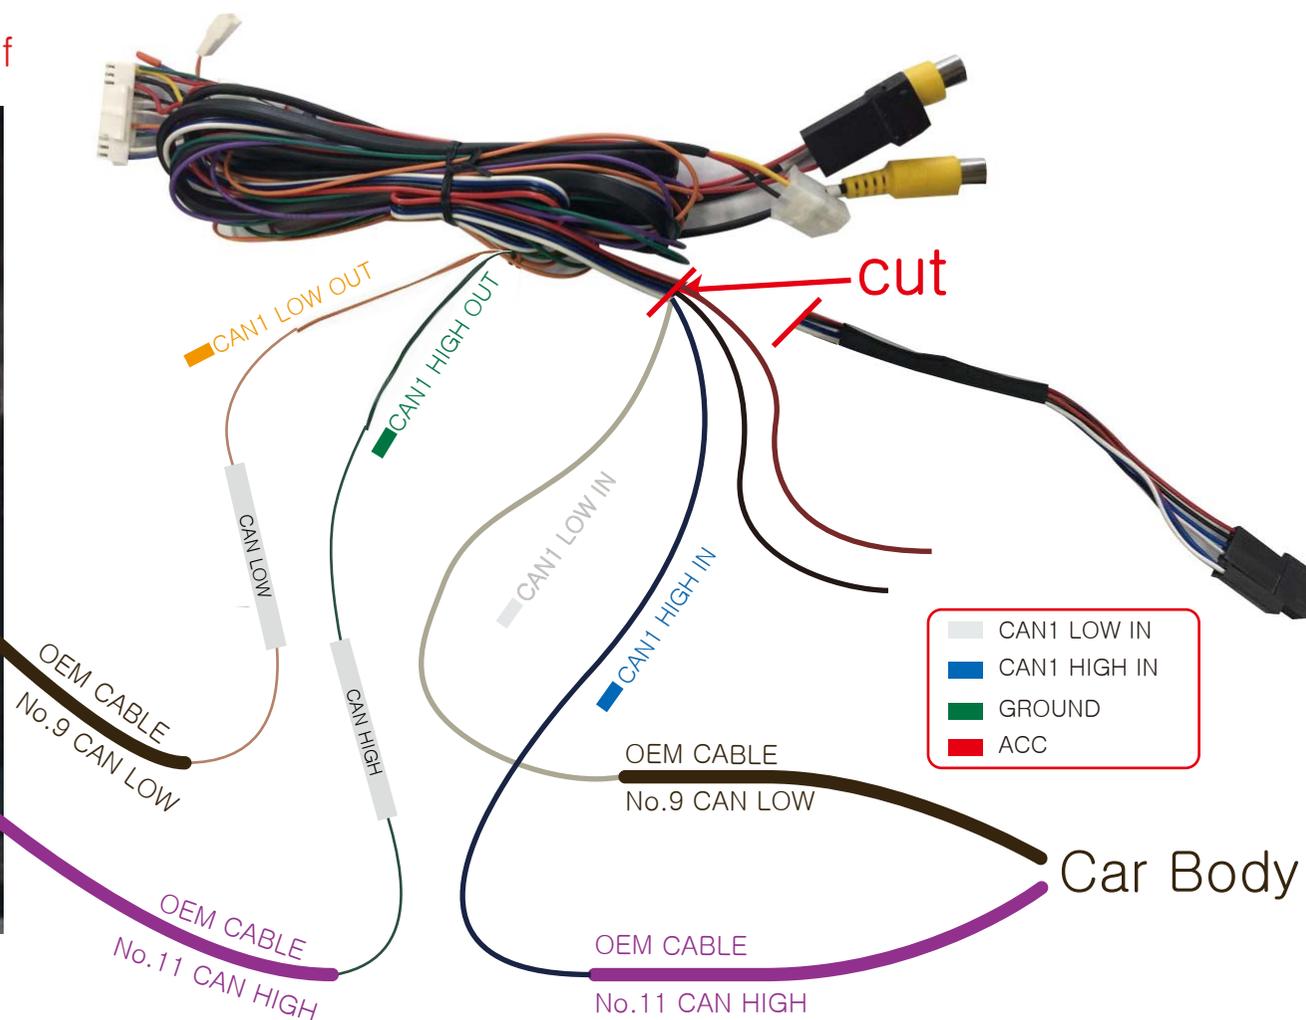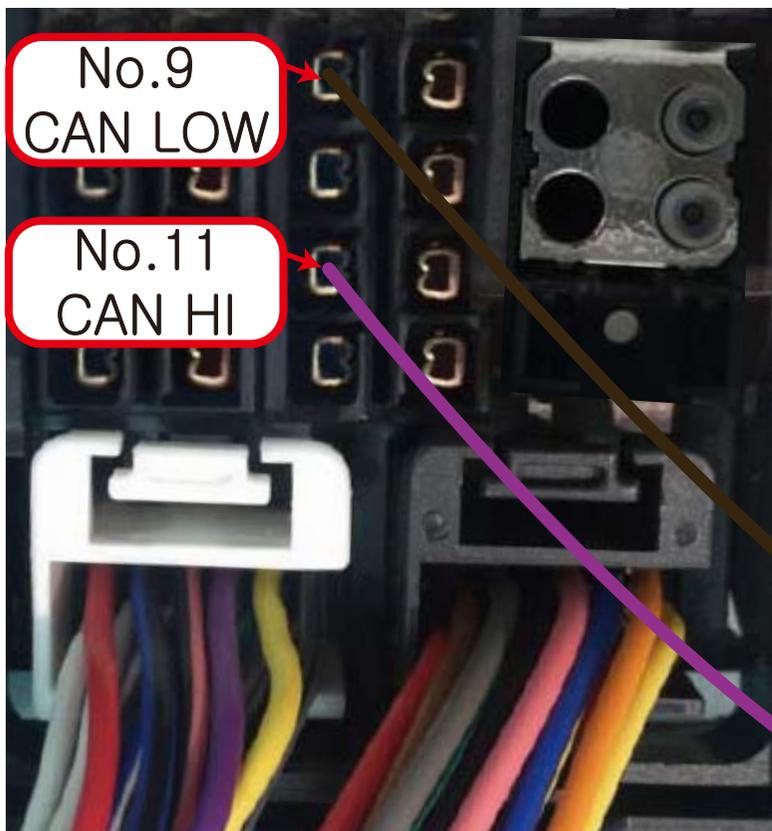

Please install followed above installation if you install both of Video Interface and TV free.

# INSTALLATION – POWER CAN

Plug and Play

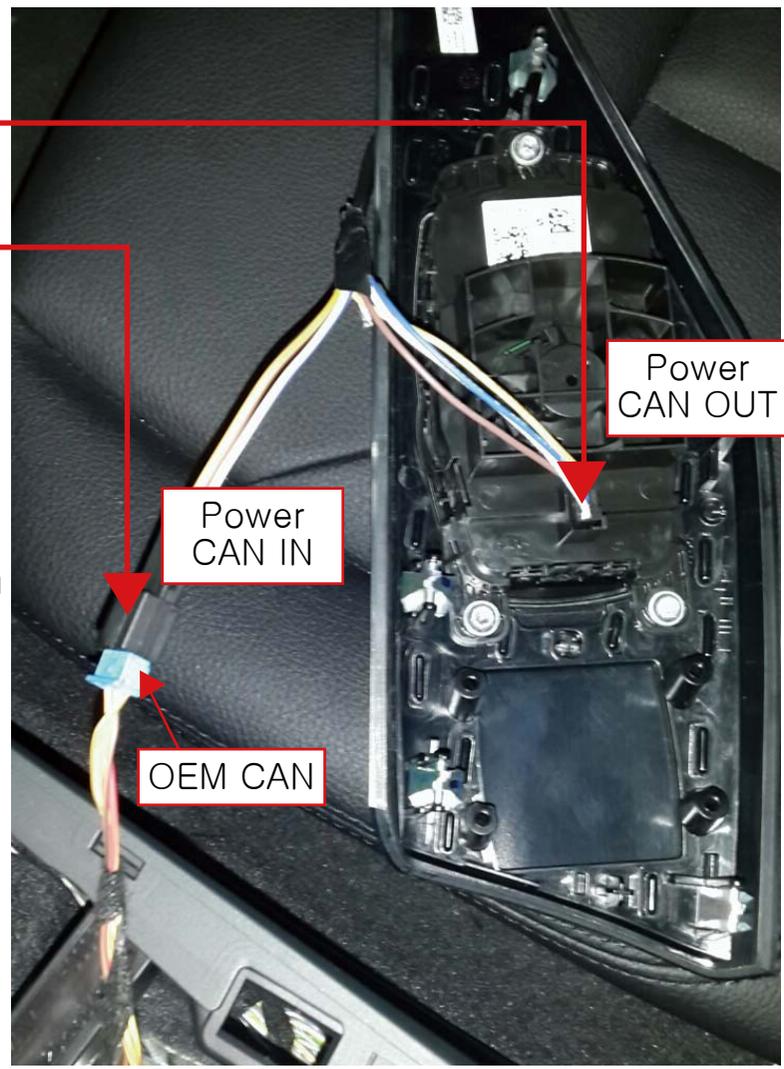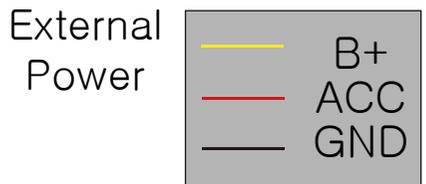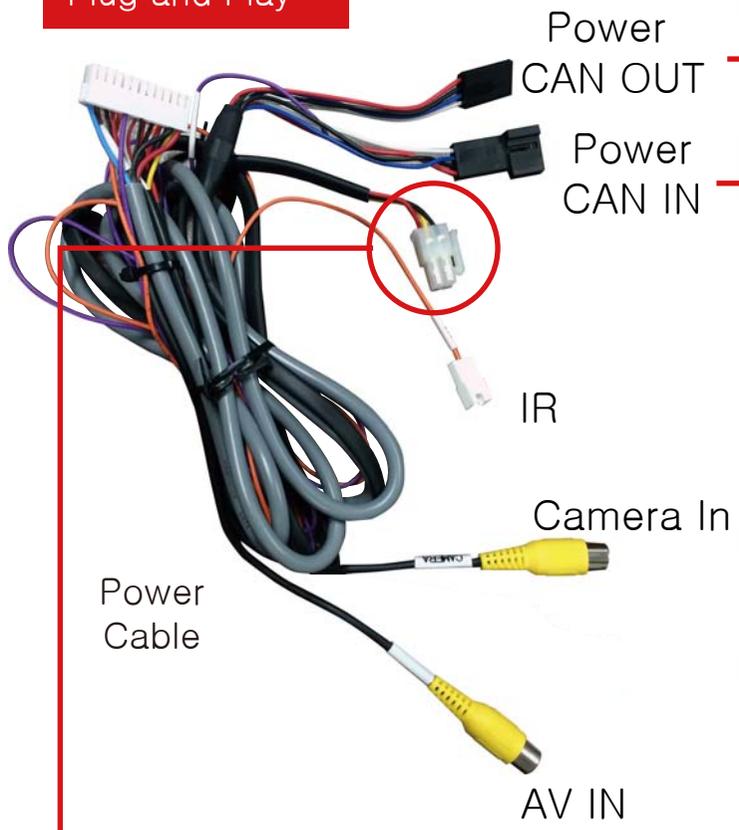

## METHOD OF PIP MODE SWITCH

\* SWITCH PIP MODE ON AV SCREEN [HOLD  $\Delta$  BUTTON (12 O' CLOCK DIRECTION)]



[ ORIGINAL ]      [ AV ]



[ AV ]      [ ORIGINAL ]




[ AV FULL ]

## REAR VIEW SCREEN SIZE, PIP POSITION







PRESS  $\Delta$  FOR LONG TO CHANGE SCREEN SIZE OF REAR VIEW

➔ 2016  
NEW X3, X4, 2, 3, 4 SERIES  
8.8" MONITOR

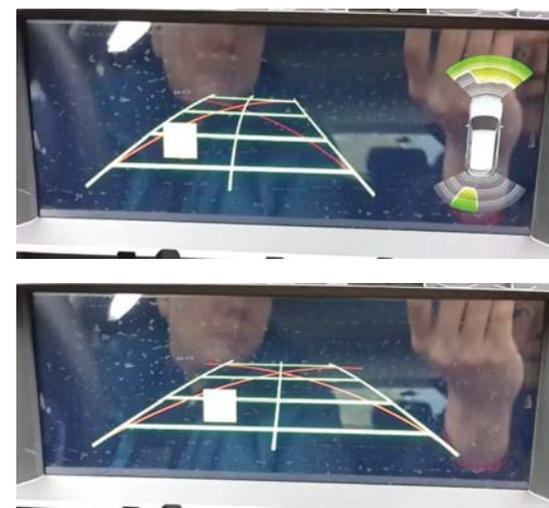


# DTV & DVD TOUCH IR CONTROL

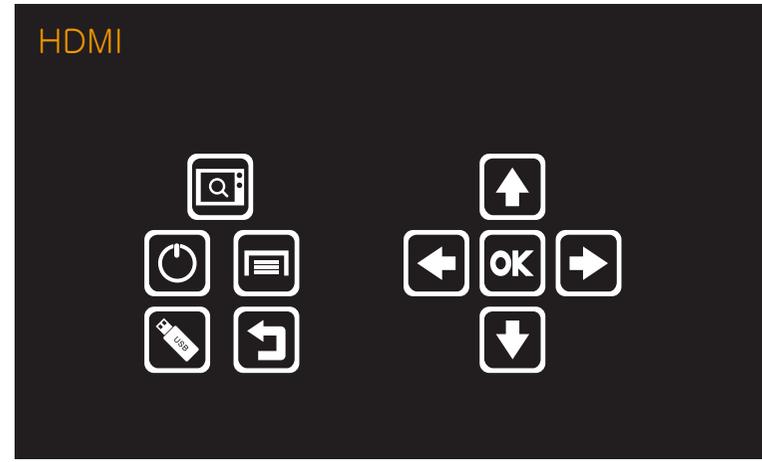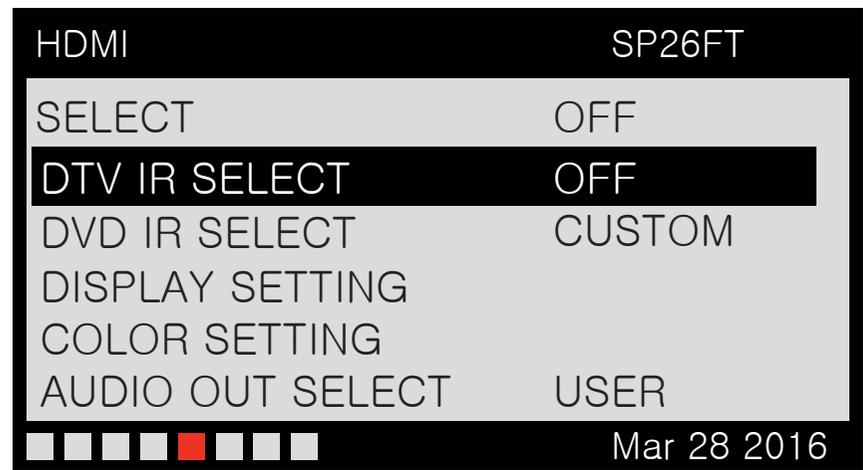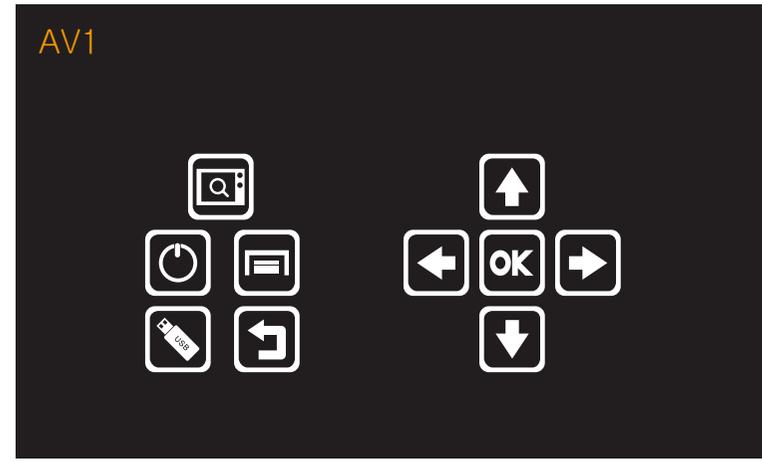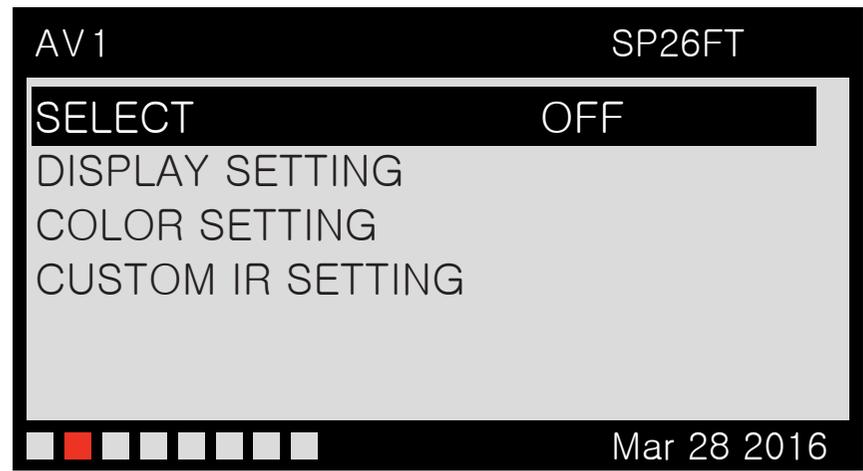

You can use touch icon to touch IR control after the DTV& DVD adjusted by us.

# METHOD OF MODE SWITCH

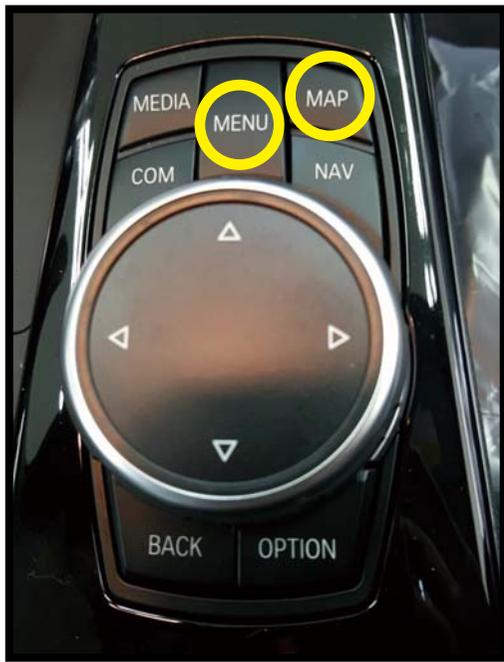

PRESS  ,  BUTTON 2S FOR SWITCHING MODE

PRESS  ,  BUTTON SHORT FOR SWITCHING MODE

OEM → GPS → AV1 → AV2 → AV3 → HDMI

PRESS  BUTTON OF STEERING WHEEL 7S FOR SWITCHING FUNCTION ON/OFF


## METHOD OF REAR MODE SWITCH

SETTING	SP26FT
FRONT CAMERA	OFF
OEM FRONT CAMERA	5 Sec
<b>RTC</b>	<b>ON</b>
REAR SEL	CVBS
V MOTION	ON
QUICK MENU	OFF


■ ■ ■ ■ ■ ■ ■ ■

Mar 28 2017


RTC Function : The screen will switch between OEM rear camera and external camera input every time you hold jog shuttle to the right as below images showed.

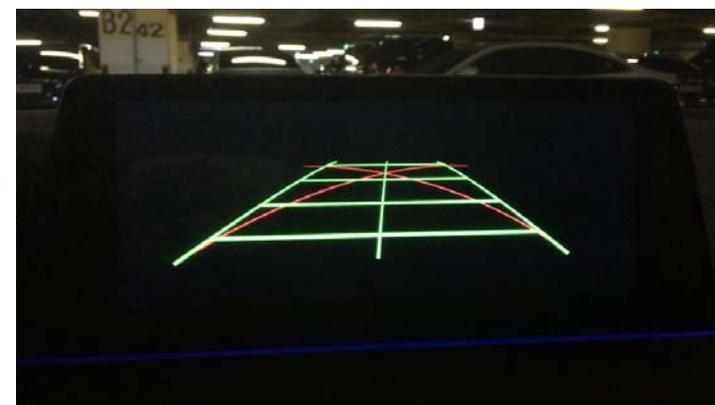


# QUICK MENU

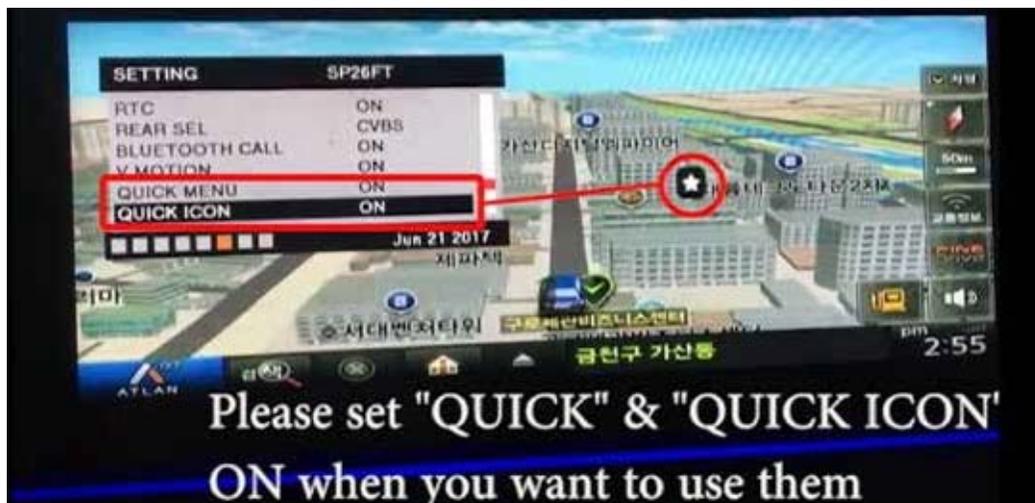

# HOW TO CONNECT VIDEO AUDIO WHEN YOU ONLY USE ONE AV INPUT

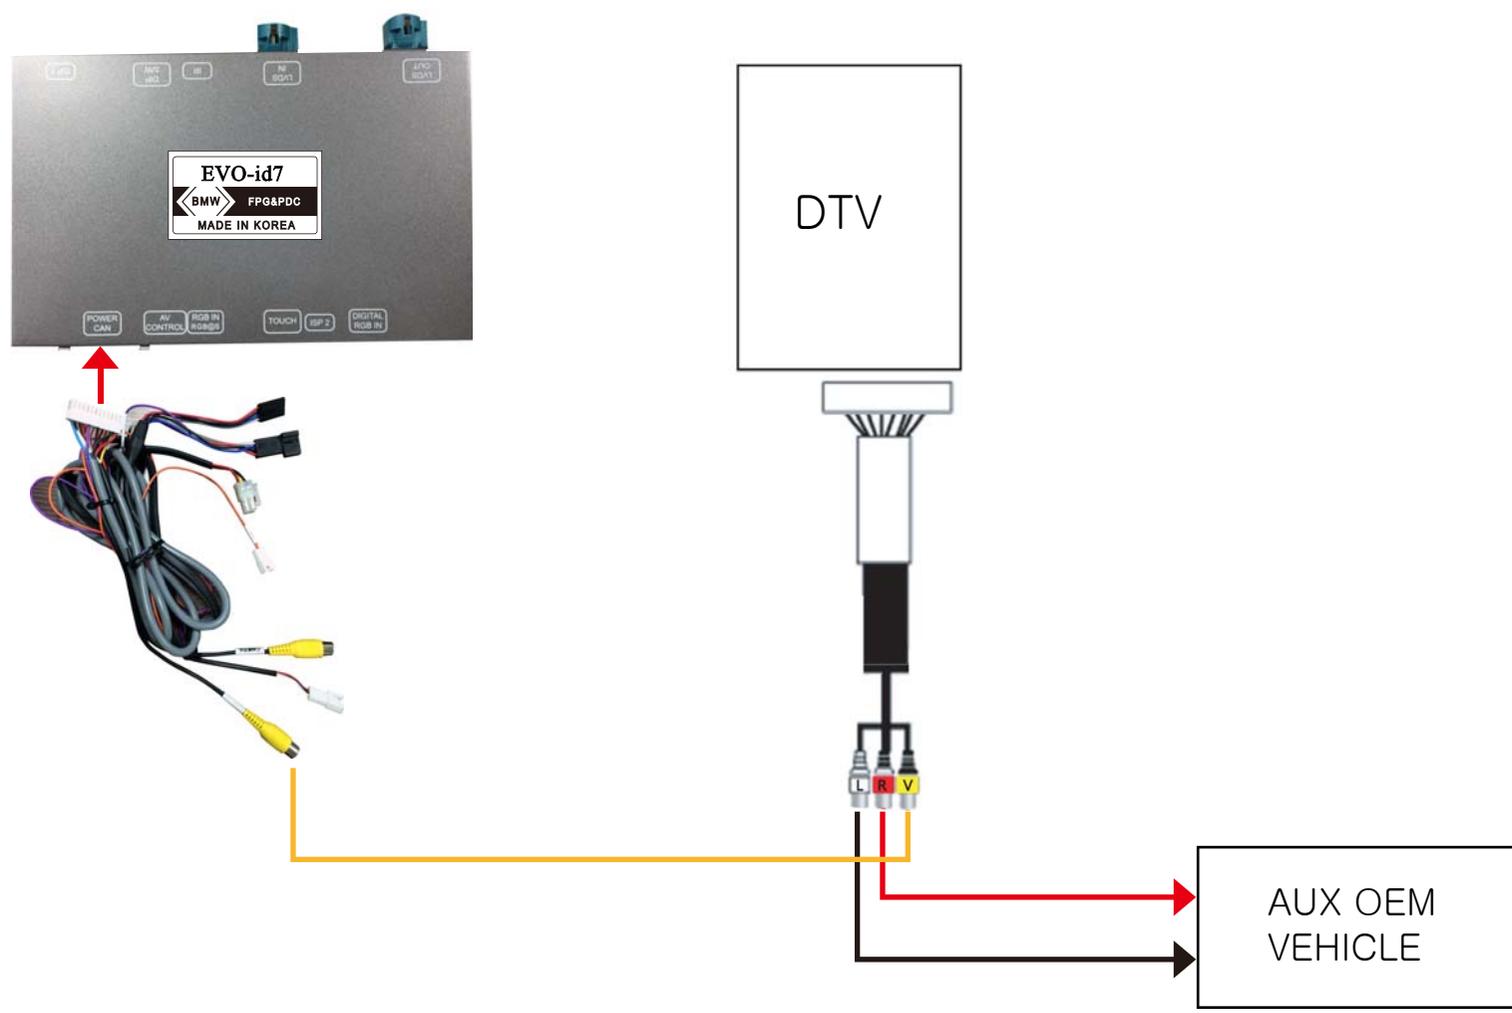

# HOW TO CONNECT VIDEO AUDIO WHEN YOU USE MORE THAN 2 AV INPUTS

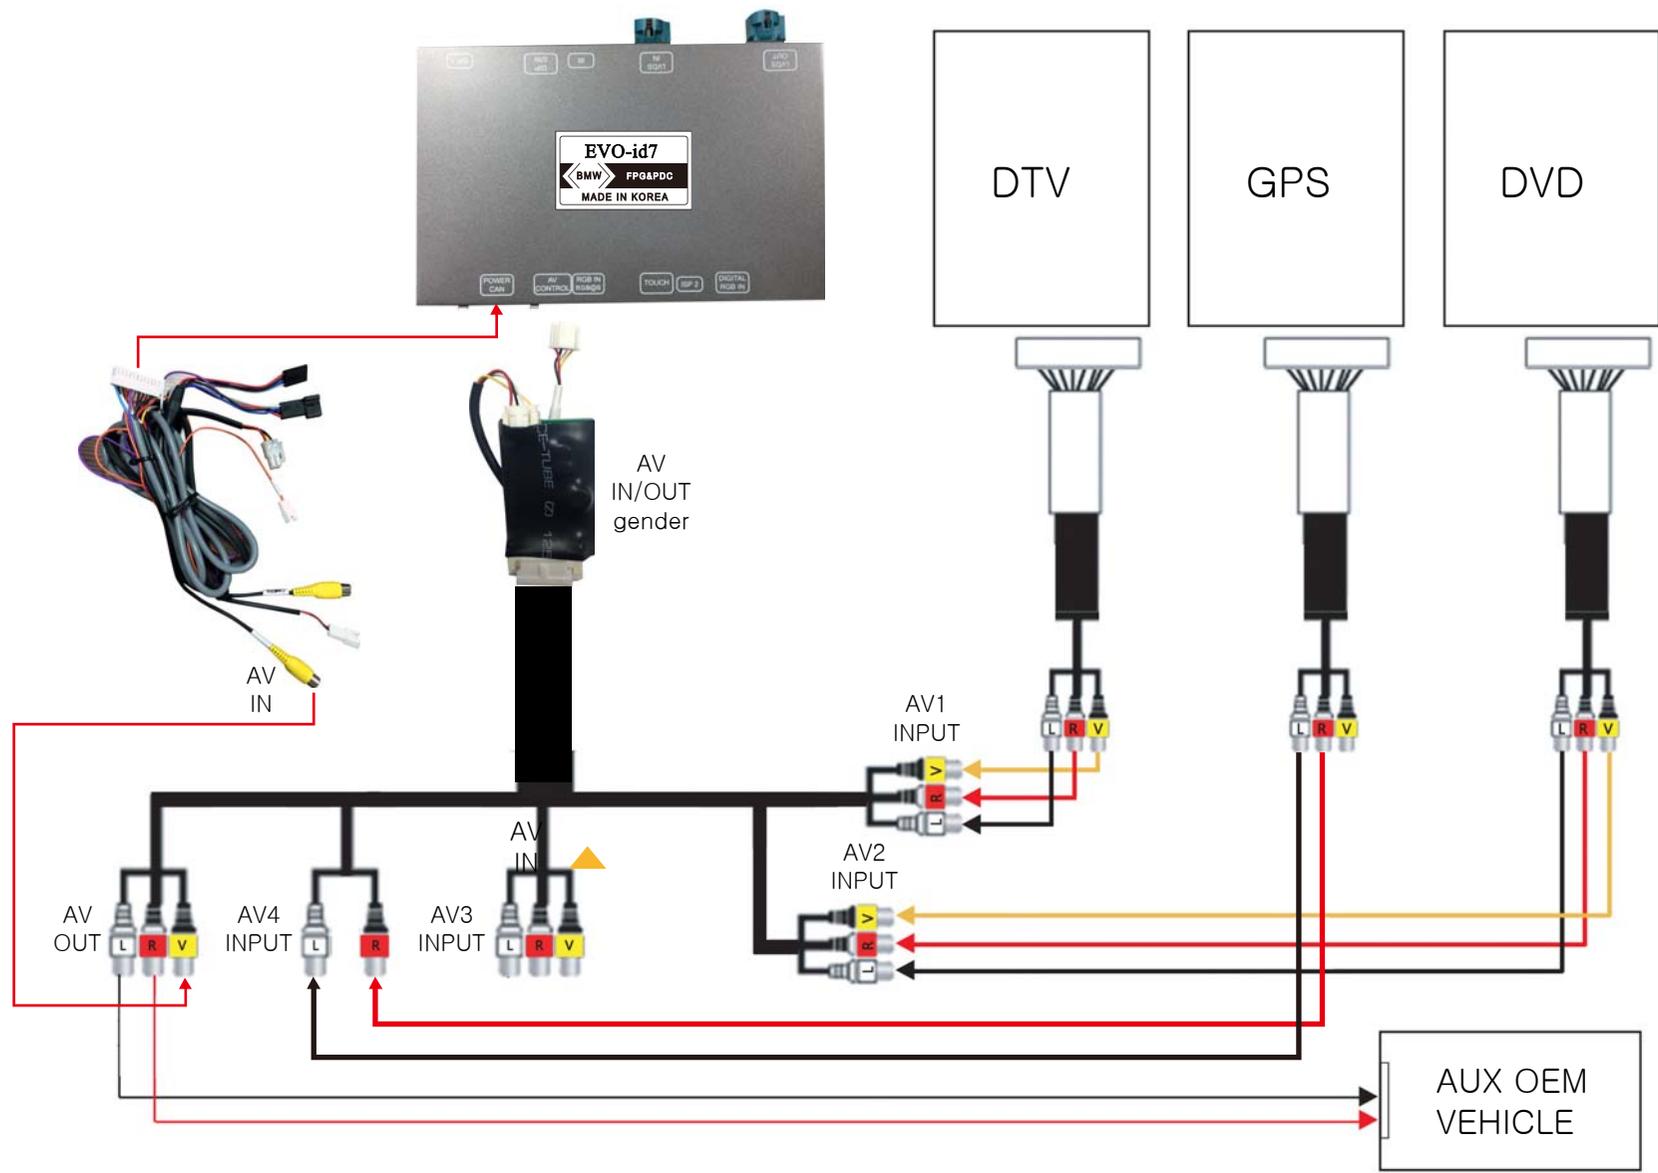


# 1. OSD MENU

There are two types of OSD menu as followed pictures.

[Video OSD Menu] is use for setting NAVI, AV1/2/3, video of HDMI and detailed features.

[Rear OSD Menu] is use for setting detailed features of rear camera mode.

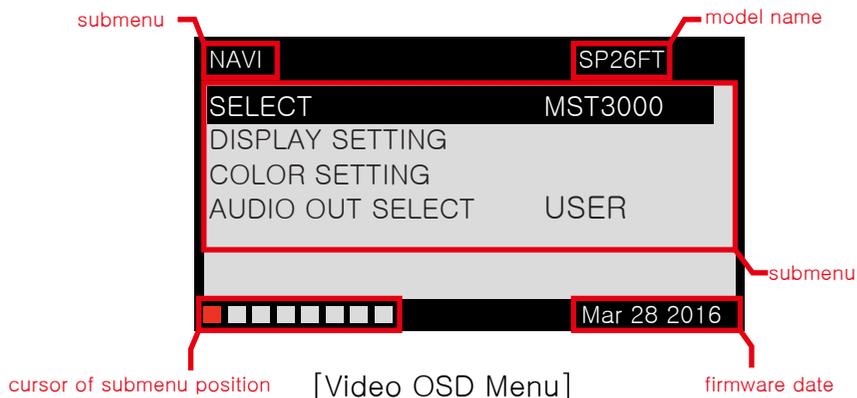

[Video OSD Menu]



[Rear OSD Menu]

## 1-1. THE METHOD HOW TO ENTER TO OSD MENU

[Video OSD Menu] The method how to enter to Video OSD Menu is press <sup>1</sup> **OK** button for 4times by R/C, on Navi, AV1, AV2, AV3, HDMI modes. numbers will display per press on screen. Finally, Please press <sup>2</sup> button to enter when the screen appear number 4.


[Rear OSD Menu] The method how to enter to Rear OSD Menu is same as aboce method.

(pulting reverse gear to move the rear camera mode.)



[INTERFACE R/C]

## 2. Detailed features of [Video OSD]

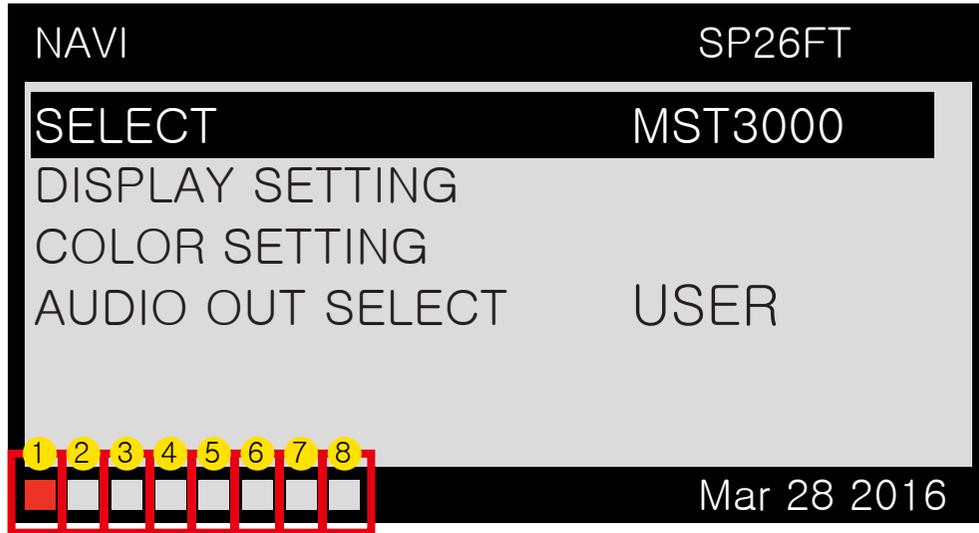

[NAVI SETTING]



- ① NAVI SETTING
- ② AV1 SETTING
- ③ AV2 SETTING
- ④ AV3 SETTING
- ⑤ HDMI SETING
- ⑥ FRONT CAMERA SETTING
- ⑦ INFORMATION
- ⑧ EXIT

### 2-1. NAVI

#### 2-1(1). SELECT

Select compatible model for GPS Box video output.



If there aren't compatible model, Please select one of models which video output almost completely. And then adjust the video size in Display setting.

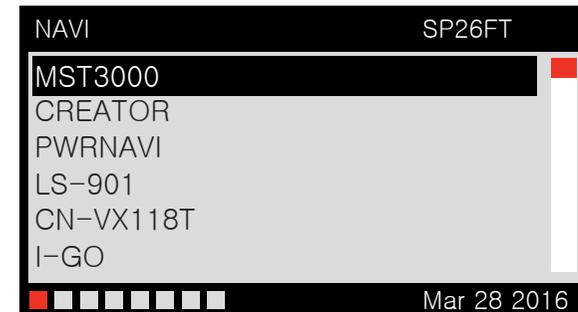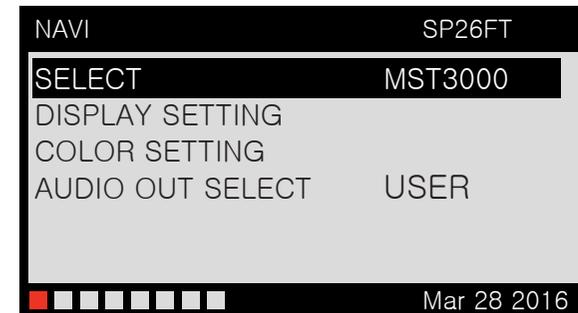

## 2-1. NAVI

### 2-1(2). DISPLAY SETTING

These are adjustment functions for video output of GPS Box which can't compatible with Display screen size.

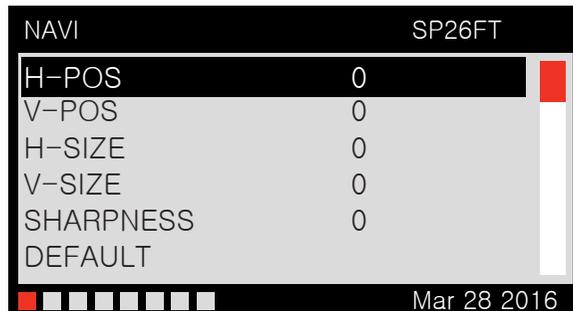
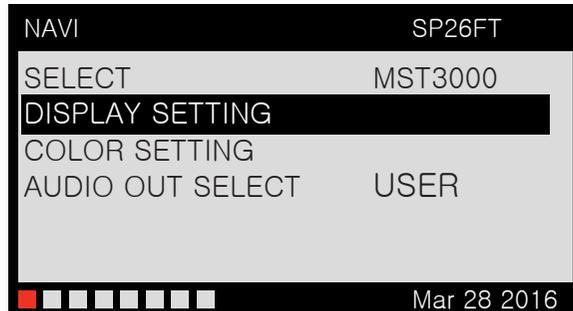


- H-POS : Horizontal movement
- V-POS : Vertical movement
- H-SIZE : Horizontal enlargement or reduction
- V-SIZE : Vertical enlargement or reduction
- SHARPNESS : adjust the sharpness
- DEFAULT : Initialization

## 2-1. NAVI

### 2-1(3). COLOR SETTING

These are adjustment function for video contrast and video brightness of GPS Box.

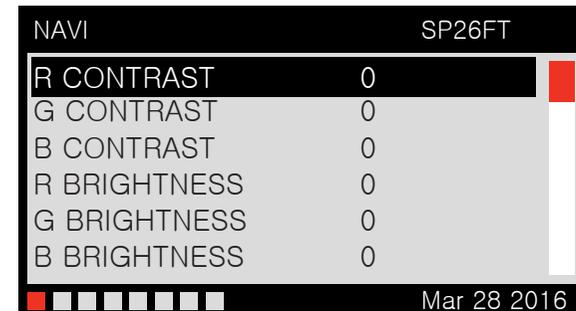
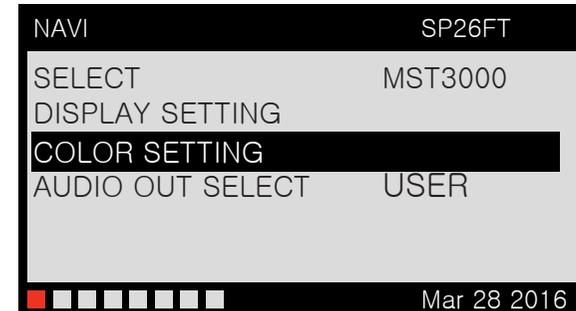


- R CONTRAST : adjust red of contrast
- G CONTRAST : adjust green of contrast
- B CONTRAST : adjust blue of contrast
- R BRIGHTNESS : adjust red of brightness
- G BRIGHTNESS : adjust green of brightness
- B BRIGHTNESS : adjust blue of brightness
- DEFAULT : Initialization

## 2-1. NAVI


### 2-1(4). AUDIO OUT SELECT

※ ONLY USEFUL WHEN USING AV GENDER ※

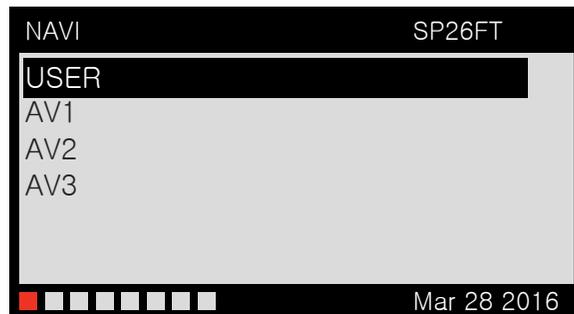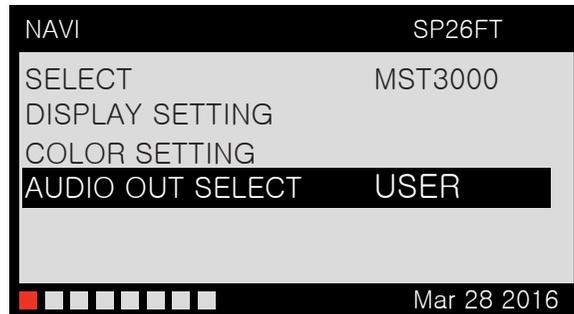

- USER : OUTPUT AUDIO OF WHICH MODE SWITCH BEFORE THE NAVI MODE.
- AV1 : OUTPUT AUDIO WHICH ALREADY INPUT AV1 OF AV GENDER
- AV2 : OUTPUT AUDIO WHICH ALREADY INPUT AV2 OF AV GENDER
- AV3 : OUTPUT AUDIO WHICH ALREADY INPUT AV3 OF AV GENDER

## 2-2. AV1(DTV)/ AV2(DVD)/AV3(RECORDER)


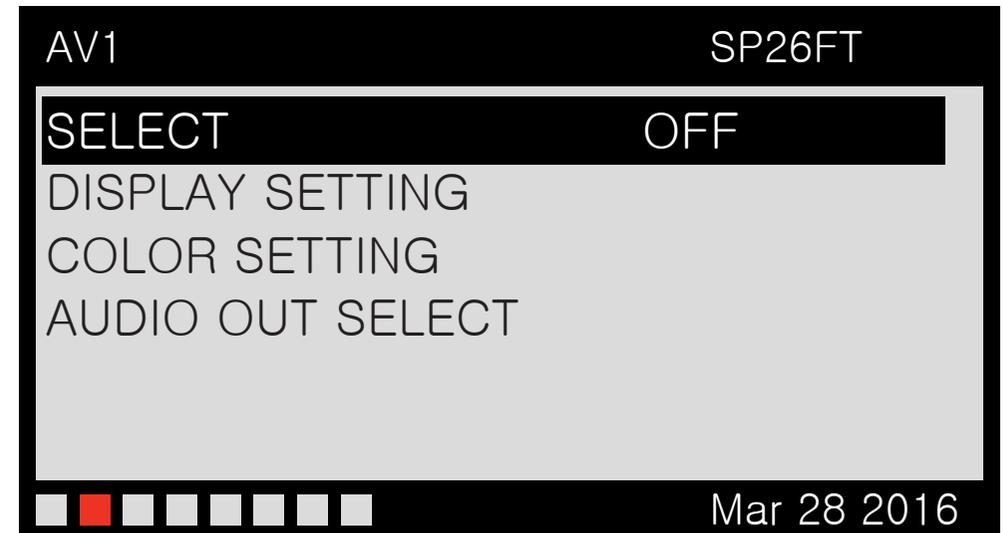


[AV SETTING]

## 2-2. AV1(DTV)/ AV2(DVD)/ AV3(RECORDER)

### 2-2(1). SELECT

PLEASE USE AV MODES, OR SELECT CONNECTED DEVICE OF AV IN ORDER TO CONTROL.

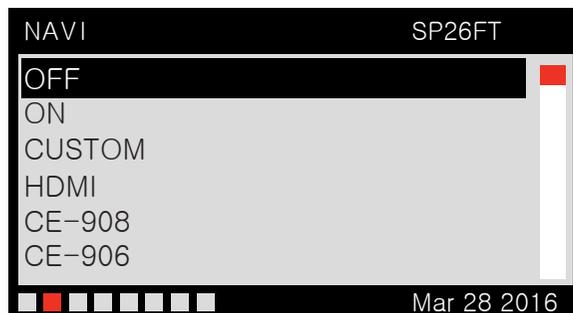
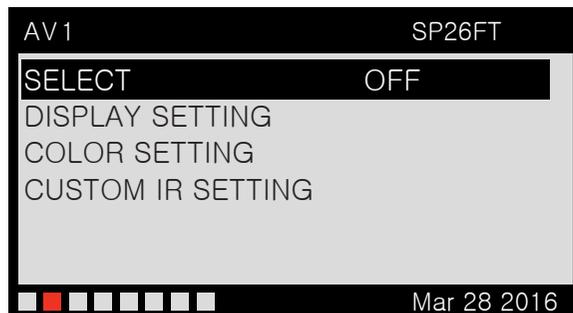


- OFF : DO NOT USE AV MODES
- ON : USE AV MODES
- CUSTOM : USE AV MODES AND CONTROL BY CUSTOM.
- MODEL LIST : USE AV MODES AND CONTROL SELECTED AV MODEL BY IR.

## 2-2. AV1(DTV)/ AV2(DVD)/ AV3(RECORDER)

### 2-2(2). DISPLAY SETTING

THESE ARE ADJUSTMENT FUNCTIONS FOR VIDEO OUTPUT OF AV WHICH CAN'T COMPATIBLE WITH DISPLAY SCREEN SIZE.

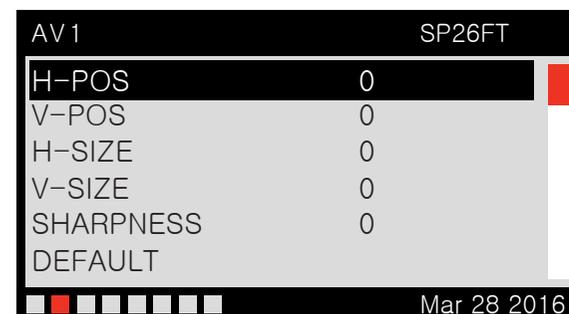
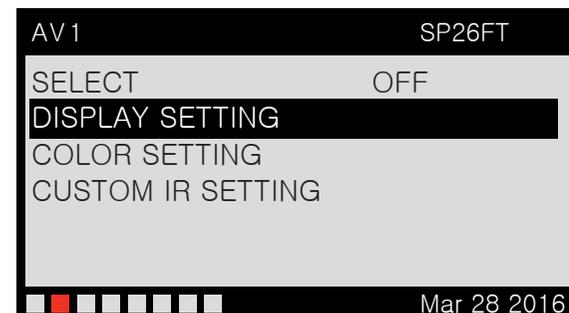


- H-POS : HORIZONTAL MOVEMENT
- V-POS : VERTICAL MOVEMENT
- H-SIZE : HORIZONTAL ENLARGEMENT OR REDUCTION
- V-SIZE : VERTICAL ENLARGEMENT OR REDUCTION
- SHARPNESS : ADJUST THE SHARPNESS
- DEFAULT : INITIALIZATION

## 2-2. AV1(DTV)/ AV2(DVD)/ AV3(RECORDER)

### 2-2(3). COLOR SETTING

THESE ARE ADJUSTMENT FUNCTIONS FOR VIDEO CONTRAST VIDEO BRIGHTNESS OF AV.

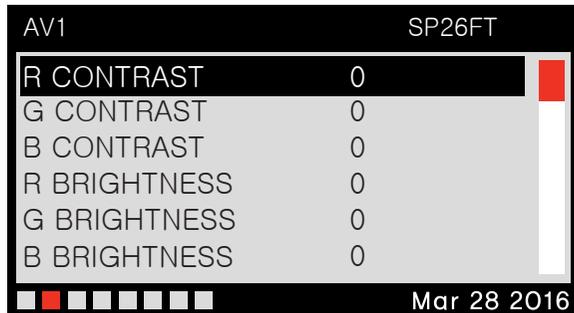
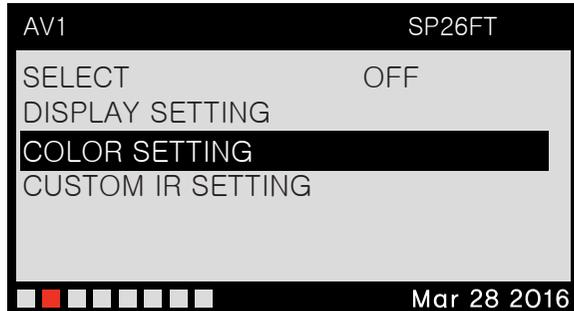


- R CONTRAST : ADJUST RED OF CONTRAST
- G CONTRAST : ADJUST GREEN OF CONTRAST
- B CONTRAST : ADJUST BLUE OF CONTRAST
- R BRIGHTNESS : ADJUST RED OF BRIGHTNESS
- G BRIGHTNESS : ADJUST GREEN OF BRIGHTNESS
- B BRIGHTNESS : ADJUST BLUE OF BRIGHTNESS
- DEFAULT : INITIALIZATION

## 2-2. AV1(DTV)/ AV2(DVD)/ AV3(RECORDER)

### 2-2(4). CUSTON IR SETTING


IN ORDER TO USE IR CONTROL WHICH MODEL CAN NOT SUPPORT ON [SELECT MENU]. USER CAN INPUT IR CODE BY THEMSELVES.

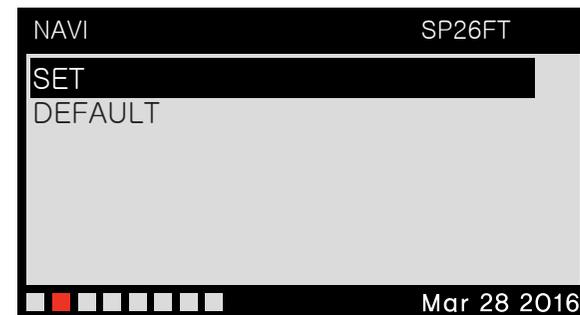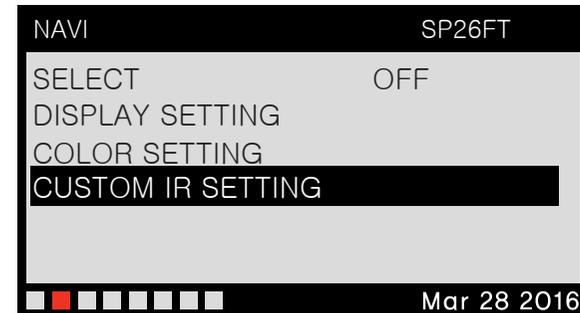


- SET : USERS CAN INPUT IR CODE BY THEMSELVES IN ORDER TO CONTROL CONNECTED AV INPUTS.
- DEFAULT : INITIALIZATION

2-2. AV1(DTV)/ AV2(DVD)/ AV3(RECORDER)  
 2-2(5). CUSTON IR SETTING


1 [ICON SELECT]

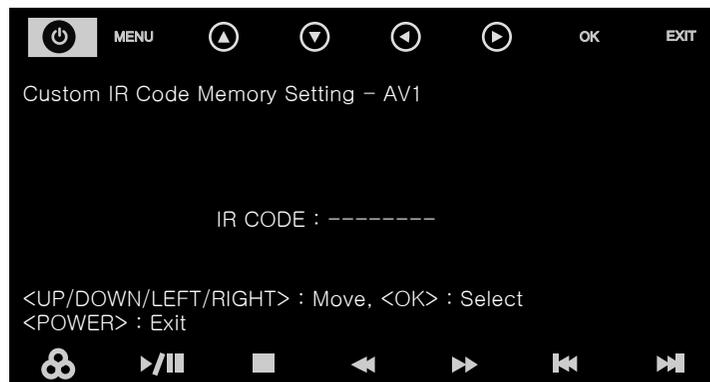


2 [IR CODE INPUT]

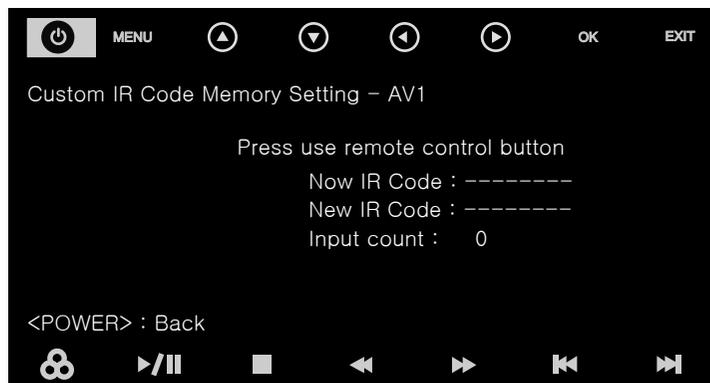

3 [IR CODE INPUT]

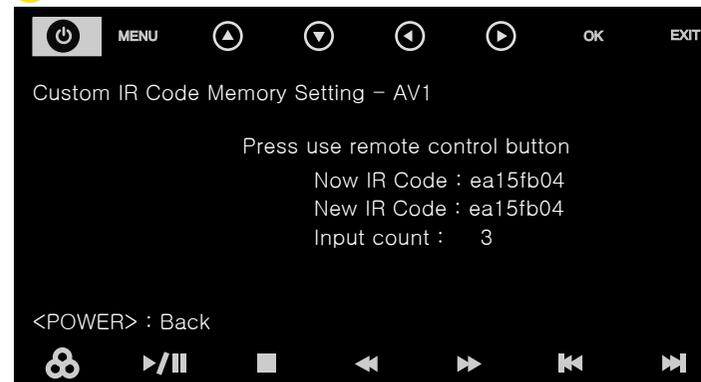


4 [IR CODE INPUT FINISHED]

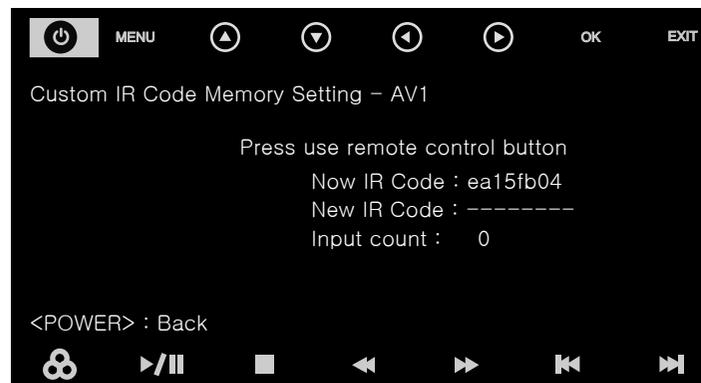

- PLEASE SELECT THE SET MODE, IF SCREEN DISPLAY SAME AS ABOVE SCREENS. PLEASE SELECT ONE ICON AND INPUT YOUR IR CODE. NUMBERS WILL DISPLAY PER PRESS FM 1 TO 0 WHEN YOU FILL INRO IR CODE, IT WILL DISPLAY ON “NOW IR CODE”. IF YOU FINISH SETTING ALL ICONS YOU WANT. PLEASE PRESS  BUTTON TO FINISH SETTING.

※PLEASE SELECT [CUSTOM], IN ORDER TO USE INPUT FUNCTIONS ON [CUSTOM]※

2-3. HDMI


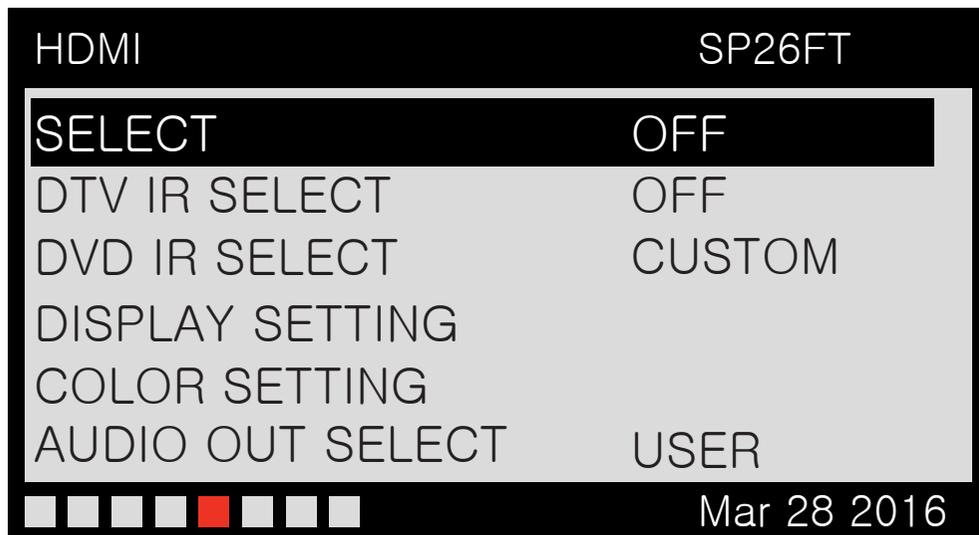


[HDMI SETTING]

2-3. HDMI




2-3(1). SELECT

PLEASE SELECT [HD95E] IN ORDER TO USE HDMI INPUT.

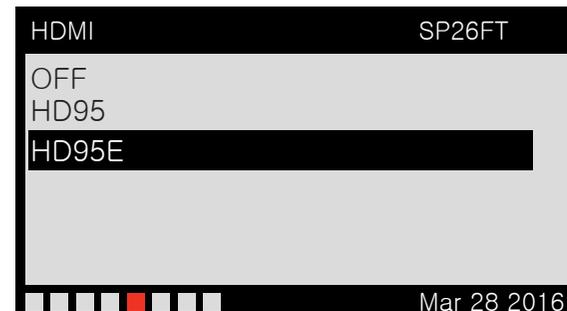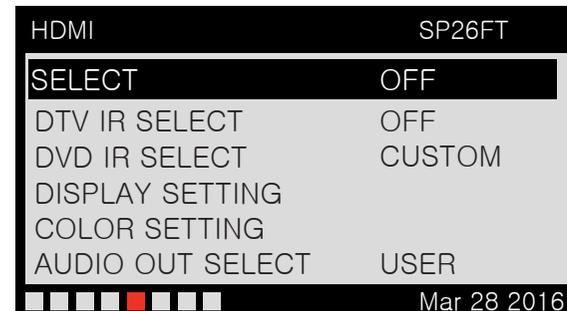

2-3. HDMI



2-3(2). DTV IR SELECT

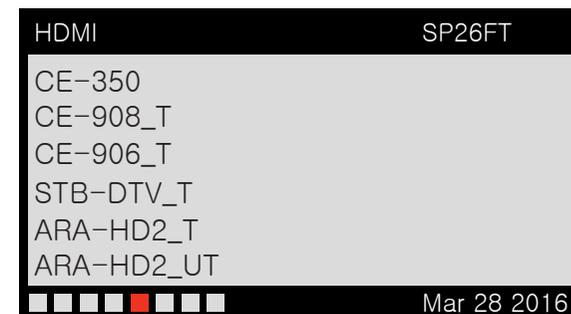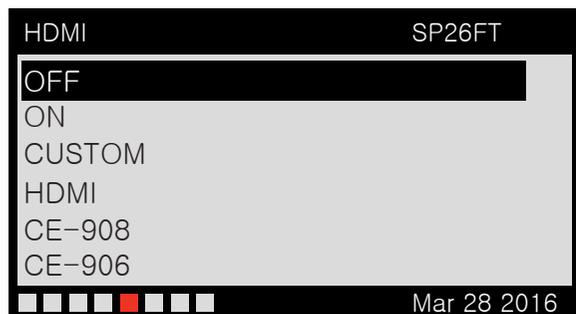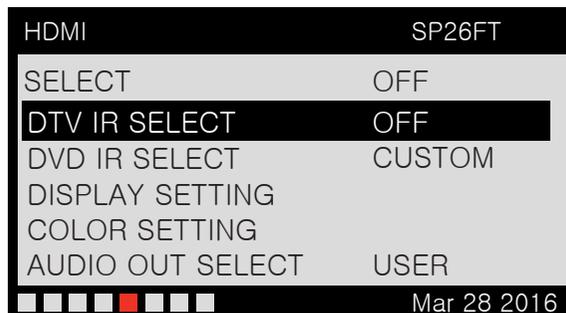

## 2-3. HDMI

### 2-3(3). DVD IR SELECT



PLEASE SELECT [HD95E] IN ORDER TO USE HDMI INPUT.

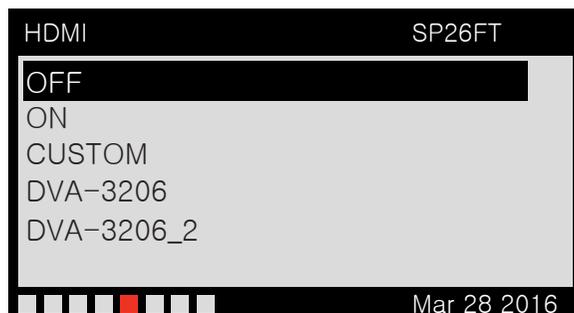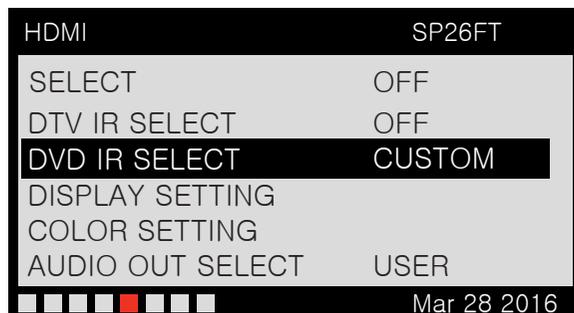

## 2-3. HDMI

### 2-3(4). DISPLAY SETTING



THESE ARE ADJUSTMENT FUNCTIONS FOR VIDEO OUTPUT OF HDMI WHICH CAN'T COMPATIBLE WITH DISPLAY SCREEN SIZE.

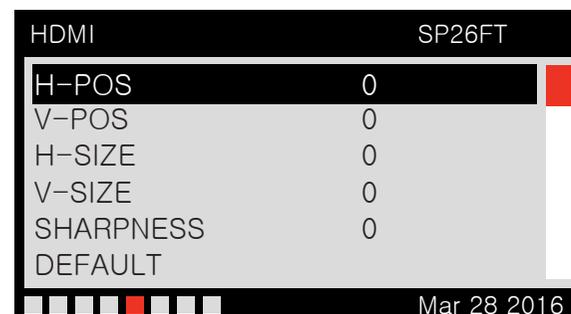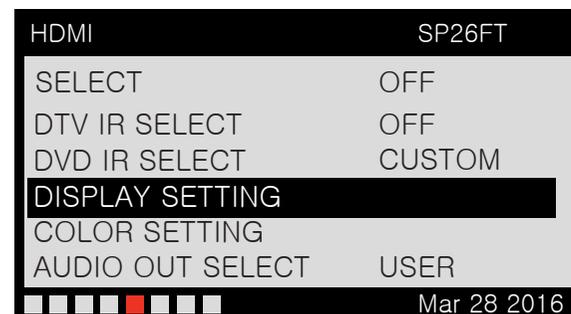

- H-POS : HORIZONTAL MOVEMENT
- V-POS : VERTICAL MOVEMENT
- H-SIZE : HORIZONTAL ENLARGEMENT OR REDUCTION
- V-SIZE : VERTICAL ENLARGEMENT OR REDUCTION
- SHARPNESS : ADJUST THE SHARPNESS
- DEFAULT : INITIALIZATION

## 2-3. HDMI

### 2-3(5). COLOR SETTING

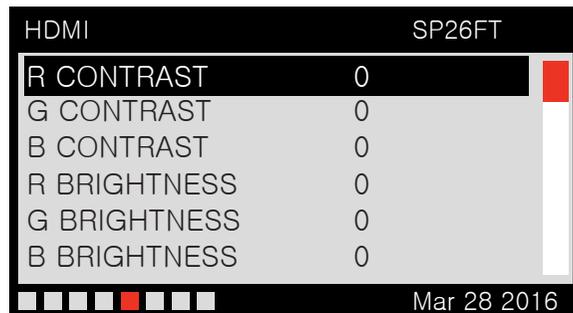
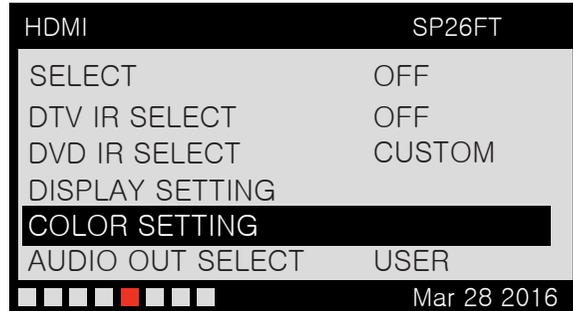


- R CONTRAST : ADJUST RED OF CONTRAST
- G CONTRAST : ADJUST GREEN OF CONTRAST
- B CONTRAST : ADJUST BLUE OF CONTRAST
- R BRIGHTNESS : ADJUST RED OF BRIGHTNESS
- G BRIGHTNESS : ADJUST GREEN OF BRIGHTNESS
- B BRIGHTNESS : ADJUST BLUE OF BRIGHTNESS
- DEFAULT : INITIALIZATION

## 2-3. HDMI


### 2-3(6). AUDIO OUT SELECT

THESE ARE ADJUSTMENT FUNCTIONS FOR VIDEO OUTPUT OF HDMI WHICH CAN'T COMPATIBLE WITH DISPLAY SCREEN SIZE.

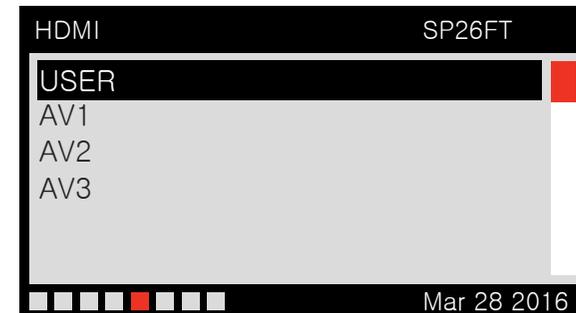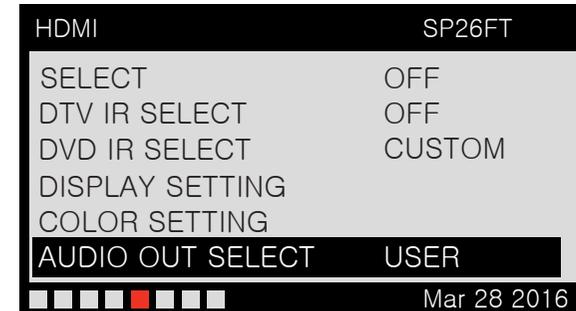

- H-POS : HORIZONTAL MOVEMENT
- V-POS : VERTICAL MOVEMENT
- H-SIZE : HORIZONTAL ENLARGEMENT OR REDUCTION
- V-SIZE : VERTICAL ENLARGEMENT OR REDUCTION
- SHARPNESS : ADJUST THE SHARPNESS
- DEFAULT : INITIALIZATION

## 2-4. SETTING


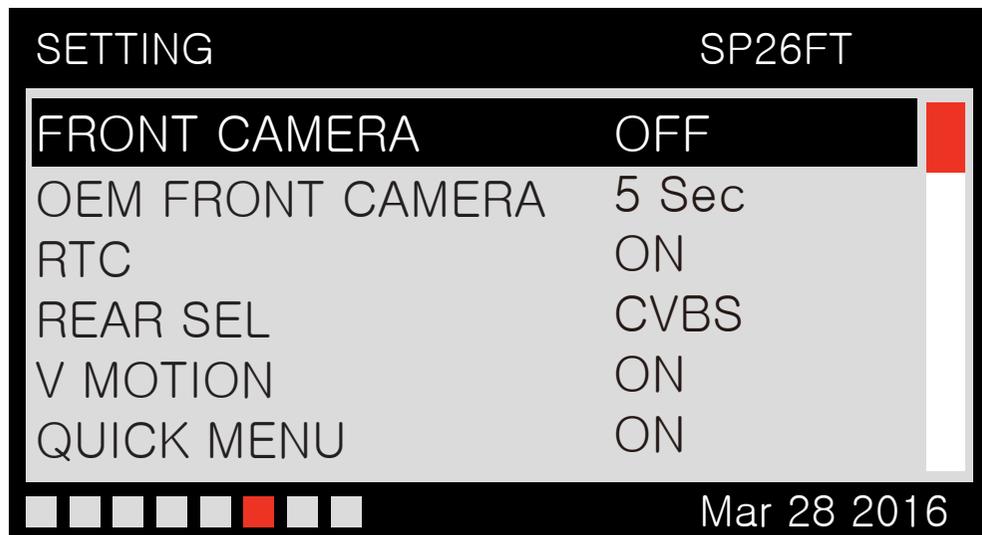


[OTHER SETTING]

## 2-4. SETTING

### 2-4(1). FRONT CAMERA

THIS SETTING FUNCTION USES FOR FRONT CAMERA. IT WILL DISPLAY REAR CAMERA INPUT WHEN PUT THE REVERSE GEAR. AND IT WILL DISPLAY FRONT CAMERA INPUT AUTOMATICALLY WHEN PUT BACK TO DRIVE GEAR. IT ALSO DISPLAY FRONT CAMERA INPUT AUTOMATICALLY FOR FEW SECONDS WHEN YOU ARE DRIVING.

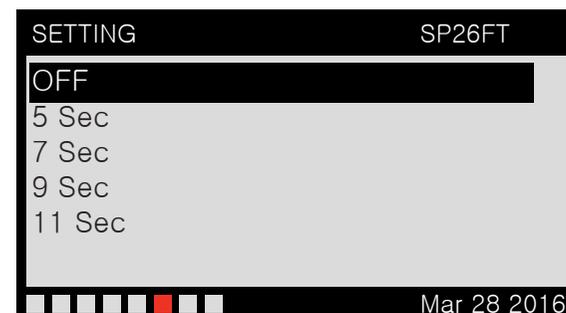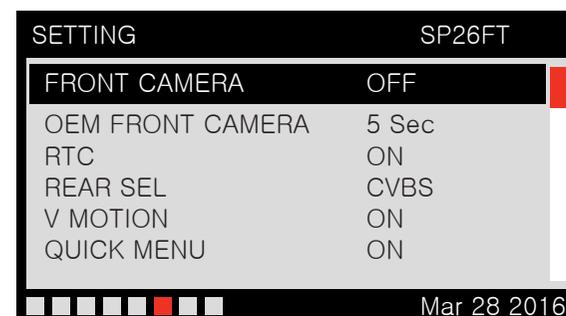

- OFF : DO NOT USE FRONT CAMERA
- 5 Sec : DISPLAY FRONT CAMERA INPUT FOR 5 SECONDS
- 7 Sec : DISPLAY FRONT CAMERA INPUT FOR 7 SECONDS
- 9 Sec : DISPLAY FRONT CAMERA INPUT FOR 9 SECONDS
- 11 Sec : DISPLAY FRONT CAMERA INPUT FOR 11 SECONDS

## 2-4. SETTING

### 2-4(2). OEM FRONT CAMERA


THESE ARE SETTING FUNCTIONS FOR USING FRONT CAMERA OF OEM.



- OFF : DO NOT USE FRONT CAMERA OF OEM
- 5 Sec : DISPLAY OEM FRONT CAMERA INPUT FOR 5 SECONDS
- 7 Sec : DISPLAY OEM FRONT CAMERA INPUT FOR 7 SECONDS
- 9 Sec : DISPLAY OEM FRONT CAMERA INPUT FOR 9 SECONDS
- 11 Sec : DISPLAY OEM FRONT CAMERA INPUT FOR 11 SECONDS

## 2-4. SETTING

### 2-4(3). RTC

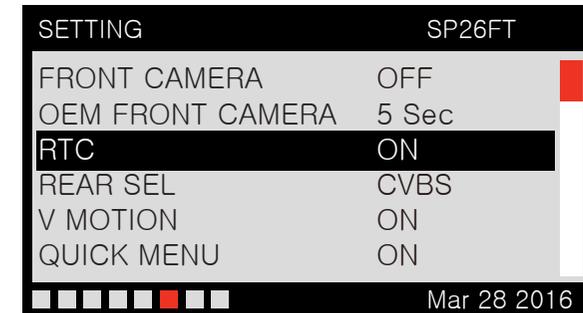

2-4. SETTING



2-4(4). REAR SEL



2-4. SETTING


2-4(5). V MOTION

DRIVER CAN WATCH DVD WHEN THEY ARE DRIVING IF THEY SET V MOTION ON BEFORE

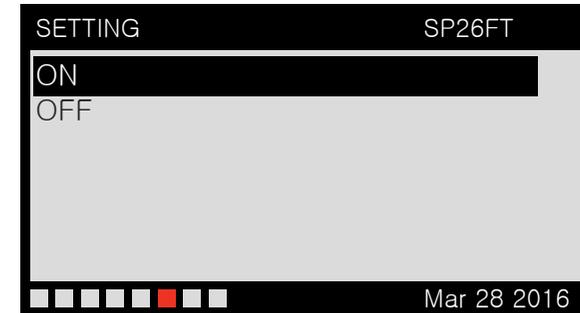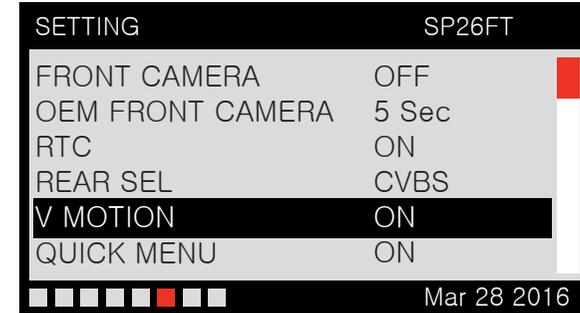



## 2-4. SETTING

### 2-4(6). QUICK MENU

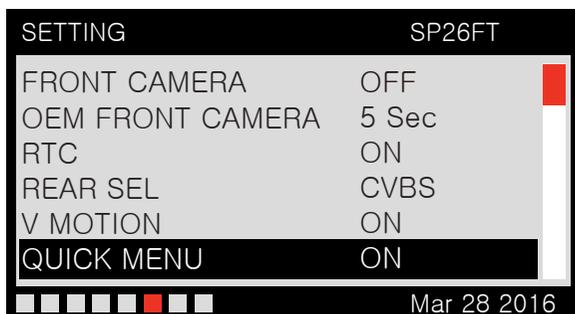

## 2-4. SETTING

### 2-4(7). QUICK ICON

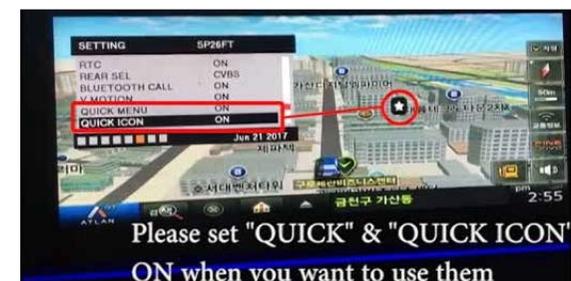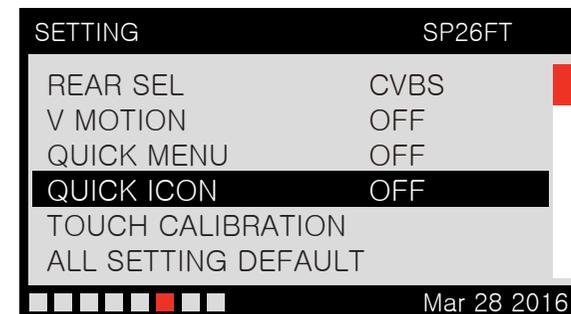



2-4. SETTING

2-4(8). TOUCH CALIBRATION



2-4. SETTING


2-4(9). ALL SETTING DEFAULT

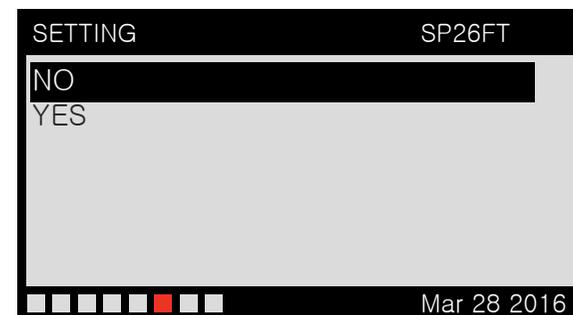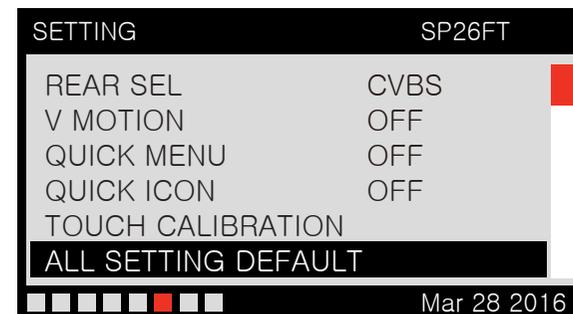

## 2-4. SETTING

### 2-4(10). EXIT



FINISH THE OSD MENU OR NOT.

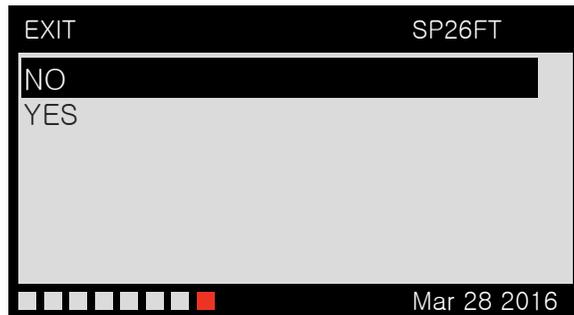

## 3. REAR OSD DETAILED FEATURES

### 3-1. FPG ON/OFF

SETTING FPG LINE ON/OFF.

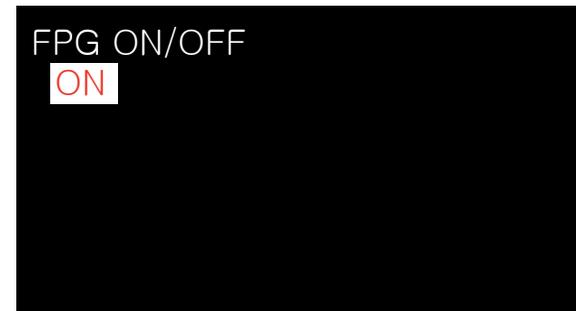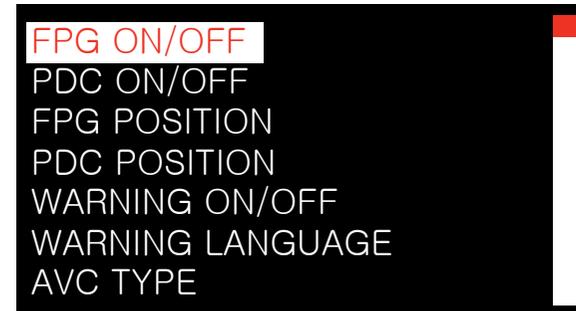

- ON : DISPLAY FPG LINE
- OFF : DO NOT DISPLAY FPG LINE

### 3-2. PDC ON/OFF

SETTING PDC ON/OFF.



- ON : DISPLAY PDC
- OFF : DO NOT DISPLAY PDC

### 3-3. FPG POSITION


ADJUST THE POSITION OF FPG LINE.



- V POS : MOVE VERTICAL DIRECTION OF FPG LINE
- H POS : MOVE HORIZONTAL DIRECTION OF FPG LINE
- DEFAULT : INITIALIZATION

### 3-4. PDC POSITION



ADJUST THE POSITION OF PDC.

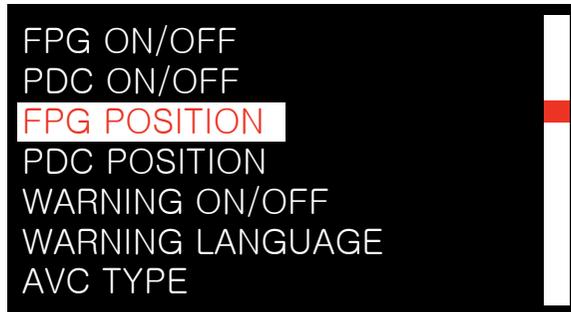

- RIGHT TOP : PDC DISPLAY ON THE UPPER RIGHT OF SCREEN
- LEFT TOP : PDC DISPLAY ON THE UPPER LEFT OF SCREEN

### 3-5. WARNING ON/OFF


SETTING WARNING ON/OFF.

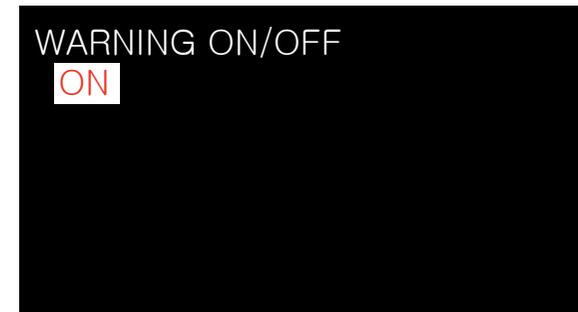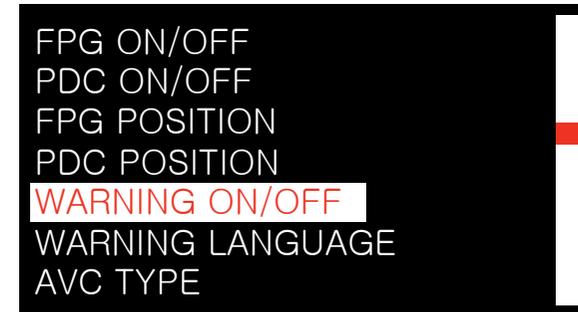

- ON : DISPLAY REAR WARNING
- OFF : DO NOT DISPLAY REAR WARNING

### 3-6. WARNING LANGUAGE


SETTING WARNING LANGUAGE.

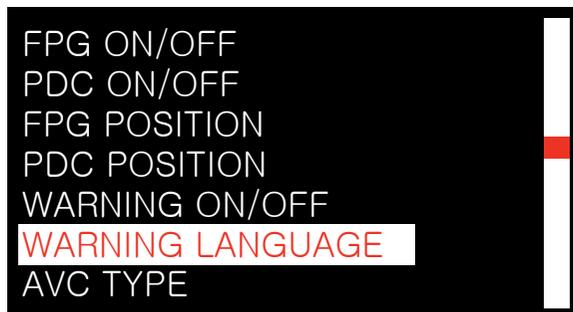

- ENGLISH
- KOREAN
- CHINESE

### 3-7. AVC TYPE


SETTING AROUND VIEW MODE.

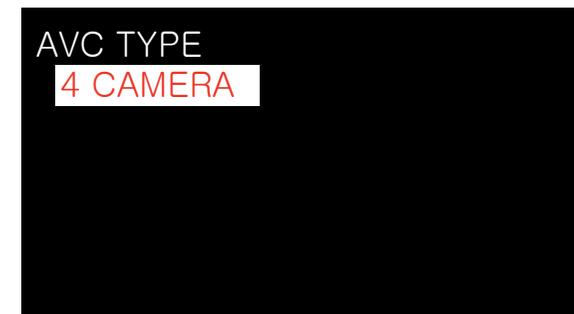

- OFF : DO NOT USE AROUND VIEW MODE
- OMNIVUE : USE AROUND VIEW BY OMNIVUE  
(SUPPORT AROUND VIEW PARKING LINE)
- 4 CAMERA : USE AROUND VIEW BY CHINESE 4 CAMERA  
(SUPPORT AROUND VIEW PARKING LINE)

### 3-8. AVC POSITION


ADJUST THE POSITION OF AROUND VIEW LINE.

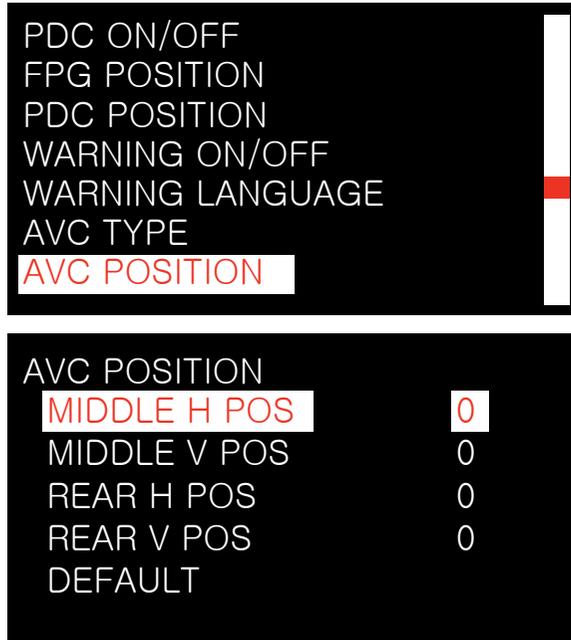

- MIDDLE H POS : ADJUST SIDE LINE HORIZONTAL POSITION ON AVC
- MIDDLE V POS : ADJUST SIDE LINE VERTICAL POSITION ON AVC
- REAR H POS : ADJUST REAR LINE HORIZONTAL POSITION ON AVC
- REAR V POS : ADJUST REAR LINE VERTICAL POSITION ON AVC
- DEFAULT : INITIALIZATION

### 3-9. AVC TIME

THESE ARE SETTING METHOD WHEN USING AVC.  
IT WILL DISPLAY AVC WHEN PUT THE REVERSE GEAR, AND IT WILL STILL ACTIVE FOR PRE-DIFINED AMOUNT OF TIME, ONCE VEHICLE LEAVES REVERSE GEAR..

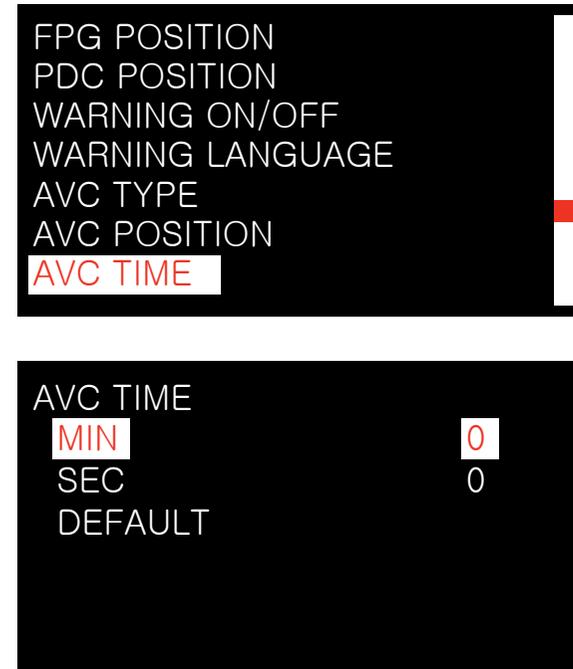

- MIN : SETTING FOR MINUTES
- SEC : SETTING FOR SECONDS
- DEFAULT : INITIALIZATION

### 3-10. CAM DISP SETTING



THESE ARE ADJUSTMENT FUNCTIONS FOR VIDEO OUTPUT OF REAR CAMERA WHICH CAN'T COMPATIBLE WITH DISPLAY SCREEN SIZE.



- V POS : VERTICAL MOVEMENT
- H POS : HORIZONTAL MOVEMENT
- V SIZE : VERTICAL ENLARGEMENT OR REDUCTION
- H SIZE : HORIZONTAL ENLARGEMENT OR REDUCTION
- SHARPNESS : ADJUST THE SHARPNESS
- DEFAULT : INITIALIZATION

### 3-11. CAM COLOR SETTING


THESE ARE ADJUSTMENT FUNCTIONS FOR VIDEO CONTRAST AND VIDEO BRIGHTNESS OF GPS BOX.

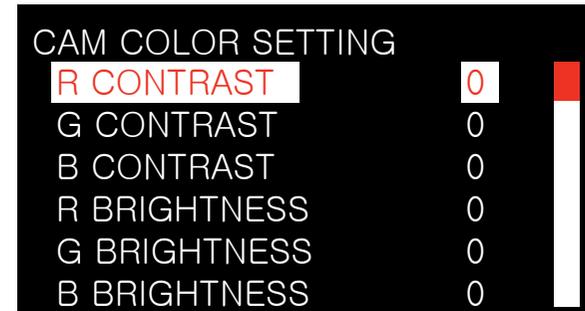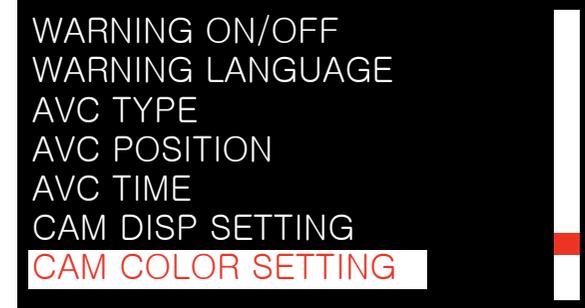

- R CONTRAST : ADJUST RED OF CONTRAST
- G CONTRAST : ADJUST GREEN OF CONTRAST
- B CONTRAST : ADJUST BLUE OF CONTRAST
- R BRIGHTNESS : ADJUST RED OF BRIGHTNESS
- G BRIGHTNESS : ADJUST GREEN OF BRIGHTNESS
- B BRIGHTNESS : ADJUST BLUE OF BRIGHTNESS
- DEFAULT : INITIALIZATION

### 3-12. OSD MENU POS

THESE ARE ADJUSTMENT FUNCTIONS FOR MOVING POSITION OF OSD MENU. IT WILL BE USED WHEN OVERSHADOWED SETTING IMPOSSIBLE.

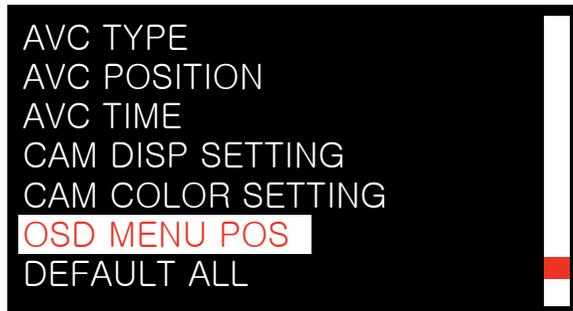


- RIGHT TOP : OSD MENU DISPLAY ON UPPER RIGHT OF SCREEN
- LEFT TOP : OSD MENU DISPLAY ON UPPER LEFT OF SCREEN

### 3-13. DEFAULT ALL

INITIALIZE ALL MODES OF REAR OSD MENU SETTING.



### 3-14. FW INFO

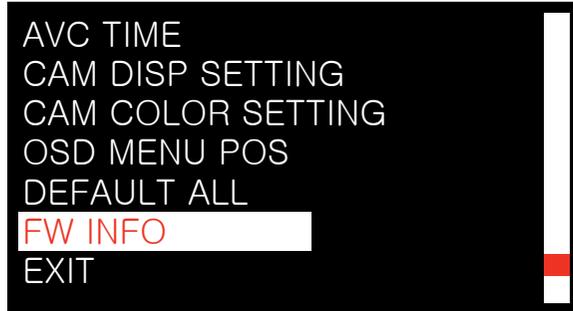

### 3-15. EXIT

INITIALIZE ALL MODES OF REAR OSD MENU SETTING.

