Q5. Q7



## 2008~A6, 2009~A4,S4,A5,S5,A8,Q5,Q7 2010~A7, 2011~A1,A6,Q3 **\*\* COMPATIBLE VEHICLE:**

1.HOW TO SET S/W MODE [ (ON) 0 :  $\downarrow$  off on / (OFF) 1 :  $\uparrow$  off on ]

\_\_\_\_\_

DIP\_SW1: X

DIP\_SW2, 3, 4: VEHICLE SELECTION

DIP SW5: MONITOR RESOLUTION 800 Off / 480 On

DIP SW6: On



### 2. FRONT CAMERA SETTING(SETTING FROM REAR VIEW SCREEN)



VEHICLE : A4, A5, A6, A7, A8 SET ON IN IR MENU WHEN USING FRONT CAMERA SCREEN SWITCH BY PRESSING 'I NAV' BUTTON ON STEERING WHEEL LONG TIME

- VEHICLE: Q3, Q5, Q7 SET ON IN IR MENU WHEN USING FRONT CAMERA SCREEN SWITCH BY PRESSING PDC BUTTON

- FRONT CAMERA SCREEN SHOWS UP AND SOON DISAPPEAR WHEN MOVE BY GEAR[R  $\rightarrow$  P.D.N]ORDER. TIME SETTING CAN BE ADJUSTED IN IR MENU (5.7.9.11SEC.)

### ★ PDC FUNCTION WILL NOT OPERATE ON VEHICLES WITHOUT P BUTTON




1) CONNECT ORIGINAL CABLE TO AUDI INTERFACE BODY [ VIDEO OUT ] SOCKET.



2) CONNECT GIVEN LVDS CABLE TO BOTH AUDI ORIGINAL SOCKET AND AUDI INTERFACE BODY [ VIDEO IN ]SOCKET.

# HI<BLUE>-(ORANGE/BLUE) VEHICLE: A4, A5, A6, A7, A8, Q5 CAN LOW<WHITE>-(ORANGE/BROWN)

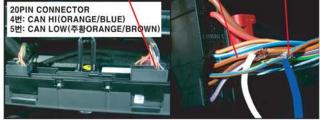

VEHICLE: Q3, Q5, Q7(UNDER THE PASSENGER SEAT DRAWER)



# [ COMPONENTS ]



#### 3. FRONT CAMERA AND REAR CAMERA SETTING



( POWER CABLE PIN SPECITICATION )

PAS PAS CAN CAN (HI) (LOW) REAR CAMERA



PRESS OK BUTTON ON R/C, NO. 1 WILL

APPEAR AT LEFT UPPER PART OF THE SCREEN,

THEN NO.4 WILL APPEAR ON THE SCREEN.

BUTTON FOR THE ENTERANCE SCREEN.

## [ FPC & PDC INSTALLED VIEW]

