



2017 RANGE ROVER VOGUE (TOUCH PRO DUAL VIEW)

1. DUAL VIEW SP91RJ

MAIN UNIT



MAIN UNIT
(DUAL VIEW SP91RJ)



SUB BOARD
(DUAL VIEW DR81)

Car Brand	Model	Year Range	Screen Size
RANGE ROVER	VOGUE	2017~	10.2"

COMPONENTS

1 MAIN UNIT(DUAL VIEW SP91RJ)



2 SUB BOARD(DUAL VIEW DR81)



3 POWER CABLE



4 LVDS CABLE OUT(ID7)



5 HDMI CABLE



6 IR CABLE



7 GROUND EXTENTION CABLE



8 4PIN FILM



※ OPTION ※

9 RGB CABLE



※ OPTION ※

10 AV IN/OUT CABLE



※ OPTION ※

11 AV GENDER CABLE



※ OPTION ※

12 AV GENDER BOARD



※ OPTION ※

13 TOUCH CABLE



※ OPTION ※

14 REMOTE CONTROL



※ OPTION ※

15 USB AUX



※ OPTION ※



※ OPTION ※



※ OPTION ※

■ SPEC OF DUAL VIEW SP91RJ

1. INPUT SPEC

- 1 x Analog RGB Input(GPS system output)
- 1 x Digital RGB Input(GPS system output)
- 1 x LVDS Input
- 1 x CVBS(rear camera)
- 1 x CVBS(front camera or A/V)
- 3 x A/V Input(Option)

2. OUTPUT SPEC

- 1 x CVBS
- 1 x Audio L/R

3. POWER SPEC

Input power : 8VDC ~ 24VDC
Consumption : 5WATT

4. SIZE



SP91RJ 163*103*19mm(Width*Length*Height)

DR81 124*88*19mm(Width*Length*Height)

5. POWER 24pin




■ INSTALLATION-VOGUE(DUAL VIEW SP91RJ)

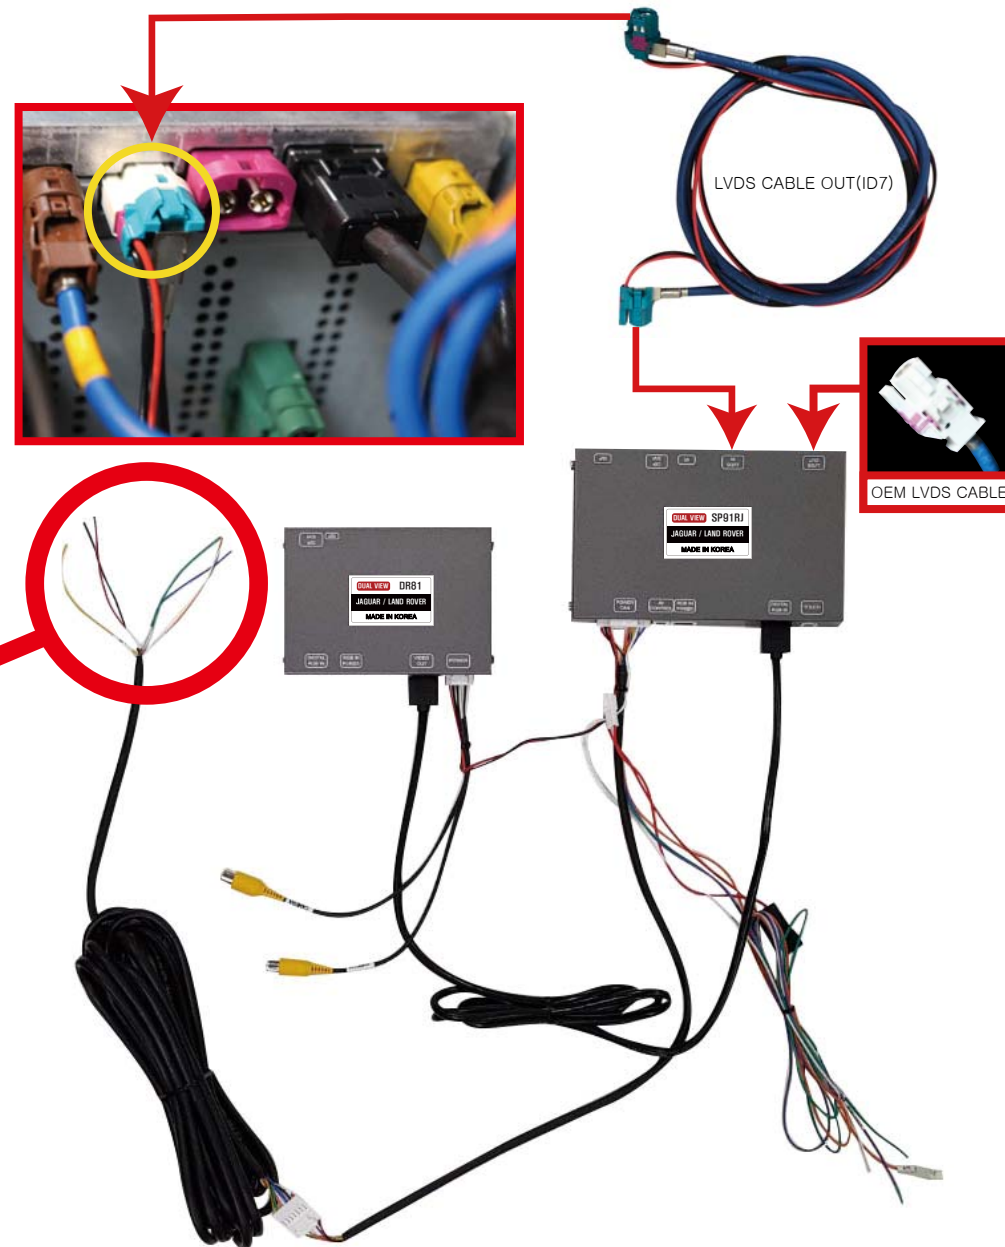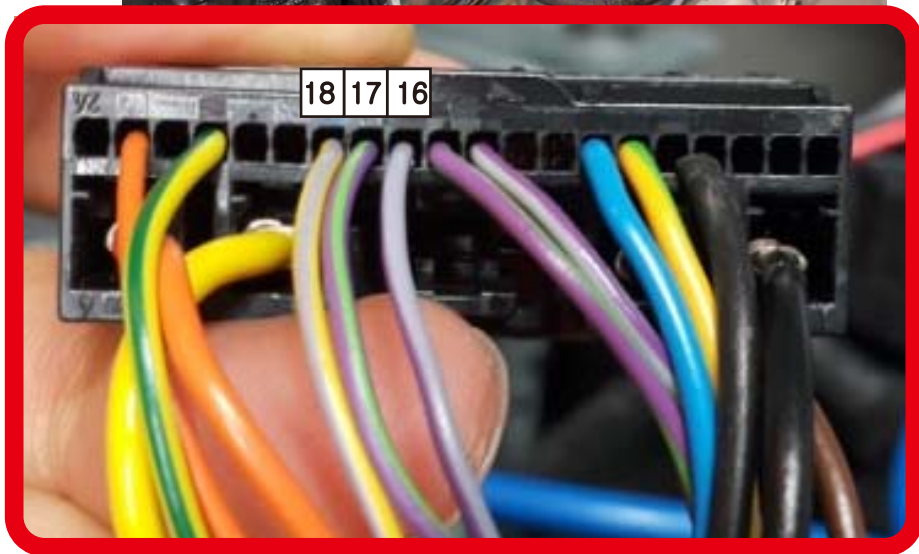

■ DIP S/W(DUAL VIEW SP91RJ)

OFF : ↑ (UP) / ON : ↓ (DOWN)

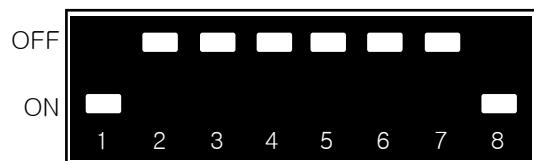


VOGUE

PIN	FUNCTION	MONITOR TYPE SETTING
1	GPS INPUT MUTE	OFF : DO NOT USE GPS ON : USE GPS
2	NC	
3	VIDEO IN MOTION ON/OFF	OFF : TV FREE FUNCTION OFF) ON : TV FREE FUNCTION ON)
4	REAR CAMERA	OFF : OEM CAMERA ON : AFTERMARKET CAMERA
5	NC	
6	NC	
7	NC	
8	NC	

■ DIP S/W(DUAL VIEW DR81)

OFF : ↑ (UP) / ON : ↓ (DOWN)

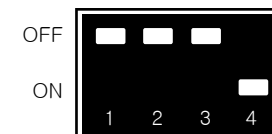

DUAL VIEW DR81

POSITON OF HEAD UNIT

VOGUE

UNDER THE DRIVER SEAT

※ PLEASE SET DIP SWITCH 3 ON BEFORE USING VIDEO IN MOTION ※


■ DIP S/W(DUAL VIEW SP91RJ)

Car Brand	Model	Year Range	Screen Size	Dip Switch Setting
RANGE ROVER	VOGUE	2017~	10.2"	


■ DIP S/W(DUAL VIEW DR81)

Car Brand	Model	Year Range	Screen Size	Dip Switch Setting
RANGE ROVER	VOGUE	2017~	10.2"	

❖ **PLEASE SET DIP SWITCH 3 ON** BEFORE USING VIDEO IN MOTION ❖
VOGUE CAN INSTALLATION(HEADUNIT IS IN UNDER THE DRIVER SEAT)

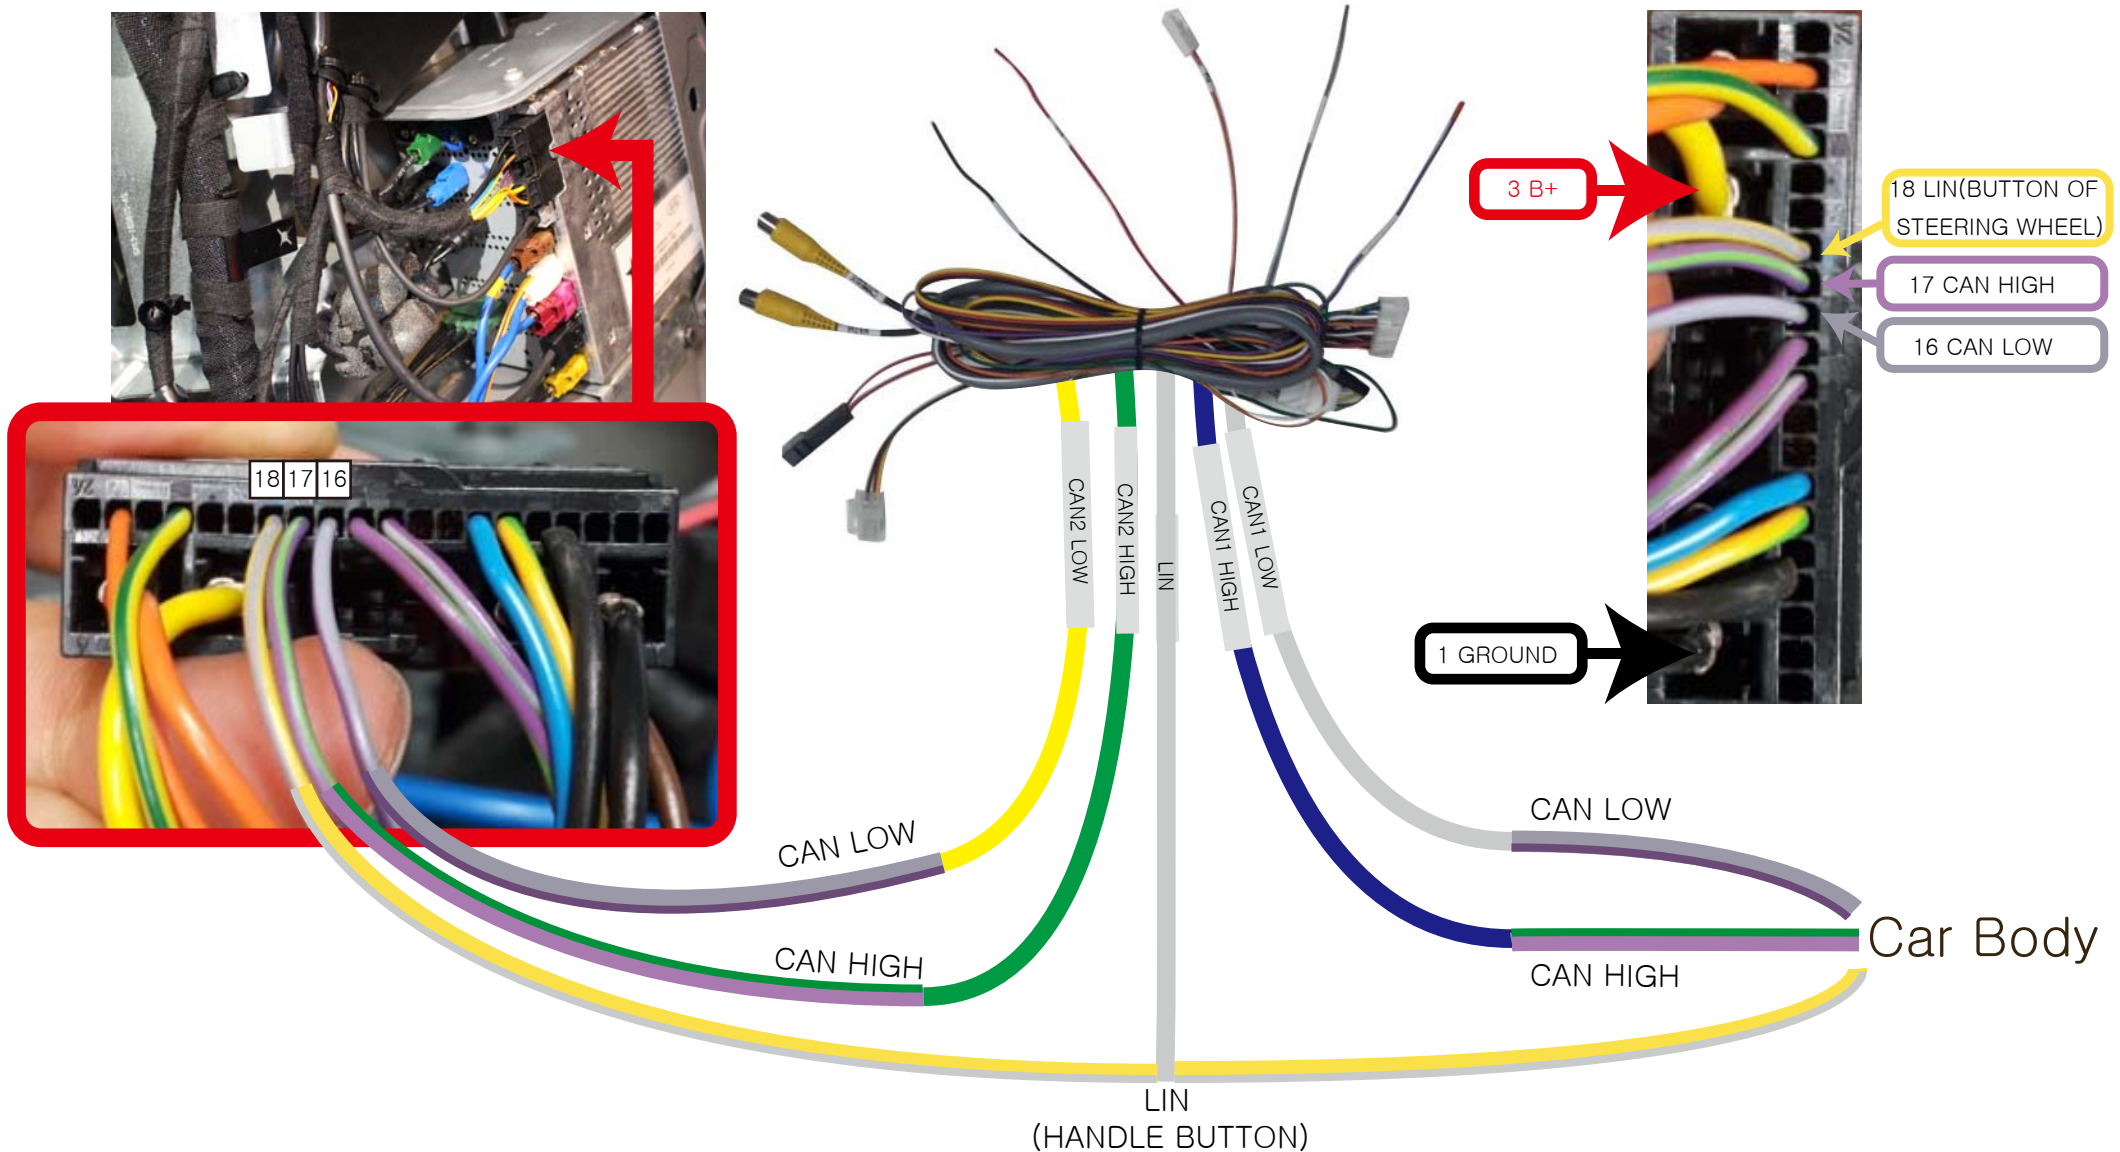

❖ **PLEASE SET DIP SWITCH 3 OFF** IF YOU DO NOT USE VIDEO IN MOTION ❖
VOGUE CAN INSTALLATION(HEADUNIT IS IN UNDER THE DRIVER SEAT)

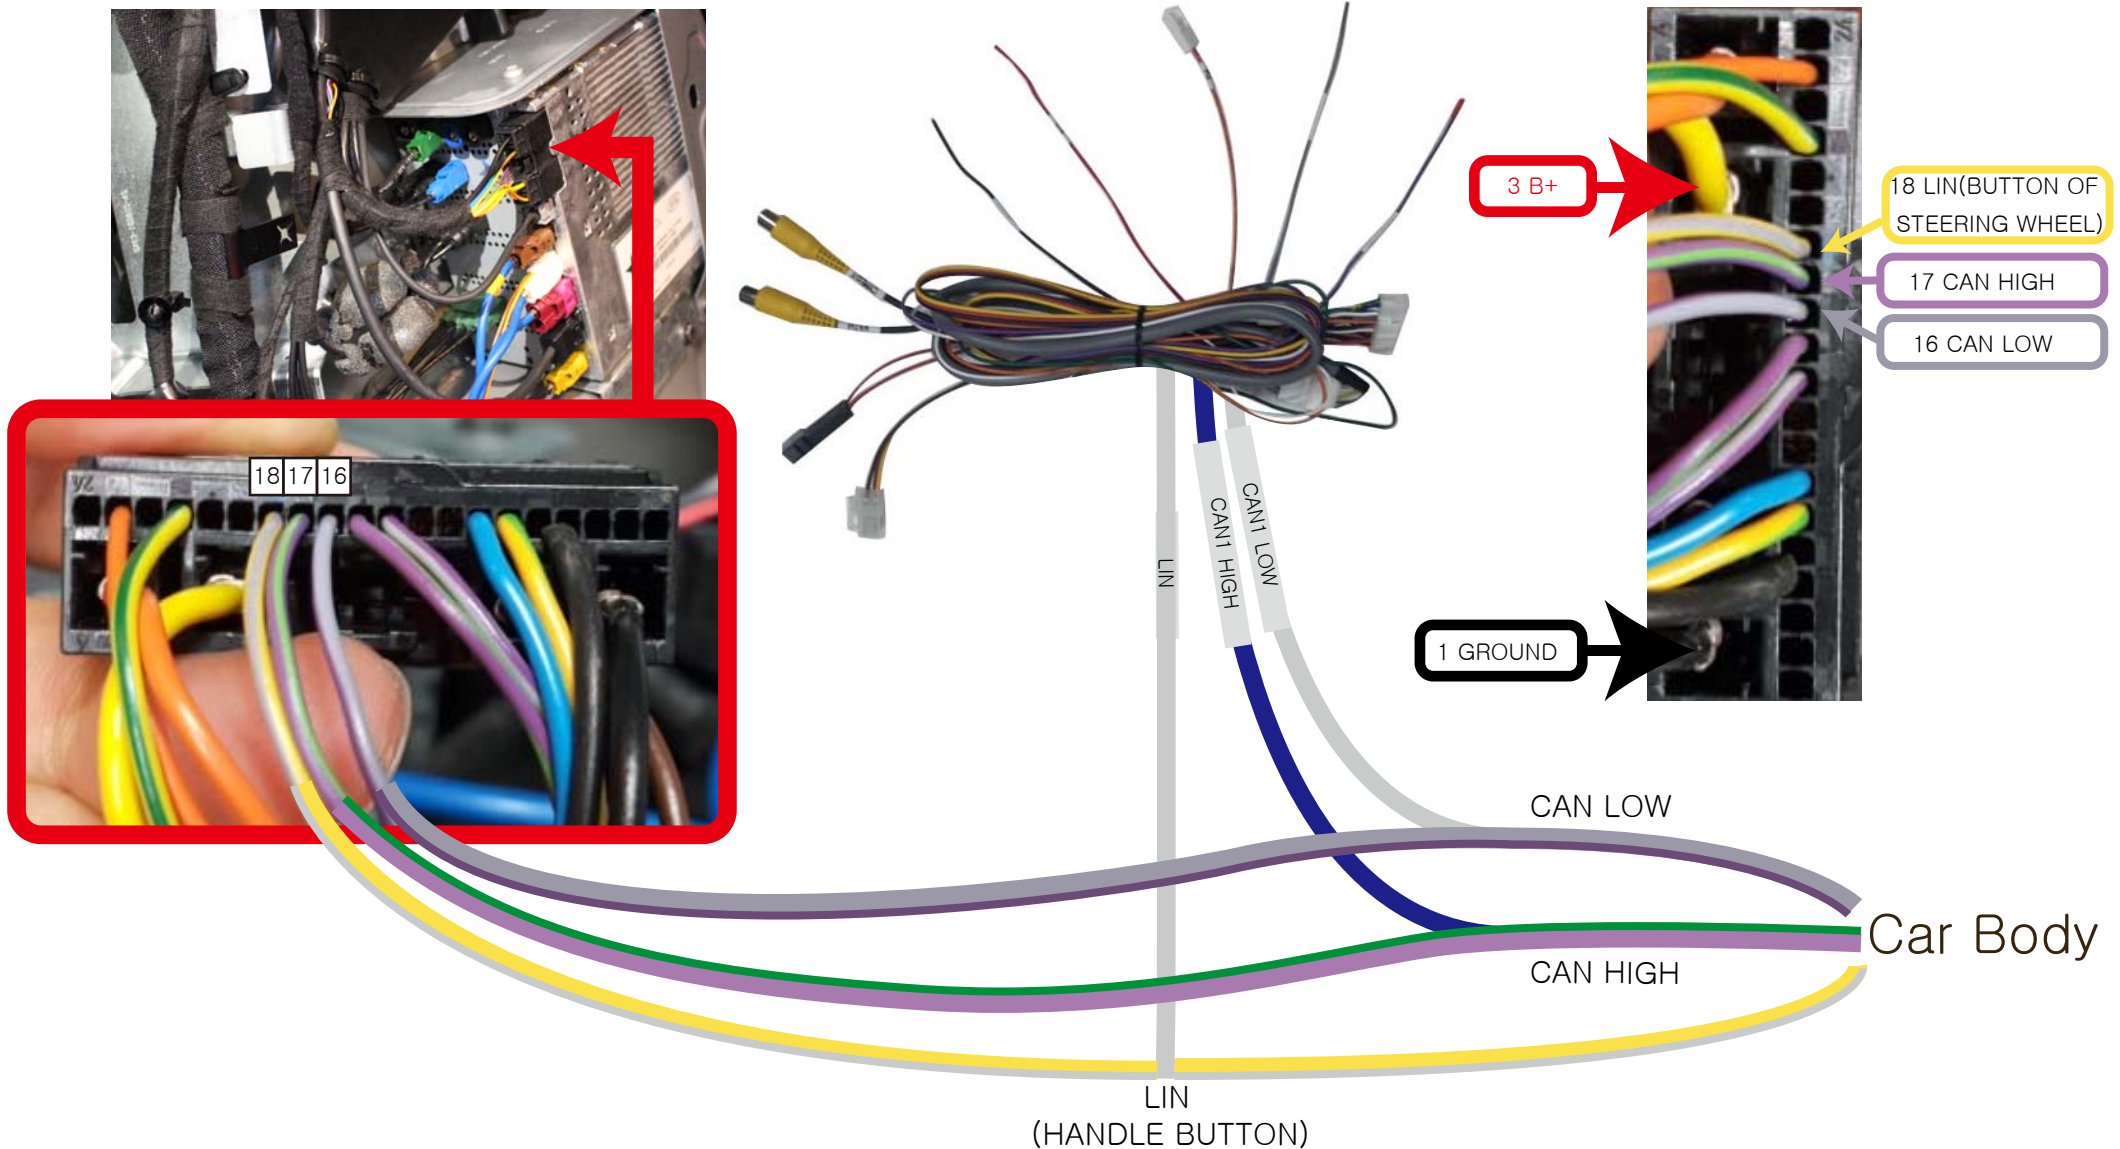


■ HOW TO SWITCH SCREEN – VOGUE



- A** HOLD VOICE BUTTON 2S TO SWITCH MODE
- A** HOLD VOICE BUTTON 3S WHEN IN REVERSE TO SWITCH MODE BETWEEN OEM FACTORY REAR CAMERA AND AFTERMARKET REAR CAMERA(PLEASE SET RTC FUNCTION ON ON OUR OSD MENU)
- C** HOLD VOLUME “-” BUTTON 7S TO SET VIDEO IN MOTION ON/OFF
(PLEASE SET DIP SWITCH 3 ON BEFORE USING THIS FUNCTION)
- D** PRESS PHONE BUTTON TO SWITCH BACK TO OEM SCREEN
(PLEASE HOLD PHONE BUTTON 6S TO SET SWITCH FUNCTION ON/OFF)

OEM → GPS → AV1 → AV2 → AV3 → HDMI
 ↑

HOW TO CONNECT VIDEO AUDIO WHEN YOU ONLY USE ONE AV INPUT

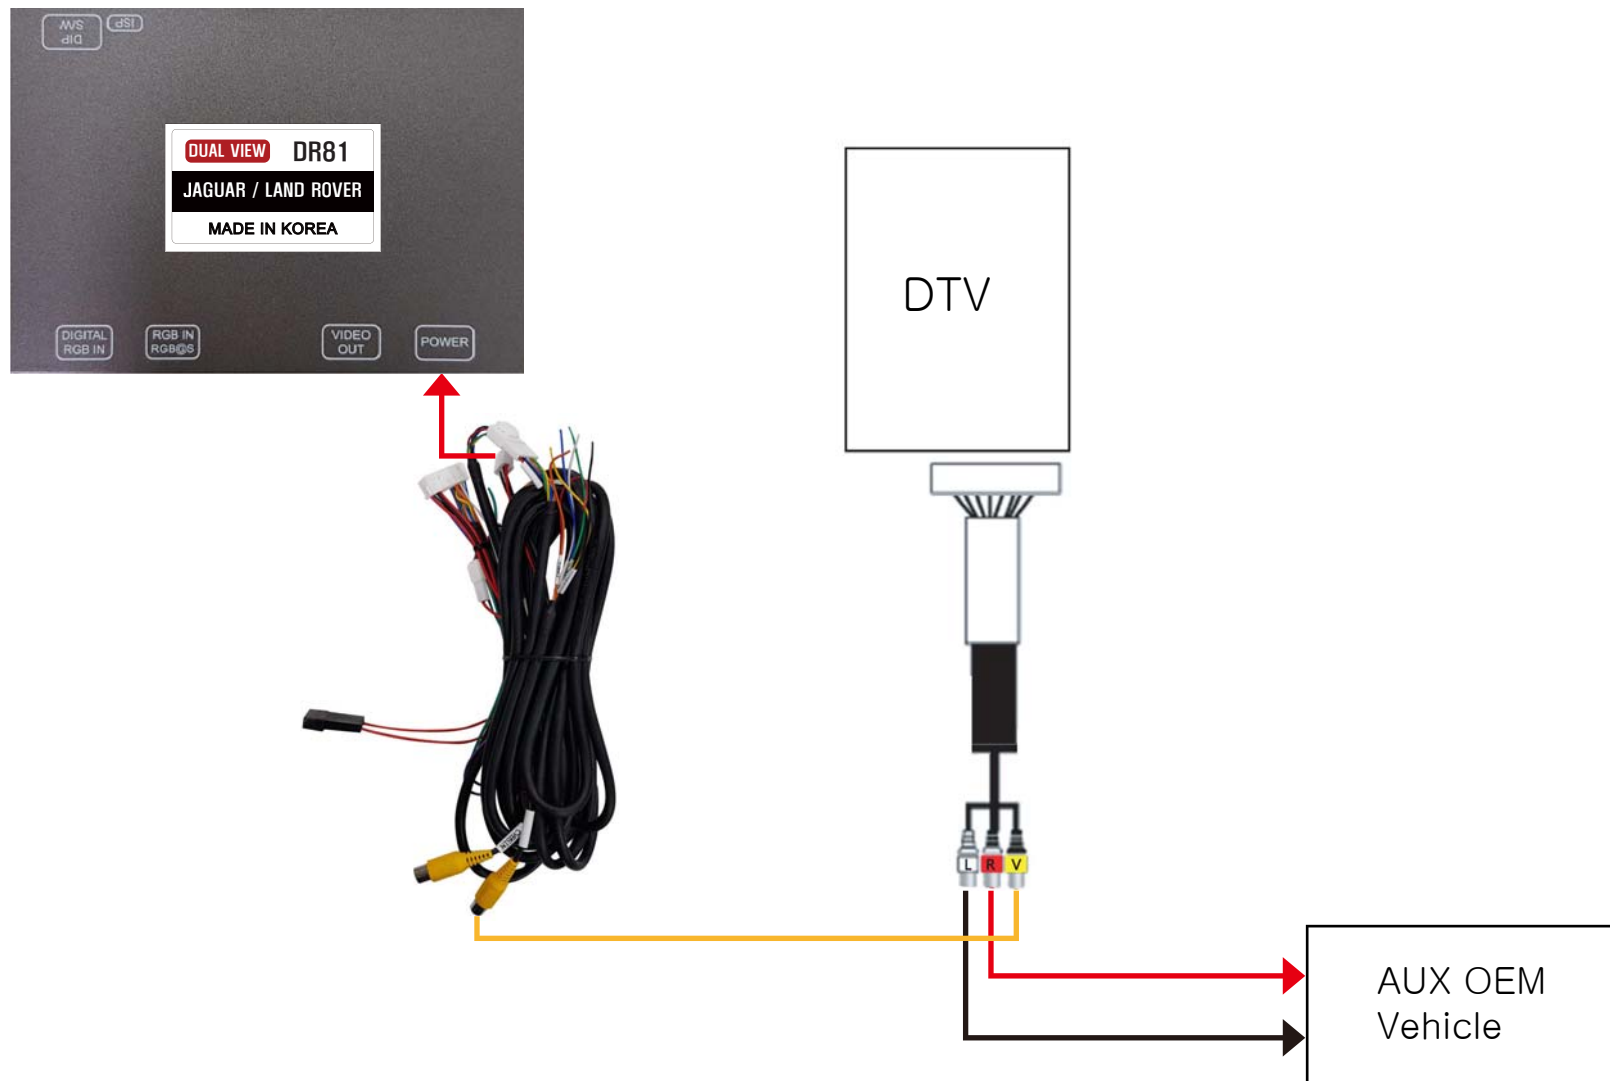

HOW TO CONNECT WHEN YOU USE MORE THAN 2 AV INPUTS

