



2015

Plug and Play

AP24F - BMW DIGITAL VIDEO INTERFACE (FPG&PDC)


1. COMPATIBLE WITH :

2012~1,3,5,6,7 SERIES
2013~MINI

2014~2,4,X1,X3,X4,X5,X6
2015~i3,i8,GT

1) HOW TO SET T S/W MODE [(ON,DOWN) 0 :

(OFF,UP) 1 :



DIP_SW1 : Navigation On/Off	DIP_SW4 : REAR VIEW CAM On/Off
DIP_SW2 : AV1 On/Off	DIP_SW7,8 : VEHICLE SETTING
DIP_SW3 : AV2 On/Off	DIP_SW9 : 2015 X3, X4, X5 ON
AV3 SET ON THE MENU BY R/C	DIP_SW10 : On
USE FRONT CAM-On	

OFF ON 7 8 9 10 1,1,1,0 : 3,5,7 SERIES 10.2" 2014 SCREEN 320d ED 2013, 1,3SERIES	OFF ON 7 8 9 10 0,0,1,0 : MINI 2014 8.8" SCREEN
OFF ON 7 8 9 10 1,0,1,0 : 1 SERIES 6.5" SCREEN	OFF ON 7 8 9 10 0,1,1,0 : 1,3 SERIES ~2013 8.8" SCREEN
OFF ON 7 8 9 10 1,1,0,0 : X SERIES 2015 8.8", 10.2" SCREEN 320D 8.8" (2016)	OFF ON 7 8 9 10 1,0,0,0 : MINI 2015 6.5" SCREEN
OFF ON 7 8 9 10 0,1,0,0 : MINI 2016 8.8" SCREEN	

2) HOW TO SWITCH SCREEN

- 1 PRESS MENU BUTTON FOR 2SEC
- 2 PRESS MAP BUTTON FOR SHORT



2013, 2014, 2015
NEW 3 SERIES
NEW 5 SERIES
NEW 7 SERIES
NEW 1 SERIES(8.8")



2013, 2014, 2015
NEW 1 SERIES(6.5")
MINI 6.5"

*MODE CHANGE FOR AV [PRESS Δ BUTTON (12 O' CLOCK DIRECTION)



[ORIGINAL]



[AV]



[AV FULL SCREEN]

3) HOW TO SWITCH THE REAR VIEW CAMERA (PLEASED REVERSE GEAR FOR SETTING)

REAR VIEW SCREEN SIZE, PIP POSITION



PRESS Δ FOR LONG
2013, 2014, 2015
NEW 3 SERIES
NEW 5 SERIES
NEW 7 SERIES
NEW 1 SERIES(8.8")



SELECT THE SEDAN OR HATCHBACK ON FPG TYPE
FPG TYPE SEDAN



PRESS Δ FOR LONG
2013, 2014, 2015
NEW 1 SERIES(6.5")
MINI 6.5"



FPG TYPE HATCH BACK

FPG TYPE SETTING

4) ORIGINAL BUTTON FUNCTIONS



- 1 PRESS MENU BUTTON FOR 2SEC TO CHANGE MODE
- 2 PRESS MAP BUTTON FOR SHORT TO CHANGE MODE
- 3
- 4
- 5
- 6
- 7
- 8 BACK BUTTON : OK

FOR KOREAN DIGITAL NAVI ONLY
FOR KOREAN NAVI CONTROL

* GOING TO AV INPUT DIRECTLY




* HOW TO ENTER TO OSD MENU WITHOUT R/C

- 1 [BACK] HOLD FOR 7S LONG




SELECT-> 2 [BACK] PRESS FOR SHORT
MOVE CURSOR -> 3 KNOB REVOLVING OR
PRESS 4 DIRECTIONS
LAST MENU -> 4 [MENU] PRESS FOR SHORT
EXIT -> EXIT OF OSD MENU


[COMPONENTS]

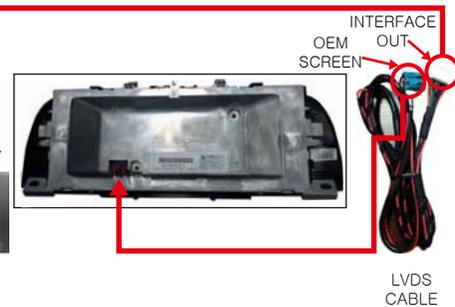

Plug and Play

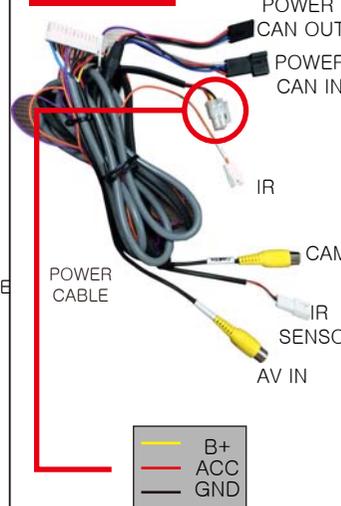

B+ ACC GND

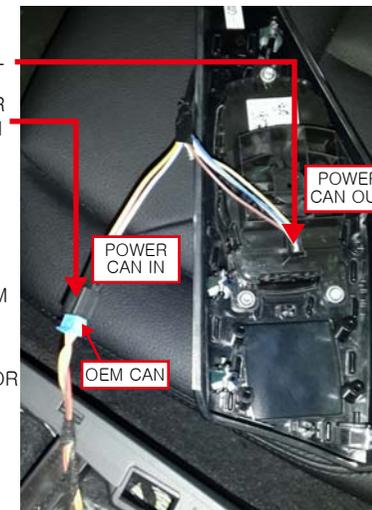

5) HOW TO ENTER GPS SETTING MODE



PRESS OK BUTTON 4 TIMES THEN YOU WILL SEE THE NUMBER 1 IN THE LEFT TOP OF THE SCREEN FROM 1~4. WHEN IT'S NUMBER 4, PRESS THE OK BUTTON TO ENTER THE SETTING MODE.